



Philips  
Bagless vacuum cleaner

**1400 W**  
PowerCyclone 3  
3 accessories



**FC8085/01**

## Small on the outside, powerful on the inside

### Compact vacuum cleaner

The compact Philips vacuum cleaner for powerful cleaning. Easy to store, carry and maneuver thanks to its light weight and small size. Easy to empty dust container helps avoiding dust clouds. Experience the freedom to move.

#### Compact design

- Small sized appliance for compact storage

#### Compact design

- Light weight and compact, giving you the freedom to move

#### Easy to clean

- Advanced dust container design for hygienic emptying
- Extra handle for easy carrying
- Easy to clean washable filter

#### Extra reach for perfect cleaning results

- Crevice tool help you to clean your furniture.

#### Extra reach for perfect cleaning results

- Reach all corners thanks to the extra long ergonomic grip

# PHILIPS

# Highlights

## PowerCyclone technology



The PowerCyclone technology delivers best cleaning results in one go through 3 highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air upwards in the cyclonic chamber. 3) At the top of the cyclone, the exit blades effectively cut out the dust from the air.

## Crevice tool

Crevice tool help you to clean your furniture.

## Easy to clean filter



Washable foam filter for life-long performance.

## Extra long ergonomic grip



This ergonomically shaped grip is convenient in use. Its extra long design gives you farther reach, so you can easily clean hard to reach places.

## 1400 W motor



This vacuum cleaner has an efficient 1400 Watt motor generating high suction power for good cleaning results.

## Easy Carrying




Extra handle for easy carrying.

## Easy to empty dust container



The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

## Light weight and compact

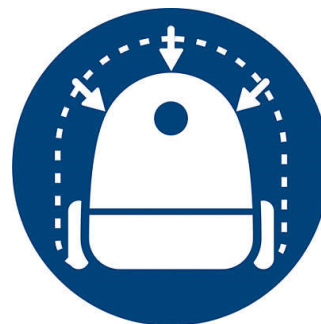

You can easily carry and roll the vacuum cleaner around when cleaning thanks to its light weight and small size.

## Small sized appliance

Small sized appliance for compact storage.

# Specifications

## Nozzles and accessories

- Standard nozzle: Multi-purpose nozzle
- Accessories included: Crevice tool
- Extra accessories: Long reach tool

## Design

- Color: Citrus orange

## Weight and dimensions

- Weight of product: 3.1 kg

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Performance

- Input power (IEC): 1200 W

- Input power (max): 1400 W
- Suction power (max): 200 W

## Filtration

- Dust capacity: 1.1 L
- Exhaust filter: Foam filter
- Motor filter: Microfilter

## Usability

- Tube coupling: Conical
- Action radius: 7 m
- Carrying handle: Top and front
- Cord length: 4.5 m
- Tube type: Plastic 2-P tube
- Dust full indicator
- Wheel type: Plastic



Issue date 2023-08-21

Version: 1.1.1

EAN: 87 10103 73390 4

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)