

Philips PowerPro
Bagless vacuum cleaner

2000W

PowerCyclone 5
HEPA 10 washable filter

FC8760/61



Effortless cleaning, powerful performance

With PowerCyclone technology

The new Philips PowerPro effortlessly cleans your floors thanks to the PowerCyclone 5 technology. The advanced dust container is easy to empty and helps avoiding dust clouds.

Easy to clean

- Advanced dust container design for hygienic emptying
- Washable foam filter for life-long performance

Powerful cleaning performance

- 2000 Watt motor for high performance
- PowerCyclone 5 technology separates dust and air in one go

Extra long reach for convenient cleaning

- More cleaning with less effort

PHILIPS

Highlights

PowerCyclone 5 Technology



PowerCyclone 5 technology maximizes airflow and performance by separating dirt from air in one go. It delivers remarkable cleaning results through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the air inlet design. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air. 3) The optimized exit blades separate dirt from the cyclone and into the dust bucket.

2000 Watt motor



The 2000 Watt motor generates max. 360 Watt suction power for high performance.

Easy to empty dust container




The dust container is carefully designed to dispose collected dirt without creating a dust cloud. It is one-hand operated and thanks to its unique shape and smooth surface, you can easily control the emptying of the dust container.

Life-long washable foam filter



The foam filter can be easily washed under the tap for life-long performance.

10 m action radius

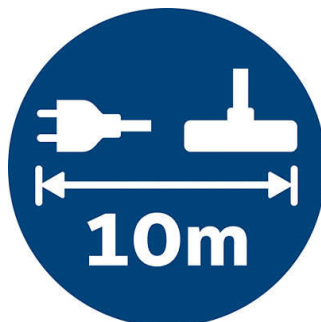

10 m action radius for cleaning with less effort.

Specifications

Performance

- Input power (max): 2000 W
- Input power (IEC): 1800 W
- Noise level (Lc IEC): 80 dB
- Suction power (max): 360 W
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s

Design

- Color: Juicy red

Usability

- Action radius: 10 m
- Cord length: 7 m
- Tube coupling: Easy release
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: Wheeled all-purpose nozzle
- Accessory storage: On tubeclip

Weight and dimensions

- Dimensions of product (LxWxH): 440 x 300 x 290 mm
- Weight of product: 5.5 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 2 L
- Exhaust filter: EPA 10 filter
- Motor filter: Lifetime washable filter
- HEPA Air Seal

