

Philips EasyClean
Bagless vacuum cleaner

1800W

FC8734/71



Take the effort out of cleaning

Extra long cord, no bag required

The Philips EasyClean bagless vacuum cleaner is designed for those people who want a thorough cleaning result at minimal effort.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Easy dust disposal

- Dust bucket can easily be removed and emptied

Easily removes dirt and dust

- 1800 Watt motor generating max. 300 Watt suction power

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action


Higher cleaning efficiency

- Improved cyclone for longer lasting suction power

PHILIPS


Highlights

1800 Watt motor

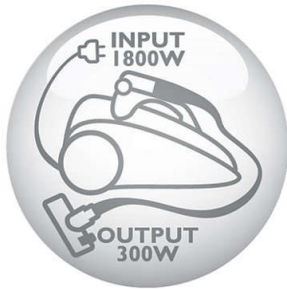

Philips vacuum cleaner with 1800 Watt motor generating max. 300 Watt suction power to ensure a perfect cleaning result.

Super Clean Air HEPA 12 filter

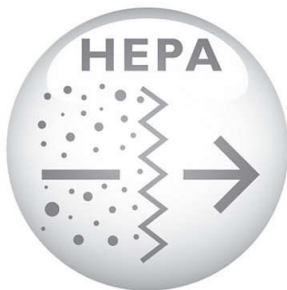

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

Easy to empty dust bucket



The bagless vacuum cleaner has a transparent dust bucket that shows the dust removed from your floor

and makes it easy to find back accidentally sucked up valuables.

Improved cyclone



This EasyClean has an improved cyclone that filters even more dust out the the air.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (max): 1800 W
- Input power (IEC): 1600 W
- Noise level (Lc IEC): 79 dB
- Suction power (max): 300 W
- Vacuum (max): 29 kPa
- Airflow (max): 36 l/s

Design

- Color: Raven black

Usability

- Tube coupling: Button
- Action radius: 10 m
- Cord length: 7 m
- Carrying handle: Top and front
- Power control: Electronic on appliance
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip

Weight and dimensions

- Dimensions of product (LxWxH): 510 x 270 x 320 mm
- Weight of product: 6 kg

Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter
- Filter type: Gore-Tex HEPA 10

