



Philips PowerPro Aqua
Cordless rechargeable
vacuum cleaner

3-in-1

Vacuum, mop and handheld
25.2 V
Mini turbo brush

FC6409/01

Vacuums and mops in one stroke

Always at hand to quickly clean daily messes

The new cordless (25.2V) PowerPro Aqua is a 3in1 powerful tool to deal with daily messes. A bagless vacuum cleaner includes a handheld for chair or corners, a mini turbo brush for soft surfaces and a mopping system to clean damp dirt.

Always at hand and convenient for daily usage

- Bagless: one-step empty dust bucket, simple and hygienic
- Cordless cleaning: freedom to clean everywhere
- High maneuverability and light weight for easy handling
- Instant click on/off mopping system for wet cleaning
- Powerful 25.2V Lithium Ion battery for up to 1 hour cleaning
- Microfiber pads
- Mini turbo brush for cleaning soft surfaces

Cleans everyday messes with vacuum and mop

- TriActive Turbo nozzle for powerful performance on carpets
- Handheld for vacuuming furniture and hard to reach corners
- New mopping system with optimal wetness on hard floors
- PowerCyclone technology for high vacuum cleaning performance
- 3 layer filter technology captures micro particles

PHILIPS

Highlights

3 layer filter




3 layer washable filter can capture >90% of allergens like pollen, pet hair and dust, for a clean air.

Bagless



With the new bagless PowerPro Aqua vacuum cleaner, you can dispose dust from the dust bucket without touching the dirt.

Cordless operation

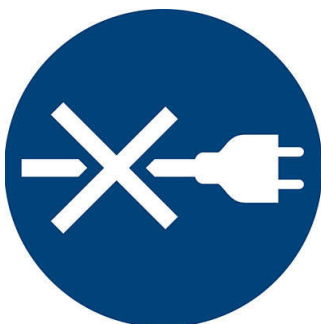

The rechargeable batteries for cordless operation gives you freedom to clean everywhere. Now the cable is not a barrier anymore and you can easily clean in different rooms with no hassle.

Handheld included



Handheld for vacuuming furniture and hard to reach corners

Light and maneuverable



High maneuverability and light weight are ensured with the new PowerPro Aqua vacuum cleaner for easy handling.

Click on/off mopping system



With the magnet on both sides, the mopping system is easily clicked on and off to the nozzle.

Microfiber pads

The new PowerPro Aqua includes two types of microfiber pads to mop different surfaces: 1) One universal microfiber pad for regular

mopping, which is ideal for such surfaces like tiles. 2) One soft microfiber pad for cleaning more delicate surfaces, such as wooden surfaces. The microfiber pads can be washed by hand*

Innovative mopping system



The unique mopping system controls the water release to maintain optimal wetness for all hard floors throughout the cleaning. The microfiber pads* can be washed by hand or in washing machine.

PowerCyclone technology



PowerCyclone fan rotates with speeds up to 300 km/h to create high G-force in the PowerCyclone which effectively separates dust from air, hence continuously high cleaning performance.

Specifications

Nozzles and accessories

- Standard nozzle: TriActive Turbo Nozzle
- Accessories included: 2-in-1 brush, AC power adaptor, Crevice tool, 1 pad holder, 2 microfiber pads

Design

- Color: Petrol blue metallic
- Design features: On-off

Weight and dimensions

- Weight of product: 4.7 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Performance

- Battery type: Li-Ion
- Sound power level: 83 dB
- Battery voltage: 25.2 V
- Charging time: 5 hour(s)
- Runtime: up to 60 minute(s)
- Mopping element: Unique mopping system
- Surface coverage per tank: 50 m²

Filtration

- Dust capacity: 0.6 L
- Filter system: 3 layer German technology
- Exhaust filter: Foam filter

Usability

- Clean water tank capacity (max): 0.2 L
- Detergents that can be used: clear detergent or just water



Issue date 2023-07-15

Version: 1.1.2

EAN: 87 10103 78290 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Recommended to replace every 3-6 months depending on usage frequency. 2 microfiber pads are included in pack, you can check www.philips.com to find where to buy the microfiber pads. We cannot guarantee optimal cleaning results when microfiber pads from other brands are used.