



Philips Performer  
Compact  
Vacuum cleaner with bag

**2000 W**  
Super Clean Air filter  
3L



**FC8385/71**

## Full performance. High suction power.

Compact yet powerful with AirflowMax technology

The new Philips Performer Compact vacuum cleaner delivers top cleaning performance with minimum effort. AirflowMax technology keeps the suction power stronger for longer. The ExtraClean nozzle removes dust efficiently on all floors.

### Clean air filter system

- Super Clean Air filter captures >99% of particles
- S-bag Classic Long Performance lasts up to 50% longer\*

### Remarkable cleaning results

- 1800 W motor for strong suction power
- Revolutionary AirflowMax technology for strong suction power
- New ExtraClean nozzle for thorough cleaning on all floors

### Effortless cleaning

- Long reach tool for difficult to access areas
- ActiveLock couplings to easily adjust to each cleaning task
- Compact and light for effortless cleaning and easy storage
- On-board accessories for ultimate convenience

# PHILIPS

# Highlights

## 1800 W motor



1800 W motor generates strong suction power for excellent cleaning results.

## AirflowMax technology




The unique AirflowMax technology keeps the suction power stronger for longer\* to use the bag to the very end. The technology is built around the optimization of three key elements: 1) Unique ribs profile inside the dust chamber to maximize airflow around the dustbag and enable the use of the entire bag surface. 2) Specially designed dust chamber capacity that allows the dustbag to fully unfold uniformly. 3) High quality, non-clogging fibre structures in the dustbag absorb dust without blocking the pores, thus avoiding a reduction in suction power.

## ExtraClean nozzle



The new ExtraClean nozzle delivers a thorough cleaning on all types of floors. The nozzle is designed with a large front opening to pick up big crumbs, while at the same time it seals closely to the floor to ensure a good pick-up of the fine dust.

## Long reach tool

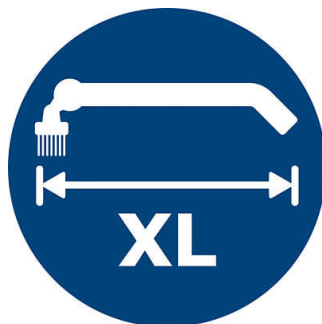

The Long reach tool is a clever accessory which helps you clean difficult areas like the top of the furniture or high shelves. The angle of the brush is adjustable, so you can have the exact instrument for your needs.


## On-board accessories



The vacuum cleaner is designed with integrated accessories, so that you do not need to carry extra pieces around while you


clean. The crevice tool is located on the canister, always ready to use.

## ActiveLock couplings

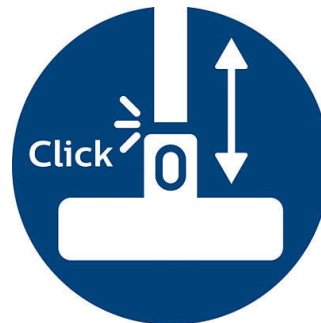


The ActiveLock couplings allow you to easily connect and disconnect the different nozzles and accessories from the telescopic tube while cleaning.

## Compact and lightweight

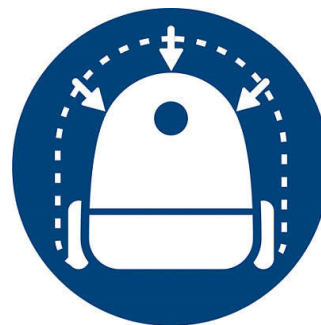

Thanks to its small size, the appliance can be easily stored, saving valuable space. The light weight makes it easy to carry around.

## Super Clean Air filter

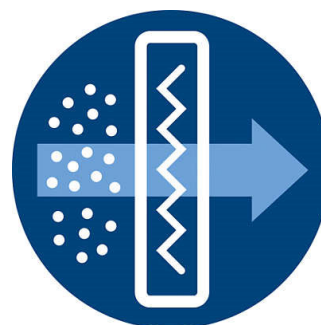

The Super Clean Air filter captures >99% of harmful particles such as pollen, dust mites or pet hair. So you can enjoy clean healthy air in your home!

# Specifications

## Performance

- Input power (IEC): 1600 W
- Sound power level: 83 dB
- Vacuum (max): 23,5 kPa
- Input power (max): 1800 W
- Suction power (max): 350 W

## Design

- Color: Sporty red

## Usability

- Action radius: 9 m
- Tube coupling: ActiveLock
- Carrying handle: Front
- Cord length: 6 m
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber

## Nozzles and accessories

- Accessories included: Crevice tool, Integrated

brush

- Standard nozzle: ExtraClean nozzle
- Extra accessories: Long reach tool

## Weight and dimensions

- Dimensions of product (LxWxH): 400 x 282 x 251 mm
- Weight of product: 4.5 kg

## Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

## Filtration

- Dust bag type: s-bag Classic Long Performance
- Dust capacity: 3 L
- Exhaust filter: Super Clean Air filter
- Motor filter: 1 layer foam filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Compared to s-bag Classic paper