




Philips PowerPro Ultimate
Bagless vacuum cleaner

99.9% dust pick-up
750W
Allergy H13 filter

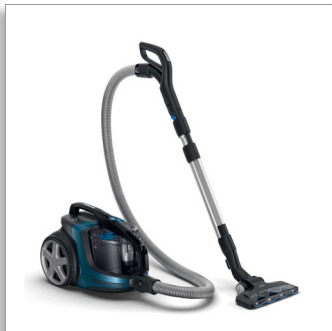

FC9932/69

Full performance with PowerCyclone 8

Deep clean with TriActive LED

Philips PowerPro Ultimate takes our powerful cyclonic system to the next level - for ultimate easy cleaning from hard floors to deep carpet. Floor-level lights reveal hidden dust and when you need a break, it shuts off and waits for you.

Superior performance

- Allergy filter captures 99.9% of fine dust
- Auto on-off cuts noise and saves energy
- PowerCyclone 8 technology separates dust from air
- CarpetClean nozzle for deep cleaning tough carpets
- TriActive LED nozzle reveals and cleans hidden dust
- CarpetClean for efficient cleaning on soft floors
- PowerCyclone 8 technology separates dust from air
- Allergy H13 filter system captures >99.9% of fine dust

Mess free dust disposal

- Fully operated and easily emptied with one hand

PHILIPS

Highlights

Powerful cyclonic action



Exclusive PowerCyclone 8 technology accelerates air in the cyclonic chamber to separate out dust. Powerful swirling action maximizes airflow and performance for remarkable cleaning results.

TriActive LED lights the way



Our exclusive TriActive LED reveals hidden dust with floor-light technology. Unique rubber flaps keep the brushless nozzle free of tangled hair.

Deep cleaning

Use the CarpetClean nozzle to deep clean the toughest carpets and do away with dust on soft floors.

Auto on-off cuts noise



Intelligent technology automatically stops the vacuum cleaner if you pause to move furniture or answer the phone, cutting off noise and energy consumption.

Allergy Filter




Our clean-air filter system captures 99.9% of fine dust – including pollen, pet hair and dust mites – for allergy sufferers and anyone demanding a higher level of hygiene.

Easy dust disposal



Designed with an ergonomic spout shape, the dust container is easily emptied without spilling.

Allergy H13 filter system

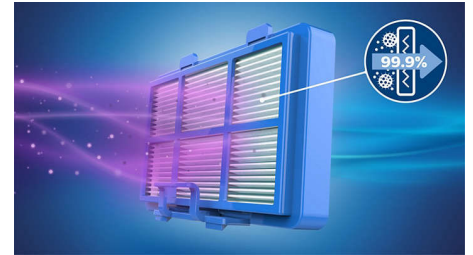

The fully-sealed filtration system captures >99.9% of fine dust particles - including pollen, pet hair and dust mites - for allergy sufferers and anyone demanding a higher level of hygiene. Filtration level is equivalent to HEPA 13*.

CarpetClean



The CarpetClean is ideal for deep clean, this nozzle is suitable for the toughest carpet clean and delivers high dust pick up on soft floors.

Powerful cyclonic action



Exclusive PowerCyclone 8 technology quickly accelerates air in the cyclonic chamber to separate out dust. The powerful swirling action maximizes airflow and performance for remarkable cleaning results.

Specifications

Performance

- Input power (IEC): 650 W
- Airflow (max): 27 l/s
- Sound power level: 75 dB
- Vacuum (max): 17 kPa

Design

- Color: Denim blue

Usability

- Tube coupling: SmartLock
- Action radius: 11 m
- Carrying handle: Top and front
- Cord length: 8 m
- Power control: Electronic on appliance
- Tube type: Metal 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive LED nozzle

- Accessories included: Crevice tool, 2-in-1 brush/small nozzle
- Additional nozzle: Carpet Clean nozzle

Weight and dimensions

- Dimensions of product (LxWxH): 506 x 310 x 317 mm
- Dimensions of packaging (LxWxH): 595 x 400 x 352 mm
- Weight of product: 6.2 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 2.2 L
- Exhaust filter: Allergy H13 filter
- Motor filter: Lifetime washable filter
- Filtration level: HEPA13 level**



Issue date 2023-04-14

Version: 1.1.3

EAN: 87 10103 88308 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Dust pick up results compared to the top 10 selling 2400 Watt vacuum cleaners in Europe, tested by external test institute, according to EN 60312-1/2013 on carpet, Febr/April 2014
* word Allergy H13 is commercial name and not allowed to be translated to local language
* Filtration levels are tested according EN60312-1-2017 and are equivalent to HEPA 13.
* 99.9% dust pick-up on hard floors with crevices (IEC62885-2).