

Philips Marathon
Bagless vacuum cleaner

2000W
Animal

FC9229/01



Performs stronger for longer

Self-cleaning filter, no bag required

Marathon offers you very high cleaning performance thanks to its automatic filter cleaning system.

Outstanding results on carpets and furniture

- Turbo Brush nozzle removes 25% more hairs and dust

Suction power control at your fingertips

- Handy remote control to change the suction power

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Traps dust and allergens inside

- Ultra Clean Air HEPA 13 filter, 99.95% filtration


Optimal cleaning power every time

- AutoClean filter optimizes suction power

PHILIPS


Highlights

AutoClean filter

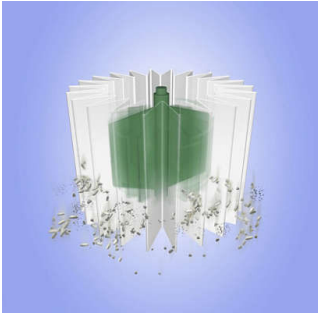

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

2000 Watt motor

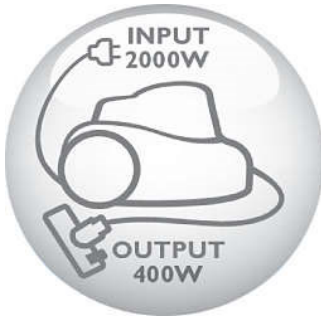

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

Ultra Clean Air HEPA 13, 99.95% filtration



Ultra Clean Air HEPA 13 filter, 99.95% filtration

Handy remote control



Handy remote control to change the suction power with your fingertips and without bending.

Turbo Brush nozzle



The Turbo Brush nozzle allows deep cleaning of carpets and quick hair and fluff removal from carpets. The rotating brush actively removes small dust particles and hairs, resulting in a 25% better cleaning performance on carpets. The wheels of the nozzle prevent damage in case of use on hard-floors.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 400 W
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s

Design

- Color: Emperor red

Usability

- Action radius: 12 m
- Tube coupling: Button
- Special features: Remote control (Infra-red)
- Cord length: 9 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Turbo brush

Weight and dimensions

- Weight of product: 7.5 kg

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com