

Philips Marathon
Bagless vacuum cleaner

2000W
Parquet

FC9228/01



Performs stronger for longer

Self-cleaning filter, no bag required

Marathon offers you very high cleaning performance thanks to its automatic filter cleaning system.

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Suction power control at your fingertips

- Handy remote control to change the suction power

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Traps dust and allergens inside

- Ultra Clean Air HEPA 13 filter, 99.95% filtration


Optimal cleaning power every time

- AutoClean filter optimizes suction power

PHILIPS


Highlights

AutoClean filter

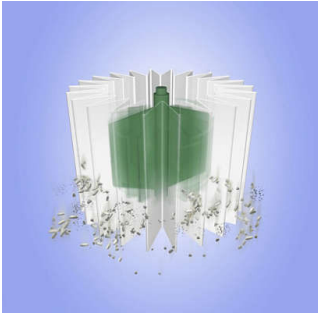

After every cleaning job, a simple push of a button will activate a rattle that thoroughly shakes the dust from the filter pleats into the dust bucket. Now the airflow is no longer blocked by the dust in the filter and suction power is almost like new.

2000 Watt motor

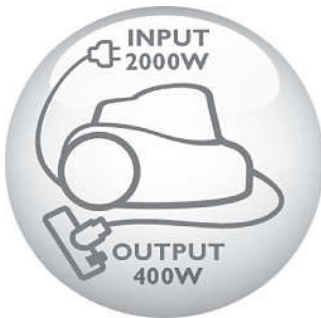

This vacuum cleaner has a 2000 Watt motor generating max. 400 Watt suction power for the ultimate cleaning perfection.

Ultra Clean Air HEPA 13, 99.95% filtration



Ultra Clean Air HEPA 13 filter, 99.95% filtration

Super Parquet nozzle



The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

Handy remote control



Handy remote control to change the suction power with your fingertips and without bending.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (IEC): 1800 W
- Input power (max): 2000 W
- Noise level (Lc IEC): 78 dB
- Suction power (max): 400 W
- Vacuum (max): 33 kPa
- Airflow (max): 37 l/s

Design

- Color: Emperor red

Usability

- Cord length: 9 m
- Action radius: 12 m
- Special features: Remote control (Infra-red)
- Tube coupling: Button
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

Weight and dimensions

- Weight of product: 7.5 kg

Filtration

- Dust capacity: 1.5 L
- Exhaust filter: Ultra Clean Air HEPA 13 filter



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com