

Philips EasyClean
Bagless vacuum cleaner

1800W
Parquet

FC8720/01



Take the effort out of cleaning

No bag required

The Philips bagless EasyClean range is designed for those people who want a thorough cleaning result at minimal effort.

Clean air in your home

- Super Clean Air HEPA 12 filter, 99.5% filtration

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Easy dust disposal

- Dust bucket can easily be removed and emptied

Easily removes dirt and dust

- 1800 Watt motor generating max. 300 Watt suction power


Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

PHILIPS


Highlights

1800 Watt motor

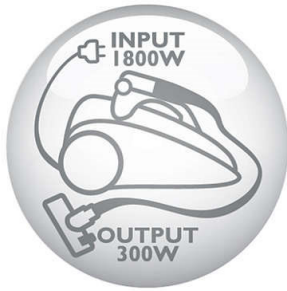

Philips vacuum cleaner with 1800 Watt motor generating max. 300 Watt suction power to ensure a perfect cleaning result.

Super Clean Air HEPA 12 filter

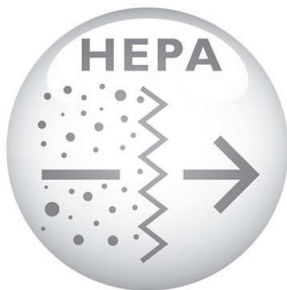

This Super Clean Air HEPA 12 filter catches at least 99.5% of all harmful microscopic vermin that causes respiratory allergies.

Easy to empty dust bucket



The bagless vacuum cleaner has a transparent dust bucket that shows the dust removed from your floor

and makes it easy to find back accidentally sucked up valuables.

Super Parquet nozzle



The Super Parquet nozzle allows you really clean hard floors of all kinds in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve maximum result without requiring any detergents or brushes.

TriActive nozzle



The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.

Specifications

Performance

- Input power (IEC): 1600 W
- Input power (max): 1800 W
- Noise level (Lc IEC): 79 dB
- Suction power (max): 300 W
- Vacuum (max): 26.5 kPa
- Airflow (max): 34 l/s

Design

- Color: Raven black

Usability

- Cord length: 7 m
- Action radius: 10 m
- Tube coupling: Button
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Wheel type: Rubber

Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

Weight and dimensions

- Weight of product: 6 kg

Sustainability

- Packaging: > 90% recycled materials
- User manual: 100% recycled paper

Filtration

- Dust capacity: 2 L
- Exhaust filter: Super Clean Air HEPA 12 filter
- Filter type: Gore-Tex HEPA 10



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com