

Philips Studio
Vacuum cleaner with bag

EnergyCare
ParquetCare

FC9088/01



Greener every day

Save 30% energy with highly efficient HD motor*

Studio is for people who would like the performance of a big vacuum cleaner combined with the compactness of a small one. The new highly efficient HD motor uses up to 30% less energy, while keeping the excellent suction power.

Superior hard-floor cleaning

- Super Parquet nozzle removes 3 x more sticky dirt

Highly efficient anti-allergy system

- HEPA AirSeal plus HEPA 13 filter

Easy cleaning, even around furniture

- Tri-active nozzle with unique 3-in-1 action

Easy to use all over the house

- Two comfortable carrying handles for extra convenience


Low power consumption, high-power results

- New 1250 Watt HD motor generates up to 350 Watt suction power

PHILIPS

Highlights

New 1250 Watt HD motor

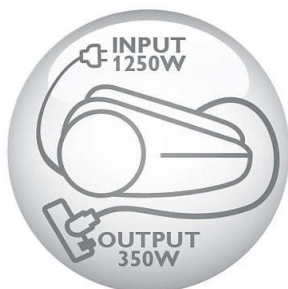

The highly efficient 1250 Watt HD (High Density) motor generates up to 350 Watts of suction power, which means that you use 30% less energy without compromising on the cleaning result.

ComfortControl handle




This ergonomically designed handle helps to prevent strain on wrists. It offers effortless single handed manoeuvring. Enjoy easier cleaning.

Comfortable carrying handles



This vacuum cleaner has not one, but two carrying handles. When it is on its wheels, there is a handle on top which enables you to easily move the cleaner around with very little bending. The second handle on the front side of the appliance enables you to comfortably carry it around in an upright position.

Super Parquet nozzle

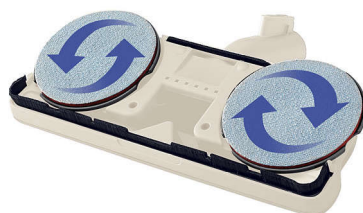

The Super Parquet nozzle allows you to clean hard floors of all kinds thoroughly in one go, without the risk of harming them. Using the absorption capacity of the micro-fibre pads, together with the suction power of the vacuum cleaner, you achieve the best results without requiring any detergents or brushes.

Tri-active nozzle



This unique nozzle is aerodynamically designed for maximum cleaning efficiency, has side brushes to remove dust from corners and curves, and has a front opening to pick up the big bits. Each stroke will deliver an immediate clean result.

HEPA AirSeal, HEPA 13 filter



This Philips vacuum cleaner has been designed in such a way that all the air taken in is passed through the washable HEPA 13 filter (99.95% filtration) before it is exhausted. No escape is possible.

Specifications

Performance

- Input power (IEC): 1250 W
- Airflow (max): 39 l/s
- Vacuum (max): 28 kPa
- Suction power (max): 350 W
- Noise level (Lc IEC): 78 dB

Design

- Colour: Vivid green and pearl beige

Usability

- Tube coupling: Button
- Action radius: 11 m
- Carrying handle: Top and front
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance
- Cord length: 8 m
- Wheel type: Rubber
- Dust full indicator
- Clean Comfort cassette

Nozzles and accessories

- Accessories included: Crevice tool, Small nozzle
- Standard nozzle: TriActive nozzle
- Accessory storage: On handgrip
- Additional nozzle: Super Parquet nozzle

Filtration

- Dust bag type: s-bag
- Dust capacity: 3 L
- Exhaust filter: Ultra Clean Air HEPA 13 washable filter



Issue date 2023-04-14

Version: 1.0.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Compared to 2000 Watt Philips vacuum cleaner; Philips internal measurement, 2008.