

Philips PowerPro Duo
2-in-1 handstick

Cordless

Bagless
18 V
2 accessories

FC6167/01



Thorough cleaning results on all floors

With PowerCyclone and TriActive Turbo nozzle

The new Philips PowerPro Duo offers you thorough cleaning result on hard-floors and carpets. PowerCyclone Technology maintains high suction power for excellent performance. The TriActive Turbo nozzle captures more dust and fluff in one go.

Easy to clean

- One-step empty dust bucket, simple and hygienic
- 3 layer filter German technology captures micro particles*

2-in-1 cordless all-rounder

- 2-in-1 functionality for cleaning floors and furniture
- Cordless operation for freedom to clean everywhere
- Self-standing position for instant parking anywhere

Thorough cleaning results

- PowerCyclone Technology for maximum performance
- TriActive Turbo nozzle for powerful performance on carpets

Performs like a vacuum cleaner

- Powerful 18V Lithium batteries for long runtime

PHILIPS


Highlights

PowerCyclone Technology



The PowerCyclone technology delivers thorough cleaning results in one go through highly efficient steps: 1) Air enters fast into the PowerCyclone thanks to the straight and smooth air inlet. 2) The curved airpass quickly accelerates the air in the cyclonic chamber to separate the dust from the air.

TriActive Turbo nozzle

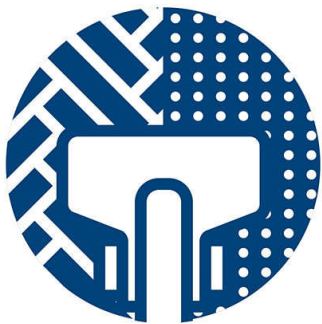

The TriActive Turbo nozzle delivers powerful performance on hard floors and carpets. The motorized brush and the optimized airflow pick up all dirt and fluff in one go.


Powerful 18V Lithium



The powerful 18V Lithium-Ion batteries have longer-lasting power versus standard batteries.


Li-Ion batteries are also very lightweight, giving you a more enjoyable cleaning experience.

Cordless operation

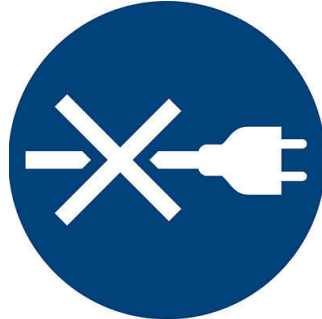

The rechargeable batteries for cordless operation gives you freedom to clean everywhere. Now the cable is not a barrier anymore and you can easily clean in different rooms with no hassle.

Self-standing parking position

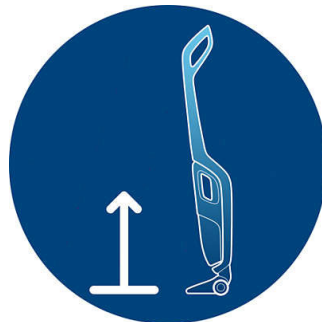

The stick has a convenient parking position to stay upright, both with and without the handheld. Therefore, you can instantly park the stick anywhere you want, also while you are cleaning.

2-in-1: stick & handheld



The 2-in-1 functionality gives you both a stick and a handheld vacuum cleaner in one, to easily clean both floor and furniture.

One-step easy emptying system



The dust container is perfectly designed to dispose dust directly into the dust bin. Thanks to its One-step easy emptying system you can simply empty the dust bucket without touching the dirt, avoiding complicated processes. Easy to empty and hygienic to clean.

3 layer German filter



3 layer washable filter designed with German technology can capture >90% of ultra-fine particles like microorganisms up to size of 0,3 microns (many bacteria, pollens and allergens are around this size) to realize cleaner air.

Specifications

Performance

- Battery type: Li-Ion
- Sound power level: 83 dB
- Battery voltage: 18 V
- Charging time: 5 hour(s)
- Runtime: 40 minute(s)

Design

- Color: Louros Blue
- Design features: 2-in-1, Auto-off, Translucent dust chamber

Nozzles and accessories

- Accessories included: Brush, Crevice tool
- Standard nozzle: TriActive Turbo Nozzle

Weight and dimensions

- Dimensions of product (LxWxH):
215x253x1150 mm
- Weight of product: 3.2 kg

Filtration

- Dust capacity: 0.6 L
- Motor filter: Washable filter



Issue date 2023-04-14

Version: 1.1.2

EAN: 87 10103 86048 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Tested internally by Philips. Compared to a FC8455 / FC8456.