

Philips Jewel
Vacuum cleaner with bag

2000W

FC9060/01



Beautiful results in a blink of an eye

TriActive nozzle with unique 3-in-1 action

The Jewel range is ideal for those who want beautiful results fast. It comes with the patented TriActive nozzle, which gives you three cleaning actions in one stroke.

Easy cleaning, even around furniture

- TriActive nozzle with unique 3-in-1 action

Beautiful floors in a blink of an eye

- 2000 Watt motor generating max. 450 Watt suction power

Leaves a fresh and clean scent

- Active fragrance control dispenses a pleasant smell

PHILIPS

Specifications

Performance

- Input power (IEC): 1800 W
- Input power (max): 1800 W
- Noise level (Lc IEC): 76 dB
- Suction power (max): 450 W
- Vacuum (max): 32 kPa
- Airflow (max): 43 l/s

Design

- Color: Blue bonnet

Usability

- Cord length: 7 m
- Action radius: 10 m
- Tube coupling: Button
- Tube type: Metal lacquered 2-piece telescopic tube
- Power control: Electronic on appliance

- Dust full indicator
- Wheel type: Plastic
- Clean Comfort cassette
- Active fragrance control

Nozzles and accessories

- Standard nozzle: TriActive nozzle
- Accessories included: Crevice tool, Small nozzle
- Accessory storage: On tubeclip

Weight and dimensions

- Weight of product: 5.7 kg

Filtration

- Dust capacity: 3 L
- Dust bag type: s-bag
- Exhaust filter: Super Clean Air HEPA 12 filter


Highlights

2000 Watt motor




Highly efficient 2000 Watt motor generates max. 450 Watt suction power for perfect cleaning results.

Active fragrance control

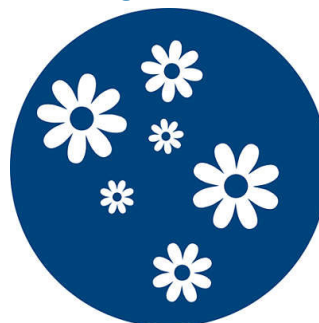

To give a special fresh clean smell, each Jewel comes with a fully integrated and adjustable active fragrance control. Scent granules are available in blossom scent (FC8025) and lemon scent (FC8026).

TriActive nozzle

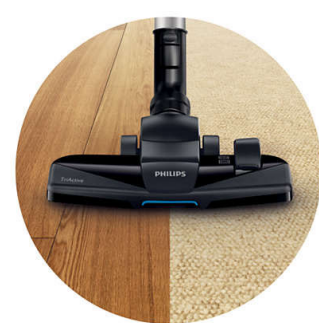

The TriActive nozzle cleans your floor in 3 ways in one go: 1) A larger opening at the tip of the nozzle easily sucks up big bits. 2) It has maximum cleaning efficiency due to optimized airflow through the nozzle. 3) The two side brushes sweep up the dust and dirt closely alongside furniture and walls.



Issue date 2023-04-14

Version: 1.1.1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com