

# PHILIPS

## Face

### OneBlade 360

Trim, edge and shave

360 Blade

5-in-1 adjustable comb



QP2724/22



## Trim, edge & shave any length of hair effortlessly Designed to cut hair, not skin

The new OneBlade 360 trims, edges and shaves any length of hair, more effortlessly. Easily shave & trim, even the most difficult to reach areas with fewer\* passes. Forget about using multiple steps and tools. OneBlade does it all.

#### Easy to use

- Dual-sided blade: designed for precision and control
- Charge anytime, anywhere
- Blade that doesn't fade easily
- Long lasting battery
- Fully waterproof

#### Comfortable shave

- Shave it off
- Innovative 360 Blade

#### Sharp edges


- Edge it up

#### Even trim

- 5-in-1 adjustable comb
- Unique OneBlade Technology


# Highlights

## Unique OneBlade Technology

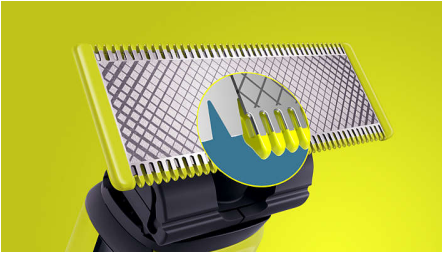

Philips OneBlade has a revolutionary technology designed for facial grooming. It can shave any length of hair. Its dual protection system – a glide coating combined with rounded tips – makes shaving easier and comfortable. Its shaving technology features a fast-moving cutter (12000x per min) so it's efficient – even on longer hairs.

## Innovative 360 Blade

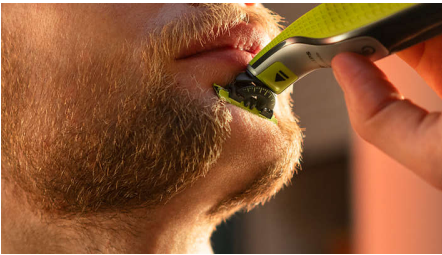

The innovative 360 Blade can flex in all directions to adjust to the curves of your face. The design enables constant skin contact and control. Easily trim and shave hard-to-reach areas — with few strokes and great comfort.

## Trim away



Unique open comb design for an efficient trim without clogging and interrupting your routine – even on long and thick hair.

## Edge it up




Create precise edges with the dual-sided blade. You can shave in either direction to get great visibility and see every hair that you're cutting. Line up your style in seconds!

## Shave it off



OneBlade doesn't shave as close as traditional blade – so your skin stays comfortable. Go against the grain and shave off any length of hair easily.

## Dual-sided blade

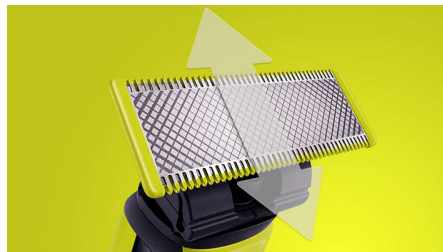


OneBlade follows the contours of your face, allowing you to easily and comfortably trim and shave all areas. Use the dual-sided blade to style your edges and create clean lines by moving the blade in any direction.

## USB-A charging



Can be charged at home or on the road, perfect for your daily routine and for travel.

## Blade that doesn't fade easily

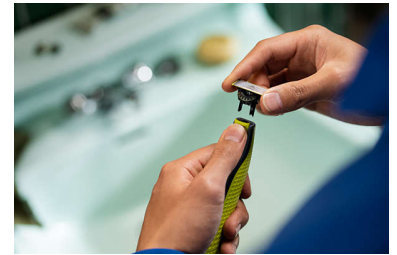

Durable stainless steel blade that lasts up to 4 months of use\* to keep that fresh feel. When the replacement indicator – eject icon – will appear on the blade, the blade performance may no longer be optimal. It is time to consider changing the blade for the best shaving experience

## Wet & dry



OneBlade is fully waterproof, so it is easy to clean: just rinse it under the tap. You can shave wet or dry, even in the shower – whichever you prefer. No shaving foam needed.

# Specifications

## Trimming & shaving performance

**Shaving system:** Contour-following technology, Dual protection system, 360 Blade

**Trimming system:** Contour-following technology, 360 Blade

## Accessories

**Maintenance:** Protection cap

**Comb:** 5-in-1 adjustable comb

## Power

**Charging:** 8 hours full charge

**Run time:** 45 minutes

**Automatic voltage:** 5 V

**Battery type:** Ni-MH

**Max power consumption:** 0.5 W

**Adaptor type:** USB-A

## Design

**Handle:** Ergonomic grip & handling

**Color:** Lime green, charcoal grey

## Service

**2-year warranty:** 2-year warranty on the handle

**Replacement head:** Replace every 4 months\*\*, QP210, QP220, QP230, QP610, QP620, QP410, QP420

## Ease of use

**Charging:** Rechargeable

**Wet and dry use**

**USB-A Charging:** Power adapter not included

