

PHILIPS

Face + Body

OneBlade Pro 360

Rechargeable Li-Ion battery

12-length precision comb

Wet & Dry use

Battery indicator



QP6541/16



Trim edge & shave any length of hair effortlessly*

Designed to cut hair, not skin

The new OneBlade Pro 360 trims, edges and shaves any length of hair, more effortlessly*. Forget about using multiple steps and tools. OneBlade does it all.

Easy to use

- Click-on body comb (3 mm)
- 90 min Li-Ion battery
- LED light shows battery status
- Blade that doesn't fade easy
- Fully waterproof

Comfortable shave

- Unique OneBlade Technology
- Innovative 360 blade
- Shave it off
- Click-on skin guard for sensitive areas

Sharp edges

- Dual-sided blade: designed for precision and control
- Edge it up

Even trim

Highlights

Unique OneBlade Technology



Philips OneBlade has a revolutionary technology designed for facial grooming. It can shave any length of hair. Its dual protection system a glide coating combined with rounded tips makes shaving easier and comfortable. Its shaving technology features a fast-moving cutter (12000x per min) so it's efficient - even on longer hairs.

Innovative 360 blade



The innovative 360 Blade can flex in all directions to adjust to the curves of your face. The design enables constant skin contact and control. Easily trim and shave hard-to-reach areas — with few strokes and great comfort.*

Trim it down



Trim your beard to an even length with the included adjustable precision comb. Dial up one of the 12 lock-in length settings to get everything from a 5 o'clock shadow, to a tight trim, to a longer beard style.

Edge it up



Create precise edges with the dual-sided blade. You can shave in either direction to get great visibility and see every hair that you're cutting. Line up your style in seconds!

Shave it off




OneBlade does not shave as close as a traditional blade - so your skin stays comfortable. Go against the grain and shave off any length of hair easily on your face or body. Includes two blades - one for face, and one for body.

Click-on body comb



Attach the body comb (3 mm) for an easy trim in any direction.

Click-on skin guard

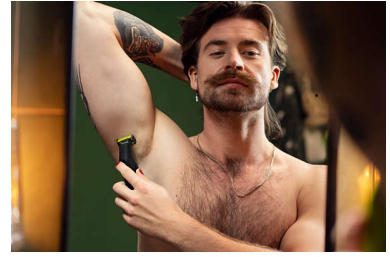

Attach the skin guard for an extra layer of protection on sensitive areas.

12-length precision comb



The versatile precision trimming comb offers length settings from 0.5 to 9 mm, giving you an even trim at exactly the length you want.

Dual-sided blade



OneBlade follows the contours of your face, allowing you to easily and comfortably shave all areas. Use the dual-sided blade to style your edges and create clean lines by moving the blade in any direction.

Specifications

Trimming & shaving performance

Shaving system: Contour-following technology, Dual protection system, 360 Blade

Trimming system: Contour-following technology

Accessories

Comb: 12-length comb (0.5 - 9 mm), Click-on skin guard, Click-on body comb

Extra replaceable blade

Maintenance: Protection cap

Power

Charging: 1 hour full charge

Run time: 90 minutes

Battery type: Li-ion

Automatic voltage: 100-240 V

Max power consumption: 5.4 W

Design

Handle: Ergonomic grip & handling

Color: Black

Service

2-year warranty

Replacement head: Replace every 4 months**, QP210, QP220, QP230, QP610, QP620, QP410, QP420, QP410, QP420, QP430

Ease of use

Charging: Rechargeable

Display: 3 LED battery indicator

Wet and dry use

