

Philips 6000 series
Smart LED TV

81 cm (32")

Full HD 1080p
DVB-T2/C

32PFL6626T



Relax and enjoy a great TV night

with a brilliant 400 Hz PMR LED picture

Relax and enjoy a great TV night with clear, vivid Full HD pictures and authentic sound. The Philips 81 cm (32") 6000 Series 32PFL6626 LED TV has Net TV so you can easily surf the Internet and download movies directly on the television.

Authentic and clear sound experience

- Hear every word with Clear Sound
- Feel the bass of 28 W RMS and Ambi-wOOx

Complete digital connectivity made simple

- Seamless connectivity with 3 HDMI inputs and Easylink
- USB for fantastic multimedia playback
- Integrated DVB-T2 tuner for HD reception without set top box

Your entertainment in brilliant detail

- Full HD TV with Pixel Plus HD for better details and clarity
- 400 Hz Perfect Motion Rate (PMR) for superb motion sharpness

Enjoy the online world with Smart TV

- A wealth of online apps, videos to rent and catch-up TV
- With SimplyShare, enjoy photos, music and films on your TV
- Easy wireless connection with optional wireless USB adapter

PHILIPS

Smart LED TV
81 cm (32") Full HD 1080p, DVB-T2/C

Highlights

Pixel Plus HD

Pixel Plus HD offers the unique combination of ultimate sharpness, natural detail, vivid colours and smooth natural motion. Artefacts and noise in any sources, from multimedia to standard definition TV, and also in highly compressed HD are detected and reduced, ensuring that the picture is clear and razor-sharp.

400 Hz Perfect Motion Rate



400 Hz Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images in fast action movies. The new Philips PMR standard shows the combined visible effect of the fastest panel refresh rate, HD Natural Motion and unique processing formula, for unprecedented motion sharpness.

Clear Sound



Clear Sound is an innovative audio technology that significantly increases the comprehensibility of the voice, whether spoken or sung. It ensures you hear every word, so you can enjoy what you're watching to the fullest.

28 W RMS Ambi-wOOx



Feel the power of new Philips Ambi-wOOx technology. It creates a superior bass sound by capturing and enhancing low frequency bass for a dramatically enhanced bass and sound experience. Ambi-wOOx also projects the sound to better occupy the ambient space of the room. With the powerful 28 W RMS speakers, Ambi-wOOx creates a lifelike soundstage. It gives a clear and spacious sound stage complementary to the rich viewing experience.

Net TV online apps



Rent films directly on your TV from online video shops, watch catch-up TV from your favourite channels and enjoy a rich selection of online apps with Net TV. You can also browse the open Internet.

32PFL6626T/12

SimplyShare TV



Share photos, music and films through SimplyShare from your smart phone, tablet or computer and enjoy them on the big screen.

Wi-Fi USB Adapter



Enjoy Smart TV wirelessly with the Philips Wi-Fi USB Adapter (PTA01) for Smart TV. Simply insert the adapter to the USB connector at the side of the TV and connect your TV directly to your home network. Navigate to your preferred online content with your TV remote control.

3 HDMI inputs with Easylink



HDMI is a single cable to carry both picture and audio signals from your devices to your TV, avoiding cable clutter. It carries uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, BluRay, set top box or home theatre system.

Specifications

Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 81 cm
- Display: edge LED backlight
- Panel resolution: 1920 x 1080p
- Brightness: 400 cd/m²
- Picture enhancement: Pixel Plus HD, HD Natural Motion, Active Control + Light sensor, Super Resolution, 400 Hz Perfect Motion Rate
- Dynamic screen contrast: 500,000:1
- Response time (typical): 2 ms
- Peak Luminance ratio: 65 %

Supported Display Resolution

- Computer inputs: up to 1920 x 1080 @ 60 Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920 x 1080p

Tuner/Reception/Transmission

- Digital TV: DVB-C MPEG2*, DVB-C MPEG4*, DVB-T MPEG2*, DVB-T MPEG4*, DVB-T2, Freeview HD
- Video Playback: NTSC, PAL, SECAM

Smart TV Applications

- Control: MyRemote app (iOS & Android), USB Keyboard and Mouse support
- Net TV: Catch-up TV, Online Video shops, Open Internet browser, Online apps
- SimplyShare: DLNA media browser, USB media browser, Wi-Fi MediaConnect*
- Programme: Pause TV, USB recording

Multimedia Applications

- Video Playback Formats: Codec support:, Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG
- Net TV: Included

Convenience

- Ease of Installation: Auto detect Philips devices, Channel installation wizard, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop Home button, On-screen

User manual, Touch control buttons

- PC network link: DLNA 1.5 certified
- Screen Format Adjustments: Autofill, Autozoom, Movie expand 16:9, Super Zoom, Unscaled, Widescreen
- Electronic Programme Guide: 8-day Electronic Programme Guide*
- Signal strength indication
- Teletext: 1200-page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade

Sound

- Output power (RMS): 28 W (2 x 14 W)
- Sound Enhancement: Ambi-wOOx, Auto Volume Leveller, Clear Sound, Incredible Surround, Treble and Bass Control

Connectivity

- Number of HDMI connections: 3
- HDMI features: Audio Return Channel
- Number of components in (YPbPr): 1
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, Plug and play add to Homescreeen, Auto subtitle shift (Philips), Pixel Plus link (Philips), One touch play
- Number of scarts (RGB/CVBS): 1
- Number of USBs: 1
- Wireless connection: Wireless LAN ready
- Other connections: Antenna IEC75, Common Interface Plus (CI+), Ethernet-LAN RJ-45, SD card slot (Videostore), Digital audio out (optical), PC-in VGA + Audio L/R in, Headphone out, Service connector

Power


- Mains power: AC 220 - 240 V 50/60 Hz
- Ambient temperature: 5°C to 40°C
- Standby power consumption: < 0.15 W
- Energy Label Class: A
- EU Energy Label power: 40 W
- Power Saving Features: 0 Watt Power-off switch, Auto switch-off timer, Eco mode, Eco settings menu, Light sensor, Picture mute (for radio)
- Off mode power consumption: < 0.01
- Annual energy consumption: 58 kWh
- Presence of lead: Yes*

Accessories

- Included accessories: Power cord, Remote Control, 2 x AAA Batteries, Tabletop swivel stand, Quick start guide, Legal and safety brochure, Warranty Leaflet
- Optional accessories: Wireless USB adapter (PTA01), Philips Wall Mount SQM 6325, Philips Wall Mount SQM 6415, Philips Wall Mount SQM 6435

Dimensions

- Set Width: 761 mm
- Set Height: 473 mm
- Set Depth: 41.6 mm
- Product weight: 8.7 kg
- Set width (with stand): 761 mm
- Set height (with stand): 523 mm
- Set depth (with stand): 221 mm
- Product weight (+stand): 10.6 kg
- Box width: 950 mm
- Box height: 572 mm
- Box depth: 158 mm
- Compatible wall mount: 200 x 200 mm

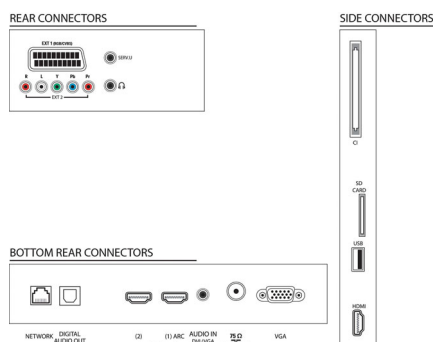

Issue date 2023-10-02

Version: 11.3.4

EAN: 87 12581 59301 8

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* Net TV: Visit www.philips.com/smarttv to discover the services available in your country.

* Wi-Fi Media connect: The playback of video can be affected by your PC speed and Wi-Fi bandwidth. For minimum and recommended system requirements go to www.philips.com/wifimediaconnect. Displays content with a delay of some seconds. Small differences between image and sound can occur.

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* 8 days EPG, service not available in all countries

* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* Typical on-mode power consumption measured according to IEC62087 Ed 2.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.

* USB keyboard and mouse is supported via software update