

Philips
LED TV

81 cm (32")
Full HD 1080p
digital TV

32PFL8605H



Refined living, pure performance

with Ambilight and leading picture

Top performance on a picture perfect 81 cm (32") flat screen. The Philips 32PFL8605 LED TV provides a frameless design with Ambilight to set the scene for you to experience the brilliance of LED technology. Enjoy the show.

Greener every day

- LED TVs up to 40% more energy efficient than normal LCD TVs

In-built internet TV

- Philips Net TV for popular online services on your TV
- DLNA PC Network link to browse PC and Home network content

Perfect LCD Picture

- Full HD with Perfect Pixel HD Engine for unrivalled clarity
- Brilliant LED images with low power consumption
- Perfect Natural Motion for ultra smooth Full HD movies
- 100Hz Clear LCD, 2ms performance for superb motion sharpness

Impressive, invisible sound

- Feel the power of 20W RMS and Incredible Surround

Enlarge your viewing experience

- Ambilight Spectra 2 widens the viewing experience

PHILIPS

LED TV
81 cm (32") Full HD 1080p, digital TV

Highlights

Ambilight Spectra 2



Add a new dimension to your viewing experience with Ambilight Spectra 2. This patented Philips technology enlarges the screen by projecting a glow of light, on the 2 sides of the TV, from the back of the screen onto the surrounding wall. Ambilight adjusts automatically the colour and brightness of the light to match the picture, creating an immersive viewing experience. The wall adaptive function ensures that the color of the light always matches the picture, no matter what the color of your wall. With Ambilight Spectra 2 movies truly come to life!

Perfect Pixel HD Engine

Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, for a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors, superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV. The Full HD screen with 1920 x 1080p pixels produces brilliant flicker-free progressive scan pictures with superb brightness.

LED



The most advanced LED lighting technology in this TV combines an eye-catching minimalistic design with stunning image quality as well as the lowest power consumption in its category. On top of that, LED lighting technology does not contain any hazardous materials. Thus, with LED backlight you can enjoy low power consumption, high brightness, incredible contrast, sharpness and vibrant colors.

100Hz Clear LCD (2ms)



100Hz Clear LCD creates extreme motion sharpness. The Double Frame Rate Insertion increases the sharpness of motion reproduction to more than twice that of conventional LCD, resulting in a performance with a response time of 2 milliseconds. Now you can enjoy clear images even with fast on-screen motion.

Perfect Natural Motion



Enjoy the action without any judder. Perfect Natural Motion estimates motion in the

32PFL8605H/12

picture and corrects juddering movements in both broadcast and pre-recorded movie material (including 1080p movies and 24p True Cinema on Blu-ray and DVD). The result is even smoother and quieter pictures with excellent sharpness. Enjoy motion performance that surpasses cinema quality!

20W RMS Incredible Surround

Feel the power of the music beat and the atmosphere of the movies. The powerful 20W RMS (2x10W RMS) amplifiers create a lifelike sound stage. Incredible Surround allows you to experience total surround with greater depth and width of sound complementary to the rich viewing experience.

DLNA PC Network link



The DLNA PC-Network link provides easy access to videos, photos and music content on your PC or Home Network using your TV remote control. By connecting your TV to your home network, you will be able to access content from all DLNA certified devices seamlessly. Browse your PC collection of multimedia from your TV at a push of a button.

Energy efficient LED

Using the latest LED backlight technology, LED-backlit TVs are a more sustainable choice, with a longer life and far lower energy consumption than plasmas and conventional LCD TVs. Unlike CCFL backlights, LEDs do not use mercury in their manufacture. In addition, Philips TV designs have constantly improved, resulting in higher material efficiency and reduced energy usage without compromising on safety and well-being.

Specifications

Ambilight

- Ambilight Features: Ambilight Spectra 2, Lounge light mode in stand-by, 'Sunset' soft switch off, Wall colour adaptive
- Ambilight Version: 2-sided
- Ambilight light system: LED wide color
- Dimming Function: Manual and via Light Sensor

Picture/Display

- Aspect ratio: Widescreen
- Diagonal screen size (inch): 32 inch
- Diagonal screen size (metric): 81 cm
- Color cabinet: Seamless front glass
- Display: LCD Full HD, edge LED backlight
- Panel resolution: 1920x1080p
- Brightness: 450 cd/m²
- Picture enhancement: Perfect Pixel HD Engine, Perfect Natural Motion, Perfect Contrast, Perfect Colors, Active Control + Light sensor, 2D/3D noise reduction, Super Resolution
- Dynamic screen contrast: 500000:1
- Response time (typical): 2 (BEW) ms
- Viewing angle: 176° (H) / 176° (V)
- Peak Luminance ratio: 65 %
- Screen enhancement: Anti-Reflection coated screen
- Color processing: 2250 trillion colors 17bit RGB

Supported Display Resolution

- Computer inputs: up to 1920x1080 @ 60Hz
- Video inputs: up to 1920x1080p, 24, 25, 30, 50, 60 Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- Digital TV: DVB Terrestrial *, DVB-T MPEG4*, DVB-C MPEG4*, MHEG
- Video Playback: NTSC, SECAM, PAL

Multimedia Applications

- Video Playback Formats: Codec support: H264/ MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1, Containers: AVI, MKV
- Music Playback Formats: MP3, WMA (v2 up to v9.2), AAC
- Picture Playback Formats: JPEG
- Net TV: Included

Convenience

- Ease of Installation: Channel installation wizard, Network installation wizard, Settings assistant wizard, Device connection wizard, Auto detect Philips devices, 2-in-1 Wallmount Stand
- Ease of Use: Onscreen Usermanual, Touch control buttons, Favorite program selection, Mozaic channel grid, One-stop experience button, One-stop Home button
- Screen Format Adjustments: Autofill (no black bars), Autozoom (original format), (includes 4:3, 14:9, 21:9), Super Zoom, Movie expand 16:9, Widescreen, unscaled (1080p dot by dot)
- Multimedia: DLNA media Browser, Net TV services, USB media browser
- Electronic Program Guide: Now + Next EPG, 8day Electronic Program Guide*
- Teletext: 1200 page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade

Sound

- Output power (RMS): 2 x 10W, Invisible Sound
- Sound Enhancement: Auto Volume Leveler, Dynamic Bass Enhancement, Incredible Surround, Treble and Bass Control, Clear Sound

Connectivity

- HDMI features: Audio Return Channel, Instaport fast HDMI switching
- EasyLink (HDMI-CEC): One touch play, EasyLink, Pixel Plus link (Philips), Remote control pass-through, System audio control, System standby
- Front / Side connections: USB, Common Interface Slot (CI-CI+), SD-card (Videostore)
- Ext 1 Scart: Audio L/R, CVBS in, RGB
- HDMI 1: HDMI v1.4 (Audio Return Ch.)
- Ext 2 Scart: Audio L/R, CVBS in, RGB
- HDMI 2: HDMI v1.3
- Other connections: Headphone out, S/PDIF out (coaxial), Ethernet-LAN RJ-45
- HDMI 3: HDMI v1.3
- PC network link: DLNA 1.5 certified
- Ext 3: YPbPr, Audio L/R in
- Summary: 4x HDMI, 1x USB, 2x SCART, 1x Ethernet, Wi-Fi ready
- VGA-in: PC input, D-sub 15
- HDMI Side: HDMI v1.3

Power

- Mains power: 220 - 240V, 50/60Hz
- Ambient temperature: 5 °C to 35 °C
- Green label: ECO label certified
- Standby power consumption: 0.15 W
- Power consumption (typical): 58 W
- Power Saving Features: 0 Watt Power-off switch, Light sensor, Eco mode, Picture mute (for radio), Auto switch-off timer, Eco settings menu
- Off mode power consumption: 0.01 W
- Annual energy consumption: 84.68 kWh
- Presence of lead: Yes*


Accessories

- Included accessories: Power cord, Quick start guide, Warranty certificate, Remote Control, Batteries for remote control, Legal and safety brochure, Net TV brochure
- Optional accessories: Wireless USB adaptor (PTA01)


Dimensions

- Set Width: 779 mm
- Set Height: 496 mm
- Set Depth: 44 mm
- Product weight: 13 kg
- Set height (with stand): 532 mm
- Set depth (with stand): 228 mm
- Product weight (+stand): 15,5 kg
- Box width: 1014 mm
- Box height: 611 mm
- Box depth: 160 mm
- Compatible wall mount: adjustable 200 x 300mm
- Stand width: 428 mm


BACK CONNECTORS

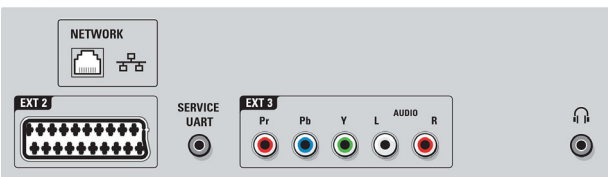

BOTTOM CONNECTORS



SIDE CONNECTORS

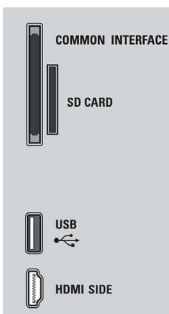

Issue date 2023-07-15

Version: 12.1.8

EAN: 87 12581 54008 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

www.philips.com

* 8 days EPG, service not available in all countries

* Net TV: Visit www.philips.com/smartytv to discover the services offering in your country.

* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.

* Typical on-mode power consumption measured according to IEC62087 Ed 2.

* Energy consumption in kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.

* This television contains lead only in certain parts or components where no technology alternatives exist in accordance with existing exemption clauses under the RoHS Directive.