

Philips 4000 series  
Smart LED TV

**66 cm (26")**  
HDTV  
DVB-T/C

**26PFL4007H**



## Ideal for any room

with HD LED and Smart TV

Relax and enjoy a great TV night in brilliant LED quality on the Philips 26PFL4007 HD small-screen Smart LED TV. Powered by the Pixel Plus HD engine, enjoy a world of content with Smart TV Plus in clear, vivid details on a compact-size TV.

### Complete digital connectivity made simple

- 2 USB slots for fantastic multimedia playback
- PC input allows you to use your TV as a PC monitor
- Seamless connectivity with 3 HDMI inputs and Easylink
- Integrated Digital DVB-C/T Tuner for digital cable reception

### Enjoy a world of content with Smart TV Plus

- Easy wireless connection with optional wireless USB adapter
- A wealth of online apps, videos to rent and catch-up TV
- Control the TV with your smart phone, tablet or keyboard
- With SimplyShare, enjoy photos, music and films on your TV
- Find, schedule, record\* and pause TV

### A clear, vivid picture every time

- Pixel Plus HD for better details, depth and clarity
- Brilliant LED images with low power consumption
- 200 Hz Perfect Motion Rate (PMR) for superb motion sharpness

# PHILIPS

# Highlights

## Wi-Fi USB Adapter



Enjoy Smart TV wirelessly with the Philips Wi-Fi USB Adapter (PTA01) for Smart TV. Simply insert the adapter to the USB connector at the side of the TV and connect your TV directly to your home network. Navigate to your preferred online content with your TV remote control.

## Net TV online apps



Rent films directly on your TV from online video shops, watch catch-up TV from your favourite channels and enjoy a rich selection of online apps with Net TV. You can also browse the open Internet.

## Stay in Control



Control your TV in the easiest and most convenient way. Just connect a wireless keyboard or use your smart phone or tablet to control your Smart TV.

## SimplyShare TV



Share photos, music and films through SimplyShare from your smart phone, tablet or computer and enjoy them on the big screen.

## Programme



Record live digital TV on a USB connected to your Philips TV or pause content whenever you want to take a break and continue watching whenever you want. Use the Electronic Programme Guide to find your favourite programmes and easily schedule your preferred recordings. Now you can programme your TV viewing around your life.

## LED



The most advanced LED lighting technology in this TV combines an eye-catching minimalistic design with stunning image quality as well as the lowest power consumption in its category. On top of that, LED lighting technology does not contain any hazardous materials. Thus, with LED backlight you can enjoy low power consumption, high brightness, incredible contrast, sharpness and vibrant colours.

## 2 USB (multimedia)



Two USB slots give access to jpeg photos, mp3 music and video files from most USB-sticks (USB memory-class device). Plug the USBs into one of the slots on your TV and access the multimedia content using the easy on-screen content browser. You can now view and share your videos, photos and music.

## PC Input (HDMI + VGA)

With PC input you can use your TV as a PC monitor either using a HDMI-DVI cable (for digital signals) or VGA cable (for analogue signals).

## 3 HDMI inputs with Easylink



HDMI is a single cable to carry both picture and audio signals from your devices to your TV, avoiding cable clutter. It carries uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, BluRay, set top box or home theatre system.

## Integrated DVB-C/T Tuner

The integrated Digital DVB-C/T tuner lets you receive digital cable and terrestrial TV without an additional set top box. Enjoy quality TV clutter free.

# Specifications

## Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 26 inch
- Diagonal screen size (metric): 66 cm
- Display: LED HD TV
- Panel resolution: 1366 x 768p
- Brightness: 300 cd/m<sup>2</sup>
- Picture enhancement: Pixel Plus HD, 200 Hz Perfect Motion Rate
- Dynamic screen contrast: 500,000:1

## Supported Display Resolution

- Computer inputs: up to 1920 x 1080 @ 60 Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920 x 1080p

## Tuner/Reception/Transmission

- Digital TV: DVB-C MPEG2\*, DVB-C MPEG4\*, DVB-T MPEG2\*, DVB-T MPEG4\*
- Video Playback: NTSC, PAL, SECAM

## Smart TV Applications

- Control: MyRemote app (iOS & Android), USB Keyboard and Mouse support
- Net TV: Catch-up TV, Online Video shops, Open Internet browser, Online apps
- SimplyShare: DLNA media browser, USB media browser
- Programme: Pause TV, USB recording

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG

## Convenience

- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop Home button, On-screen User manual
- PC network link: SimplyShare
- Screen Format Adjustments: Autofill, Autozoom, Movie expand 16:9, Super Zoom, Unscaled, Widescreen

- Electronic Programme Guide: 8-day Electronic Programme Guide
- Signal strength indication
- Teletext: 1200-page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade

## Sound

- Output power (RMS): 10 W (2 x 5 W)
- Sound Enhancement: Auto Volume Leveller, Clear Sound, Incredible Surround

## Connectivity

- Number of AV connections: 1
- Number of HDMI connections: 3
- HDMI features: Audio Return Channel
- Number of components in (YPbPr): 1
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, Plug and play add to Homescreen, Auto subtitle shift (Philips), Pixel Plus link (Philips), One touch play
- Number of scarts (RGB/CVBS): 1
- Number of USBs: 2
- Wireless connection: Wireless LAN ready
- Other connections: Antenna IEC75, Common Interface Plus (CI+), Ethernet-LAN RJ-45, Digital audio out (optical), PC-in VGA + Audio L/R in, Headphone out, Service connector

## Power


- Mains power: AC 220 - 240 V 50/60 Hz
- Ambient temperature: 5°C to 40°C
- Standby power consumption: <math>\leq 0.15\text{ W}</math>
- Energy Label Class: A
- EU Energy Label power: 28 W
- Power Saving Features: Auto switch-off timer, Eco mode, Light sensor, Picture mute (for radio)
- Annual energy consumption: 39 kWh

## Accessories

- Included accessories: Power cord, Remote Control, 2 x AAA Batteries, Tabletop stand, Quick start guide, Legal and safety brochure, Smart TV Quick Guide, Warranty Leaflet
- Optional accessories: Wireless USB adapter (PTA01)

## Dimensions

- Set Width: 628 mm
- Set Height: 392 mm
- Set Depth: 47 mm
- Product weight: 5.25 kg
- Set width (with stand): 628 mm
- Set height (with stand): 434 mm
- Set depth (with stand): 160 mm
- Product weight (+stand): 5.6 kg
- Box width: 680 mm
- Box height: 485 mm
- Box depth: 126 mm
- Weight incl. Packaging: 6.8 kg
- Compatible wall mount: 100 x 100mm

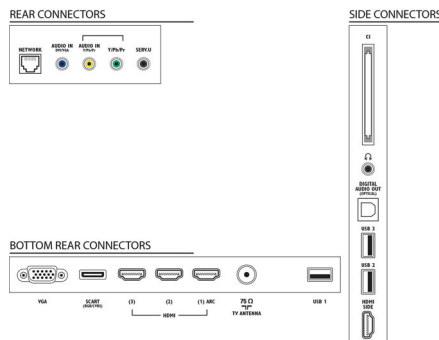

Issue date 2023-10-02

Version: 3.2.6

EAN: 87 12581 65048 3

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Net TV: Visit [www.philips.com/smarttv](http://www.philips.com/smarttv) to discover the services available in your country.  
\* USB recording is only possible for digital channels covered by the TV IP bases Electronic Programme Guide (country and channel restrictions may apply); recordings may be limited by broadcast copy protection (CI+). An Internet connection is required.  
\* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.  
\* Remote recording functionality available in autumn 2012  
\* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.  
\* 8 days EPG, service not available in all countries