

Philips 3500 series  
LED TV with YouTube  
App

**56 cm (22")**

Full HD 1080p  
DVB-T/C

**22PFL3557H**



## Ideal for any room

with integrated DVD player

The Philips 22PFL3557 Full HD small screen Smart LED TV is the simplest way to watch DVDs. With an integrated DVD player and Philips picture and sound quality, you can enjoy movies with only one remote control and no extra devices or cable.

### **Complete digital connectivity made simple**

- Integrated DVD player to watch DVDs without extra clutter
- DivX Certified® for standard playback of DivX videos via DVD
- 2 USB slots for fantastic multimedia playback
- PC input allows you to use your TV as a PC monitor
- Seamless connectivity with 3 HDMI inputs and Easylink

### **A clear, vivid picture every time**

- Full HD TV with Digital Crystal Clear for depth and clarity
- Brilliant LED images with incredible contrast
- 100 Hz Perfect Motion Rate (PMR) for superb motion sharpness

### **Enjoy a world of content with Smart TV**

- Easy wireless connection with optional wireless USB adapter
- A wealth of online videos via YouTube
- With SimplyShare, enjoy photos, music and films on your TV

# PHILIPS

# Highlights

## Wi-Fi USB Adapter



Enjoy Smart TV wirelessly with the Philips Wi-Fi USB Adapter (PTA01) for Smart TV. Simply insert the adapter to the USB connector at the side of the TV and connect your TV directly to your home network. Navigate to your preferred online content with your TV remote control.

## Smart TV online apps

Enjoy a rich gallery of online videos via YouTube on your TV.

## SimplyShare TV



Share photos, music and films through SimplyShare from your smart phone, tablet or computer and enjoy them on the big screen.

## Digital Crystal Clear

Digital Crystal Clear is a package of picture innovations that digitally adjusts and optimises picture quality to optimal contrast, colour and sharpness levels. The result is extremely clear pictures from any source.

## Full HD LED TV



The most advanced LED lighting technology in this Full HD LED TV combines an eye-catching minimalistic design with stunning image quality as well as the lowest power consumption in its category. On top of that, LED lighting technology does not contain any hazardous materials. Thus, with LED backlights you can enjoy low power consumption, high brightness, incredible contrast, sharpness and vibrant colours.

## 100 Hz Perfect Motion Rate



Combining the refresh rate of the panel and unique image processing, Perfect Motion Rate (PMR) creates extreme motion sharpness for clear and vibrant images even with fast on-screen motion.

## Integrated DVD player

Exciting and innovative — Philips TVs with an integrated DVD player ensure multi-format playability. Video fans and music lovers benefit from the widely accepted DVD and CD formats and the increasing popularity of mp3 digital music, without having to purchase a separate player or hook up the products. The Philips TV-DVD plays DVD+RW, DVD+R, DVD-RW, DVD-R, DVD-Video, S-VCD, VCD, Picture CD, JPEG, MP3-DVD, MP3-CD, CD-R, CD-RW and WMA-CD.

## 2 USB (multimedia)



Two USB slots give access to jpeg photos, mp3 music and video files from most USB-sticks (USB memory-class device). Plug the USBs into one of the slots on your TV and access the multimedia content using the easy on-screen content browser. You can now view and share your videos, photos and music.

## PC Input (HDMI + VGA)

With PC input you can use your TV as a PC monitor either using a HDMI-DVI cable (for digital signals) or VGA cable (for analogue signals).

## 3 HDMI inputs with Easylink



HDMI is a single cable to carry both picture and audio signals from your devices to your TV, avoiding cable clutter. It carries uncompressed signals, ensuring the highest quality from source to screen. Together with Philips Easylink, you need only one remote control to perform most operations on your TV, DVD, BluRay, set top box or home theatre system.

## DivX Certified

With DivX® support you are able to enjoy DivX encoded videos in the comfort of your living room. The DivX media format is an MPEG4-based video compression technology that enables you to save large files like movies, trailers and music videos on media like CD-R/RW, and DVD recordable discs.

# Specifications

## Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 22 inch
- Diagonal screen size (metric): 56 cm
- Display: LED Full HD
- Panel resolution: 1920 x 1080p
- Brightness: 250 cd/m<sup>2</sup>
- Picture enhancement: Digital Crystal Clear, 100 Hz Perfect Motion Rate
- Dynamic screen contrast: 100,000:1

## Supported Display Resolution

- Computer inputs: up to 1920 x 1080 @ 60 Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920 x 1080p

## Tuner/Reception/Transmission

- Digital TV: DVB-C MPEG2\*, DVB-C MPEG4\*, DVB-T MPEG2\*, DVB-T MPEG4\*
- Video Playback: NTSC, PAL, SECAM

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3
- Picture Playback Formats: JPEG
- Disc formats: CD, CD-R, CD-RW, DVD, DVD+R/-RW, DVD-R/-RW

## Convenience

- Ease of Installation: Device connection wizard, Settings assistant wizard
- Ease of Use: One-stop Home button, On-screen User manual
- Screen Format Adjustments: 4:3, Autofill, Autozoom, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Unscaled, Widescreen
- Electronic Programme Guide: 8-day Electronic Programme Guide
- Teletext: 1000-page Smart Text
- Firmware upgradeable: Firmware upgradeable via USB

## Sound

- Output power (RMS): 10 W (2 x 5 W)
- Sound Enhancement: Auto Volume Leveller, Clear Sound, Incredible Surround, Treble and Bass

## Control

## Connectivity

- Number of HDMI connections: 3
- HDMI features: Audio Return Channel
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, Pixel Plus link (Philips), One touch play
- Number of scarts (RGB/CVBS): 1
- Number of USBs: 2
- Wireless connection: Wireless LAN ready
- Other connections: Antenna IEC75, Common Interface Plus (CI+), Ethernet-LAN RJ-45, Digital audio out (coaxial), PC-in VGA + Audio L/R in, Headphone out

## Power


- Mains power: AC 220-240 V; 50-60 Hz
- Ambient temperature: 5°C to 35°C
- Standby power consumption: <0.3 W
- Energy Label Class: B
- EU Energy Label power: 26 W
- Power Saving Features: Eco mode, Picture mute (for radio)
- Annual energy consumption: 38 kWh

## Accessories

- Included accessories: Power cord, Remote Control, 2 x AAA Batteries, Tabletop stand, Quick start guide, Legal and safety brochure, Warranty Leaflet
- Optional accessories: Wireless USB adapter (PTA01)

## Dimensions

- Set Width: 514 mm
- Set Height: 323 mm
- Set Depth: tbc mm
- Product weight: tbc kg
- Set width (with stand): 514 mm
- Set height (with stand): 361 mm
- Set depth (with stand): 147 mm
- Product weight (+stand): 000 kg
- Box width: 000 mm
- Box height: 000 mm
- Box depth: 000 mm
- Weight incl. Packaging: tbc kg
- Compatible wall mount: 100 x 100mm

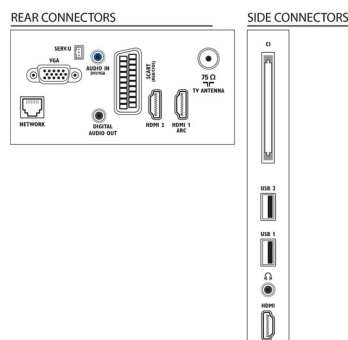

Issue date 2023-10-02

Version: 7.3.4

EAN: 87 12581 63849 8

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* DivX Certified® to play DivX® video, including premium content.  
\* The TV supports DVB reception for 'Free to air' broadcast. Specific DVB operators may not be supported. An up to date list can be found in the FAQ section of the Philips support website. For some operators Conditional Access and subscription are required. Contact your operator for more information.  
\* Energy consumption in kWh per year based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption will depend on how the television is used.  
\* Typical on-mode power consumption measured according to IEC62087 Ed 2.  
\* 8 days EPG, service not available in all countries