


# PHILIPS

Mobile Phone

535

CT5358

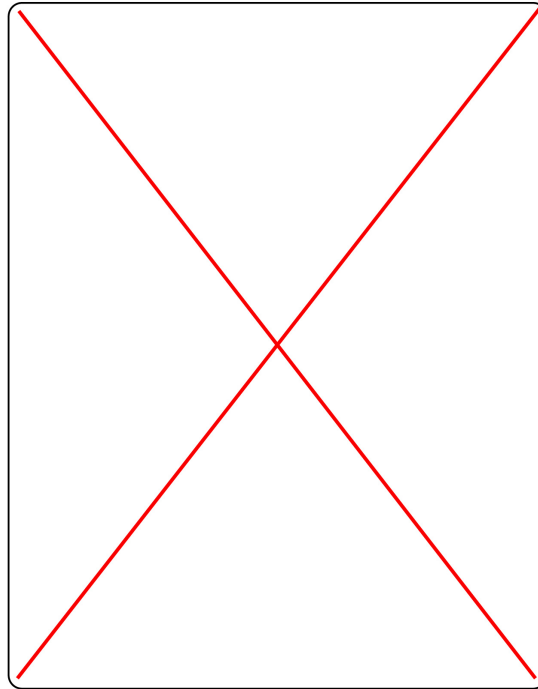

## Snap, Talk & Send

FotoTalk: add voice to your pictures

### **Capture and share your life**

- Integrated VGA digital camera
- Digitally zoom up to 4 times
- TFT display with 65,536 gorgeous colors

### **Add Emotion to your Messages**

- MMS (Multimedia Messaging Service)
- FotoTalk adds voice to your MMS pictures
- Special effects for creative picture personalization

### **Maximize your Multimedia Experience**

- Mix your own polyphonic melodies and ringtones with BeDJ
- 32-tone rich polyphonic melodies

# Highlights

## Integrated VGA digital camera

The integrated digital camera with VGA resolution (640x480 pixels) allows you to take high-quality pictures anytime, anywhere with your phone, then send them via MMS or email, or store the pictures in your phone's memory.

## Digital zoom x4

Easily zoom the picture in and out up to 4 times, composing better and more meaningful pictures by capturing the right detail from the overall scene. In preview mode, activate the zoom function to take pictures of distant objects or to concentrate attention on a specific part of the picture.

## 65K color TFT display

Brilliant 65K color TFT display offers high contrast and high brightness with 65,536 gorgeous colors and ultra fine pitch for clear, bright color graphics and photos.

## MMS messaging

MMS (Multimedia Messaging Service) allows you to use your mobile phone to send and receive pictures, video, and audio files with your text messages.

## FotoTalk

FotoTalk allows you to instantaneously send pictures and recorded voice messages via MMS to friends and family. Access the camera application via camera hard key or multimedia menu to choose FotoTalk, then take a picture, record your voice, and go to MMS to finalize and send the message.

## Special effects

Special effects provide you with several modifications that can be applied in order to personalize camera images: sepia, gray scale, edge, digital, embossed, or negative colors. Choose one of the special effects in camera

preview mode, take the picture, then save the photo in phone screen resolution format e.g. 128x160 pixels.

## BeDJ

The amazing BeDJ feature allows you to easily create, enjoy, and share your own music mixes anytime, anywhere for unlimited creativity with this real, portable mixing studio. Create your own sounds using predefined styles provided by famous international DJs, your phone's own polyphonic ring tones, or by downloading content via WAP, infrared, or MMS to mix up to 9 different tracks in real time.

## 32-tone polyphonic melodies

32-tone polyphonic melodies can create simultaneous tones of different notes using MIDI format for more natural and realistic musical results, sounding just like a small orchestra of different instruments for outstanding sound effects.



# Specifications

## Picture/Display

**Brightness:** 120 cd/m<sup>2</sup>

**Lines of text:** 8

**Main Display Resolution:** 128x128 pixel

**Main Display Technology:** TFT

**Main Display Colors:** 65536

## Sound

**Ringers:** Polyphonic (32 tones)

## Audio Playback

**Audio supported formats:** ADPCM, AMR, Midi, SP-Midi

## Audio Recording

**Recording time:** upto 60 seconds

## Audio Capturing

**Voice recording:** Yes, AMR

## Still Picture Playback

**Picture Compression Format:** BMP, GIF (87a & 89a), JPEG

**Slide show:** No

## Still Picture Capturing

**Camera:** Integrated

**Digital zoom:** x2 and x4

**Image sensor type:** CMOS

**Preview frame rate:** 15 frames/second

**Picture file format:** JPEG

**Picture Mode:** Economy, Normal, Super fine

**Picture resolution:** VGA (640x480)

**Sensitivity:** min 5 lux

**Special effects preview mode:** Grey scale, Sepia, Blue effect

## Storage Media

**Built-in memory (RAM):** 8

**User memory:** 1.5 MB

## Connectivity

**Headphone:** 2.5 mm

**Synchronisation PC organizer:** Lotus Notes, MS Outlook

**Wireless connections:** Infrared

**Modem Capabilities:** CSD (Voice, Data), GPRS

## Convenience

**Buttons and controls:** 4-way navigation key and enter, Customized hot key

**Call Management:** Call Cost, Call Counters,

Call Forwarding, Call on Hold, Call Time, Call Waiting\*, Caller ID\*, Conference Call, Emergency Call, Explicit Call Transfer, Microphone mute, Missed Calls, Multi-party call, Received Calls

**Clock/Version:** Analogue, Digital

**Ease of Navigation:** Animated Carousel, Color Carousel

**Ease of Use:** Blinking Lights, Dedicated Headset plug, Hands free mode, Hot Keys, Screen Saver Digital Clock, Vibra Alert

**Ease To Experience:** Demo Mode

**Embedded Games:** 2

**Games and applications:** Agenda, Alarm Clock, Calculator, Calendar, Euro Converter, Infusio - Exen v2

**Personalisation/Customization:**

Downloadable Animated GIF, Downloadable Picture, Downloadable Ringtones, Exchangeable Covers, Fotocall, Screen Saver, Wallpaper

**Volume control**

**Speech Recognition:** Conversation Recording, Voice Command, Voice Dial, Voice Memo, Voice Recognition

**Language available: UI:** Chinese Simplified, Chinese Traditional, Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hebrew, Hungarian, Indonesian, Italian, Lithuanian, Norwegian, Polish, Portuguese, Romanian, Russian, Slovak, Spanish, Swedish, Thai, Turkish

**Language available: T9 input:** Chinese Simplified, Chinese Traditional, Czech, Danish, Dutch, English, Finnish, French, German, Greek, Italian, Norwegian, Polish, Portuguese, Spanish, Swedish, Turkish

**Multimedia:** BeDJ, Foto Talk

**Personal Info Management:** Daylight saving, Time Zone, Smart Phonebook, Vcard Exchange

## Accessories

**Optional accessories:** Battery 720 mAh, Carry case, Cigarette lighter adapter, Deluxe headset, Exchangeable covers, Necklace, Universal car kit, Wrist wrap

**Standard Package Includes:** Battery, CD ROM (Mobile Phone Tools), Charger, Handset, International Guarantee, SAR information leaflet, User Manual

## Dimensions

**Antenna:** Integrated

**Form Factor:** Candy bar

**Handset Color:** Black Motion, Blue Focus, Red

**Lens, Silver Digit**

**Handset dimensions:** 101x44x19

**Handset volume:** 79

**Handset weight:** 95

## Power

**Battery Capacity:** 720 mAh

**Battery Type:** Lithium-ion

**Charging time:** less than 2 hours hr

**Standby time:** up to 300 hrs

**Talk time:** up to 6 hrs

## Network Features

**Voice Codec:** FR/EFR/AMR

**GPRS (Rx+Tx):** Class 10 (4+2), Class B

**Messaging:** Concatenated SMS (Long SMS), E-

mail, EMS / release 4, MMS, Multimedia Message Service, Predefined messages (SMS, MMS), Quick SMS, SMS CB (Cell Broadcast), SMS (Short Message Service)

**Services:** WAP 1.2.1, WAP Browser Teleca2.0, SIM Toolkit / Release 99, OTA provisioning (WAP, MMS)

