














Discover Your Phone





Philips continuously strives to improve its products. Therefore, Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Philips provides this user guide "as is" and does not accept, except as required by applicable law, liability for any error, omission or discrepancy between this user guide and the product described. The device is meant to be connected to GSM/GPRS networks.




How to...

Switch the phone On/Off	Long press  .
Enter your PIN code	Enter your PIN code using the keypad and press  or  to confirm.
Make a call	Enter the phone number on the keypad and press  to dial.
End a call	Press  .
Answer a call	Press  when your phone rings.
Reject a call	Press  when your phone rings.
Adjust the earpiece volume	Press the up or down volume keys during a call.
Activate/deactivate the loudspeaker	Long press  during a call.
Access the Names list	Press  in idle mode.

Access the <i>Call list</i>	Press  in idle mode. The <i>Call list</i> displays the <i>Calls missed</i> , the <i>Calls received</i> and the <i>Calls dialled</i> .
Access the <i>Main Menu</i>	Press <i>OK</i> or  <i>Menu</i> in idle mode.
Go to previous menu	Press  .
Quickly return to idle	Press  .




Softkeys

The left and right soft keys -  and  - located at the top of the keypad allow you to select the corresponding options that appear on the screen immediately above them, including during calls. The functions associated with these keys will vary according to the current context.

<i>Business</i>  page 11	<i>Multimedia</i>  page 18	<i>Entertainment</i>  page 21
<i>Operator</i>  page 22	<i>Messages</i>  page 25	<i>Settings</i>  page 39
<i>FM Radio</i>  page 47	<i>Contacts</i>  page 49	<i>Call Info</i>  page 53

Main Menu

The Main Menu gives you access to all the different features of your mobile phone presented in the form of a grid. The table above summarises the arrangement of the *Main Menu*, the meanings of the various icons found there, and the page in this manual where more detailed information concerning the subject can be found.

Press  to access the *Main Menu* when in idle mode, then use the central navigation key - which directions are represented in the present guide with the ▲, ▼, ◀ or ▶ signs - to browse the icons and lists. When navigating in a list, a scroll bar located on the right hand side of the screen shows your current position in the list. Within lists, press  to access the options related to the selected item, press select  *Back* to go back one level.

How to use this manual

The current manual is structured as follows:

Discover your phone

The current section. Presents an overview of your mobile phone and information on the most commonly used features.

Chapter 1: Getting started

Information on how to set up your mobile phone for the first time: installation of the SIM card, battery, etc.

Chapter 2: Calling

Information on how to make and receive calls.

Chapter 3: Text entry

Information on how to enter text using the numeric keypad.

Chapters 4 to 12

Other sections

These chapters treat each element of the *Main Menu* one at a time.

After Chapter 12 appear the sections for Icons & Symbols, Precautions, Philips authentic accessories, SAR information (if available at publication, otherwise included as a separate document), and finally the Limited Warranty.

Table of contents

1. Getting Started	1	Sound recording	12
Inserting the SIM card	1	Alarm clock	13
Switching on the phone	2	Infrared	13
Charging the battery	3	Organiser	15
Setting Hotkeys	3	Firewall	16
2. Calling	4	5. Multimedia	18
Make a call	4	Memory status	18
Answer and end a call	4	Sound album	18
Call handsfree	4	Picture album	19
Options during a call	5	6. Entertainment	21
Adjust the earpiece volume	5	Mastermind	21
Quickcall	6	Brick Game	21
MMS Foto talk	6	Snake Game	21
Handling multiple calls	6	7. Operator	22
3. Text Entry	9	Services +	22
T9® text input	9	WAP	22
Basic text input	10	8. Messages	25
4. Business	11	Broadcast SMS	25
Calculator	11	E-Mail	25
Money converter	11	SMS	30
Auto Switch On / Off	11	MMS	34
World clock	12	My Dictionary	38

9. Settings	39	Icons & symbols	57
Time and date	39	Precautions	58
Sounds	39	Troubleshooting	63
Security	40	Philips Authentic Accessories	65
Profiles	41	Trademark declaration	66
Autonomy	42	Specific Absorption Rate	
Display	42	Information	67
Network	43	Limited warranty	68
Shortcuts	45	Declaration of conformity	71
Language	46		
10. FM Radio	47		
FM Radio	47		
11. Contacts	49		
Settings	49		
Contacts list	50		
Edit and manage contacts	51		
12. Call Info	53		
Call list	53		
Counters	53		
Settings	55		

I. Getting Started

Please read the safety instructions in the "Precautions" section before use.

To use your phone, you must insert a valid SIM card supplied by a GSM operator or retailer. The SIM card contains your subscription information, your mobile telephone number, and a memory in which you can store phone numbers and messages (for more information, see "Contacts" on page 49).

Inserting the SIM card

Follow the steps below to insert your new SIM card. Remember to switch off your mobile phone before removing the back cover.

Remove the back cover

To insert the SIM card, you must first remove the back cover. Pull the back cover up with your finger as shown below.



Remove the battery

To remove the battery, pull the edge outwards, then remove the battery by pulling it up from the bottom.



You may lose all your personal settings if you remove the battery when the phone is switched on.

Insert the SIM card

Slide the battery to its slot, with the gold contacts facing downwards until it stops. Then lock it by pushing it downwards.




Insert the SIM card

Slide the back cover by sliding it into its slot, until it stops



Remove the protective film covering the screen and the camera lens before using the phone.

Switching on the phone

To switch on the phone, long-press the  key. Enter the PIN code if required. A PIN code is a 4- to 8-digit secret code for your SIM card. It is preconfigured and communicated to you by your operator or retailer. For more information on PIN codes, see “Security” on page 40.

If you enter an incorrect PIN code three times, your SIM card will be blocked. To unblock it, you must request the PUK code from your operator.

When you switch on your mobile phone with your new SIM for the first time, you will be asked for the following:

- | | |
|-----------|---------------------------|
| Set date | To set the current date. |
| Set time | To set the current time. |
| Time zone | To select your time zone. |

See “Settings” on page 39 for details on these three items.

Copy SIM names into the phone?

If your phone detects any names and telephone numbers in the SIM card phonebook, you will be asked if you want to copy them into the onboard phone book. If you wish to copy the numbers, press **OK**, otherwise press **Cancel**.

Charging the battery

Your phone is powered by a rechargeable battery. A new battery is partially charged and a sound alert will warn you when the battery reaches low, if the battery alert is **On** (see “Sounds alerts” on page 40).

Once the battery and battery cover are back in place you can charge the phone. Pull away the protective rubber cap covering the charger connector. Plug in the connector as shown below. Then plug the other end into a main AC power socket.



The battery symbol indicates the state of charge. During charging, the charge indicators will scroll; it takes around 2.5 hours to fully recharge your mobile phone. When all the scroll bars are steady the battery is fully charged. You can then disconnect the charger. Depending on the network and condition of use, talk time goes up to 8.5 hours and stand-by time up to 30 days.

Keeping the charger plugged to the mobile when the battery is fully charged will not damage the battery. The only way to turn off the charger is to unplug it, so use an easily accessible AC power socket. You can connect the charger to an IT supply (Belgium only).






Setting Hotkeys

You can configure the numeric keys **2...** to **9....** to access your favourite features simply by long-pressing on the numeric key. A number of hotkey shortcuts are pre-configured. For more information, see “Shortcuts” on page 45.







2. Calling

Make a call

From the idle screen




1. In idle mode, enter the phone number using the keypad. To correct an error, press .
 2. Press  to dial.
 3. Press  or  **End call** to hang up.
- For an international call, long press  to enter the "+" sign for the international prefix.

Using the phonebook


1. Press  in idle mode.
2. Select a contact in the list and press : the selected number is dialled. If you are using the onboard phonebook and the selected contact features more than one number, the number identified as the default will automatically be selected. To select a different number, press  or  (see "Contacts" on page 49 for more information).
3. Press  or  **End call** to hang up.

Answer and end a call

When receiving a call, the number of the caller may be displayed, depending on whether or not the person calling has chosen to display his or her ID. If the number is stored in the selected phonebook, then the corresponding name is displayed instead of the number.

- **Answer the call:** press  or open the phone if the **Active flip** option is **On** (see page 56 for more information).
- **Reject the call:** press  (or long press either volume key). If you have activated **Call forward** (see page 55 for more information), the call is diverted to a number or voice mail.
- **Hang up:** press  or close the phone.

The phone will not ring if in Silent mode (see page 40).

If you have selected **Any Key Answer**, you can accept a call by pressing any key except  (see page 55 for more information).

Call handsfree

For your own comfort and safety, ensure you move the phone away from your ear when calling handsfree, especially when increasing the volume.

1. In idle mode, enter the phone number using the keypad or select a contact in the phonebook.
2. Press or **Options** then select **Call handsfree** or press .

If you are already on the phone, long press to switch to handsfree mode and back.

Options during a call

During a call, press or **Options** to access the following options.

Activate h/free

This option allows you to use your mobile phone's hands-free option.

Mute / Unmute

Allows you to mute or unmute the microphone so that your caller cannot hear you.

Record dialogue

In most countries, recording telephone conversations is subject to legislation. We advise you to notify the caller if you intend to record your conversation and only do so if they agree.

To record a conversation during a call, select **Record dialogue** and press **OK**. Press **OK** again or **Save** to end the recording; an edit window allows you to assign a name to the recording, which is then available in **Multimedia** > **Sound album**.

Depending on memory capacity (see “Memory status” on page 18), recordings can be of up to 30 minutes in total.

If you select Mute and then Record dialogue, only the caller's voice is recorded.

Notepad

Allows you to note down a number. You can then store it in the phonebook, call it, or send a message to this number.

Other options during a call

Press **Options** to be able to perform the following tasks while a call is ongoing: you can access and consult the **Names list** or **Call list**, hang up by selecting **End call**, change the **Equaliser** settings, send or read **SMS**, or consult and manage events of the **Organiser**.

Adjust the earpiece volume

During a call, press the up or down volume key to increase or decrease the volume.

Quickcall

The **Quickcall** feature allows you to set your four most frequently dialled numbers. You can then quickly call one of them by selecting the corresponding icon or picture on the screen.

Setting a Quickcall contact

1. In idle mode, press **▲** to access the **Quickcall** screen. Select a thumbnail to configure and press **OK** or **☐ Set**.
2. Select a name in the contacts list, and press **OK** again to access the **Picture album** and select a picture. Proceed the same way for each thumbnail.

Calling a Quickcall contact

To make a call, press **▲** when in idle mode, then select the thumbnail of your choice and press **☐**.

To reconfigure a thumbnail, select it and press **OK** to **Replace** the name and/or picture.

If a picture is already associated with a contact, it is displayed in the **Quickcall** screen. Changing the picture in one of the menus will also update it in the other.

MMS Foto talk

This feature allows you to send a picture via MMS and to add a sound recording to it. The picture can be selected from the **Picture album**.

1. Select a picture from the **Picture Album**, then press **OK** or **☐ Options**. Select **Send by... > MMS**.
2. When the **Add sound?** message appears, press **☐ Yes** to start recording. Then press **☐ Save** to stop and save your recording, or **☐ Cancel**.
3. Rename the picture if you wish or press **☐ OK**.
4. Select a contact in the list that appears and then **Add media** to go to the MMS creation screen. Press **☐ Send** to send your message, or modify it as you want before sending it (see “New MMS” on page 34 for more information).

Handling multiple calls

The ability to handle two or more calls at one time and to make conference calls is dependent on your operator and/or subscription.

Making a second call

You can make a second call during an active call or with a call on hold. While on the phone, dial a number (or select a contact in the phonebook) and press . The first call is put on hold (the number is displayed on the bottom of the screen) and the second number is dialled. You can then press **OK** to access the options among which are:

- **Switch calls** to toggle between calls (you can also press ◀ or ▶ to switch calls).
- **Transfer** to connect the two calls. You are disconnected when the transfer is completed.
- **Conference** to introduce the caller into a conference call.

Answering a second call

When you receive a second call while being already in communication, the phone emits a beep alert and the screen displays **Call waiting**. You can then:

Press To answer the call (the first one is put on hold).

Press To reject the call.

Press or To open the options list. You can select **End call** to end the current call, then answer the incoming call.

To receive a second call, you must have deactivated the Call forward for voice calls (see page 55) and activated the Call waiting (see page 55).

Answering a third call

If you are in a call and have one call on hold, you can also receive a third call. To do so, you must either end one of the calls or introduce the new caller to a conference.

Press To reject the call.



Press or To open the options list. You can select **Accept** to answer the incoming call, or **End call** to end the current call, then answer the incoming call.

This service is limited to two current communications (one active and one on hold).

Conference call

This service is subscription dependent.

A conference call is activated by making several outgoing calls or from a multiple call context. It allows you to speak with up to five people at the same time.

1. Make a first call with someone, then a second one (see above).
2. Press  or *Options* and select *Conference*. Repeat the process until five members are connected.
3. Select *Remove party* to disconnect a member of the conference, or select *Private call* to have a private call with this member only (other members are put on hold).
4. Press  to disconnect all calls at once.

If there is an incoming call during the conference call and there are less than five members, you can accept this new call and add this member to the *Conference* call (if five members are already connected, you can answer the call, but not add it to the conference).

3. Text Entry

Text can be entered in editing screens in two different ways: by using T9® Predictive Text Input or basic text input. The techniques for using these two methods are discussed below.

T9® text input



Tegic Euro. Pat.
App. 0842463

T9® Predictive Text Input is an intelligent editing mode for entering text on a mobile phone. It allows you to enter text more quickly by anticipating the word you want to enter based on the keys you have pushed. You press once on the key corresponding to each letter needed to spell a word and T9® suggests a word based on your keystrokes. If several words are available, the first word in the list is displayed and highlighted. Press ▲ / ▼ or [] to browse the list and press OK to insert the word.

How to use it?

Letters and symbols represented by each key are as follows:



to [] To key in letters.



or [] To browse the list of candidate words.



Press any of the three keys to insert the selected word followed by a space.



Short press to backspace, long press to clear all text.



To shift letter case: Standard, lower or UPPERCASE letters.



To view the table of symbols and punctuation.





To shift mode from T9® to basic text input to numeric.

Example: how to enter the word "home":


1. Press [4] [6] [5] [3]. The screen displays the first word of a list: **Good**.
2. Press ▲ or [] to scroll and select **Home**.
3. Press OK or ► to confirm selection of the word **Home**.

Dictionary



If the word you want to enter is not in the T9® dictionary, you can add it to the database. Press [] 1>2>3 to scroll to the bottom of the list until you reach the entry represented by a series of highlighted underscores.

Press  **Spell** to open a basic text editing screen. Enter the new word without spaces using the methods described below and press  **OK** when done. You are then returned to the message you were composing and the new word is inserted.








Language

You can switch input language while writing a message by long-pressing the  key. The available languages will depend on where you purchased your mobile phone.

Basic text input

Press  to switch from T9® to basic text input. This method requires multiple key presses to reach the desired character: the letter "h" is the second letter on the 4 key, so you must press it twice to enter "h". Short press  **Cancel** to clear one entry, long press to clear all text.













Example: how to enter the word "home":

Press  (GHI),  (GHI),  (MNO),  (MNO),  (MNO),  (DEF). Press  when the message is completed.

Letters, numbers and symbols are located on each key as follows:

Short press

Long press

	space 1. , @ / : ; " ' ! ; ? ; # + - * = % < > () & £ \$ ¥	1
	a b c 2 à ä å æ ç	2
	d e f 3 é è Æ Ø	3
	g h i 4 Γ Ì	4
	j k l 5 Λ	5
	m n o 6 ñ ò ö	6
	p q r s 7 β Π Θ Σ	7
	t u v 8 ü ù	8
	w x y z 9 ø Ω Ξ Ψ	9
	To shift letter case: Standard, lower or UPPERCASE letters.	0
	To open symbols and punctuation mode.	Changes the language used for text edition
	To shift mode: T9®, basic or numeric.	N/A

4. Business



This menu contains features and options designed to help you keep you organised and informed while on the move.

Calculator



Your phone has a built-in calculator that you can use to perform basic calculations. Numbers are entered with the keypad and operators with the navigation keys as indicated in the table below:

Addition	Press → or the +++ key.
Subtraction	Press ← or the +++ key twice.
Multiplication	Press ▲ or the +++ key 3 times.
Division	Press ▼ or the +++ key 4 times.
Equals	Press ⊞ or == .

An icon at the top of the screen indicates which navigation keys to use for entering operators.

Press and hold **0.0** to get the decimal point. Calculator accuracy is to 2 decimal places and is rounded up to the higher decimal figure.

Money converter



This menu allows you to convert a sum from one currency into another using the exchange rate of your choice. You can convert from *Local* to *Foreign* or vice versa. Enter a rate in the *Exchange rate* field and an amount in either the *Local* or *Foreign* fields: the sum is calculated automatically.

Auto Switch On / Off



These two separate menus allow you to set your mobile phone to switch itself on or off at pre-set times.

To set *Auto switch on*, select the option and press *OK*. Select *On* and press *OK*. Enter the time at which you want your mobile phone to switch itself on and press *OK*. Select the desired frequency from *Once*, *Every day*, or *On weekdays* and press *OK*. A message appears to confirm activation.

Proceed the same way for the *Auto switch off* option.

World clock



This menu allows you to set and display both the local time and the time in the foreign time zone of your choice. Note that if you choose to display the local and foreign time on your home screen, the image you selected as your wallpaper will no longer be displayed there, but will be replaced with the standard International clock wallpaper.

World clock

Activate this option if you want to display both the local time and the time of another time zone on the idle screen. Press **▲** or **▼** to set the option **On** or **Off**. When **On**, the new menu item **Switch local and foreign** allows you to display the zone of your choice.

This feature is not available when the option No clock is selected in “Clock display” on page 39.

Local settings

Set time

Allows you to set the time by pressing the appropriate keys.

Local zone

Move **▲** or **▼** to select the time zone corresponding to your area.

Summer time

Allows you to set the daylight saving option **On** or **Off** for the local time zone.

Foreign settings

Foreign time zone

Move **▲** or **▼** to select the time zone of your choice.

Daylight saving

Allows you to set the daylight saving option **On** or **Off** for a foreign time zone.

Alarms, reminders, programmed events are time zone independent! If you set an alarm or an event at 9:00 AM in time zone A, it will still ring or be due at 9:00 AM if you change to time zone B.

Sound recording



This menu allows you to make recordings of up to 12 minutes in length, depending on the memory status (see “Memory status” on page 18).

Select **<New>** to begin the recording. The message **Speak now** appears along with a progress bar. When you are finished, press **□** **Save** to stop recording. You can then either enter a name for the new sound

file or accept the default name proposed by pressing **OK**. You then return to the list of **Sound recordings** and the new recording is displayed in the list.

When you select a sound file, it is played automatically in a loop. Press **OK** to access the options. You can **Set a reminder**, **Play recording**, **Rename** or **Delete** it, **Send it by Email**, **Infrared** or **MMS** (see “Sound album” on page 18 for details), **Set as ringer** or **As SMS/MMS ringer**.

A flashing warning sign indicates that your recording will soon reach the maximum authorized length. If you do not stop recording, a red envelope icon informs you that your recording is too long to be sent via MMS.

Alarm clock



Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to three separate alarms and choose whether or not the alarm should repeat. To set an alarm, follow the steps below:



1. Select an alarm and set it **On**.
2. Then enter the time and press **OK**.
3. Then select the frequency: **Once**, **Every day**, **On weekdays**.
4. Finally, select the type of alarm: **Melody**, **Sound recording**, or **Buzzer** and press **OK**.

Repeat above steps to set other alarms.

The alarm clock will ring even if your mobile phone is switched off and/or the ringer volume is set to Silent. When the alarm rings, press any key to stop it or close the phone (except if the snooze mode is on, see below).

Snooze mode

This menu allows you to set the snooze mode **On** or **Off**. When the alarm rings and the snooze mode is **On**:

- press any key (except  **Stop**) to stop the ringing temporarily or close the phone. The alarm will ring again around 7 minutes later.
- press  **Stop** to stop the ringing and the alarm repetition.

The snooze mode is automatically deactivated after 9 alarm repetitions.

The snooze mode setting applies to all the alarms you have set.

Infrared



Your mobile phone has an infrared port that allows you to send or receive data to or from other infrared-compliant devices (e.g. another mobile phone, a computer, a PDA, etc.) through a wireless link.

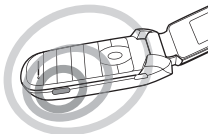
Files that are copyright protected cannot be sent. When connecting with a PC, make sure you have activated its infrared option.

Position of devices

Before transmitting data between two devices, they must be correctly positioned in relation to one another. Make sure that:

- the infrared ports are facing each other,
- they are at a less than 50 cm away from each other.
- nothing obstructs the infrared beam.

Sending data



To send data via infrared from your mobile phone, you must first select the item to be sent: when selecting a picture, a sound, a name or an event, a sub-menu then gives you access to the **Send** via infrared option.

As soon as your phone finds another infrared compliant device to communicate with, the sending

automatically takes place. Messages are displayed on the screen for you to follow the process.

If the phone finds several infrared devices, a list is displayed on the screen for you to choose from. Press **OK** to confirm and to send the selected data.

Sending is cancelled if your phone cannot find another device before the time out is reached, if the infrared link is broken, or if you cancel the process.

Receiving data

When you select **Receive** your phone is ready to receive an item via infrared and waits for the another infrared device to send it. As with sending data, messages are displayed on the screen and allow you to follow the process.

Receiving is cancelled if your phone isn't contacted by another device before the time out is reached, if the infrared link is broken, if the size of the file sent is too large or if you cancel the process.

Saving the data

A message will appear to inform you that you have received a file. Press **OK** to access the options described below.

Save To save the data, then go back to idle. The items you have received will be saved under their default name, which you can change by selecting them in the relevant menus.

Show To display the details of the data you have received.

Discard To ignore the data received.

Using the phone as a modem

Select **Data** to use your phone as a modem. You can use your mobile phone together with a PC or a PDA, e.g. to connect to the internet or to send faxes.

To fully benefit from the services available via infrared (sending and receiving SMS, e-mails and faxes, uploading pictures and sound files to your phone, phonebook synchronisation, GPRS Wizard, etc.), you must install the Philips Mobile Phone Tools software on your PC. This software is available on the CD-ROM shipped with your phone.

The software supplied on the CD-ROM is not compatible with Apple Macintosh computers. It only supports Windows 98 SE, ME, XP and 2000 (Service Pack 3 and up mandatory in this case).

Specific software modules for Lotus Notes, Lotus Organizer and Microsoft Outlook are designed to allow synchronisation of your Philips mobile phone with these applications (refer to their respective user guides for detailed information).

Organiser



This menu allows to create, store and manage events in your organiser. When the organiser alert is **On** (see “Sounds alerts” on page 40), a beep or a sound recorded via the Secretary on the go feature (see “Foreign settings” on page 12) alerts you when an event is due.

The organiser shares the mobile memory capacity with other features (phonebook, picture album, sound, etc.). To check the memory available in your phone, select Multimedia > Memory status.

Creating a new event

1. In **Events**, select **<New>**, then the type of event to create (**Holiday**, **Meeting**, **To Do**).
2. Enter the starting and ending date and time of the event and name it (e.g. "Meeting with Smith").
3. Set a reminder and a frequency: alerts will be triggered at the chosen time.


The reminder only applies to Meeting and To Do events. It will be updated when changing time zones (see “World clock” below).

Deleting old events

This menu allows you to delete past events. Enter the starting date (past or future) from which all previous events will be deleted and press **OK** twice to delete all events preceding this date.

To delete all events set in your organiser, enter a starting date several years ahead (e.g. 31st of December 2010) to make sure all events preceding this date are deleted at once.

Managing events

Select an event in the list and press **OK** or  **Options** to access the following options:

- Delete** To delete the selected event.
- Change** To change the selected event.
- Send by infrared** To transmit the selected event to another infrared-compatible device.
- Change sound** To change the sound associated with the alarm type of the selected event.

Changing a repeating event modifies all instances of this event.

Events views


Events stored in your organiser can be displayed in **Day view**, **Week view** and **Month view**. Select a view format and press **OK**, then use ◀ or ▶ to display the previous or next day, week or month.

Firewall



This menu allows you reject all calls and SMS received from the people you include in the blacklist.

Settings



Select this menu item and press  **Select** to access the options described below.


- Notification** To select the way you want to be notified of a rejected call or SMS: with a **Status icon** displayed in idle screen or an **Icon feedback**. You can also choose **No notification**.

Activation Allows you to set the firewall option **On** or **Off**. When **On**, your mobile phone will reject all calls and SMS received from the people listed in the blacklist. Rejected calls appear in the **Call list** and rejected SMS in the **Spam SMS Box**.

Blacklist

This menu displays the list of contacts whose calls and SMS will be rejected. Select **<New>** to add a name and the corresponding number to the list, then choose whether you want to reject **SMS** and/or **Calls** coming from this person.

Select a name in the list and press  or  **Select** to **Change** the related information or **Delete** it. Select **Details** to display the blacklist details.

You can add a name to the blacklist directly from the phonebook, the Calls list and the SMS Inbox: select a contact, a call or a message in the relevant list, press  Options and simply select Add to the blacklist. The related number will be added to the blacklist.

5. Multimedia



This menu and its sub-menus contain options related to the multimedia features of your Xenium 9@9h mobile phone.

Memory status



This menu allows you to display the percentage of memory available in your phone. Various features share the memory capacity: pictures, sounds, recorded memos and voice tags for voice commands, stored messages, phonebook and organiser entries, games, etc.

Press **OK** to check the memory status. The display shows you the percentage of memory free and the phone's total memory in Kilobytes (Kb). Press **OK** again to check the detailed list of memory used by each feature.

Your mobile phone is supplied with many sounds and pictures. You can only delete sounds or pictures in the *My melodies* or *My images* folders, e.g. to free memory space for your own sounds and pictures.

If the *List full* message appears when saving a new item you must delete an item to be able to create or add a new one.

Sound album



This menu allows you to manage the sound files stored in your mobile phone. The options are:

Get more...

To launch the WAP application and download new sound files.

View all

To access all your sound files in a single list.

Own melodies

To access your downloaded sound files.

Protected melodies

To access the list of copyright protected sample sounds.

Recordings

To access the list of sound recordings.

Once in a list, you can then select a sound file and press **OK** to access the menu options listed below.

Send by...

To send the selected sound file via *E-mail* (see page 25), via *Infrared* (see page 13) or *MMS* (see page 34). Note that sound files from *Recordings* folder cannot be sent via MMS.

Set as ringer

To set the selected sound as ringer.

As SMS/MMS To set the selected sound as the **Messages ringer**. This option must be activated in the menu **Settings > Sounds** (see page 39).

Rename To **Rename** the selected sound file.

Delete / Delete all To **Delete** the selected sound file or all files at once.

Picture album



This menu allows you to display and modify the images stored in your mobile phone. The options are:

Get more... To launch the WAP application and download new image files. For more information, see page 22.

View all To access all your image files in a single list.

My images To access the images you have downloaded.

Protected images To access the list of copyright protected sample images.

Icons To access the list of icons you have downloaded.

Inside the folders, images are displayed as a text list. Select an image and press **►** to view the image. Pressing **OK** gives you access to the menu options listed below.

Send by... To send the selected image file via **E-mail** (see page 25), via **Infrared** (see page 13) or **MMS** (see page 34). Note that you cannot send pictures that are protected by copyright.

Set as wallpaper To set the selected picture as wallpaper.



Modify picture Use this menu to access the following options:

- **Add text** To add text to the selected picture. Enter your text in the editing screen and press **OK**. Use the navigation keys to move the text on the screen: short press to move the text 1 pixel at a time, long press for 5 pixels. Press **◀ Back** to go back to the text editor, or **☑ OK** to validate and go to the next option.

- *Add frame or icon*

To add a frame or an icon to the selected picture.

- *Eraser*

To *Undo* the last modification made on the picture, or to *Reset*, i.e. cancel all changes at once. Press  *Back* to cancel or  *OK* to validate.

- *Send*

To send the selected picture via infrared, E-mail or MMS.

- *Save*

To save the picture with all the changes you have applied.

Rotate

Use this option to rotate the selected image of *-90 degrees*, *+90 degrees* or *+180 degrees*.

View

To display the selected file.

Properties

To display its properties (size, format, resolution, etc.).

Rename

To *Rename* the selected image.

*Delete /
Delete all*

To *Delete* the selected file or all files at once.

Pictures in the Protected images folder cannot be sent nor deleted.

6. Entertainment



Mastermind



The goal of this game is to find the correct combination.

Keys used are the following:



To enter symbols.



To validate the combination.



To change the difficulty level or to start a new game.




To pause/resume the game.

Brick Game



The goal of this game is to destroy bricks by hitting them with a ball. Destroying all bricks give you access to the next level.

Keys used are the following:



To move the racket left or right.



To start the game by throwing the ball left or right.



To pause the game up to 2 min. (after which the screen returns to idle mode and the game is lost).

Snake Game



In this game, you need to use the navigation keys to move the snake and eat the red balls.

7. Operator



This menu contains the services and features provided by your operator. Consequently, the menus described below may vary or may not be available, depending on your subscription. Contact your network operator for more details.

The services provided may involve making a phone call or sending a SMS for which you may be charged.

Services +



This menu option is reserved for operator-specific services. Please contact your operator for more information about these options.

WAP



This menu allows you to access services supplied with your network, such as news, sports, weather, etc.

If your phone was pre-configured, it isn't necessary for you to change the settings described in this section. With some operators, settings can be set remotely.

To launch a WAP session, select [Operator](#) > [WAP](#) > [Homepage](#).

Use or To browse the on-line pages.

Press or To select a highlighted item.
[Select](#)

Press [Back](#) To return to the previous page.

Press or select [Options](#) > [Exit](#) To end the WAP session.


Your mobile phone connects to the network according to the [Access settings](#) you have defined in the menu [Settings](#) > [Network](#) (see page 43). In case of a connection error, the screen displays "Go to menu": press or [Options](#) to access the WAP options (see page 24).


Homepage

This is the link to the first WAP site you access when launching a WAP session. In most cases, this menu item is preconfigured and will connect to your operator's WAP homepage. To change this default homepage see "Options" on page 24.

Bookmarks

This menu allows you to store your favourite WAP site addresses, rename them and access them quickly from the list.


Press  **Options** while browsing, then select **Bookmarks**: the name and URL fields will be automatically filled in with the information of the page you are browsing.

Select **Add bookmark** and start entering the new name for the edit screen to appear. Press , then proceed the same way to enter the URL address.

The **Manage bookmarks** menu allows you to **Delete** or **Edit** the selected bookmark.

Go to URL

This menu allows you to enter a WAP site address and to connect directly when selecting it (a quick way to access WAP addresses without saving them as bookmarks).

All the addresses you enter in this menu and connect to at least once, will appear in a list. Select one of the items and press  to reconnect to the corresponding page, without having to re-enter its complete address.

Settings

In order to access WAP sites, you must first configure a WAP connection profile.

Select profile

To select one of the available profiles, then define the connection settings for each of them.

All connection settings described below apply to the selected profile.

Browser options

To activate or deactivate the downloading of images attached to WAP pages.

Selecting Off will speed up the global downloading time of the pages browsed.

Rename profile

To rename the currently selected profile (start entering the new name for the edit screen to appear).

Cache

To empty an area of the phone's memory where the pages browsed during a WAP session are stored.




Network

- **Homepage**: to change the homepage name and address (start entering the new name for the edit screen to appear).
- **Network access** allows you to select one of the data profiles you have defined in **Settings > Access settings** (see page 43).

- **Bearer** allows you to select the type of network used by the selected profile when launching a connection (see page 43).
- **Proxy address** and **Proxy port** allow you to define a gateway address and port number to be used when launching a WAP connection using the selected profile.
- **Security**: to display the list of installed security **Certificates** (then display its details or delete it), the **Session info** or the **Current certificate**.

Push inbox


This menu allows you to read and manage messages automatically sent to you by the network and / or by your operator.

In some cases, a red "@" sign will be displayed on the screen to inform you that you have received a new push message. Press  or  Read to read it or  Back to go back to idle.

Push messages include URL links for quick access to the corresponding WAP services: a single click on the link will connect to the WAP site for browsing or downloading multimedia files into your handset.

If your push inbox is full, a message will advise you to delete some messages in WAP > Push Inbox.

Options

While browsing, press  **Options** to access:

Homepage	To access the default homepage.
Back	To go back to the previously browsed page.
Forward	To go to the next browsed page.
Refresh	To reload the currently browsed page from its original server.
Set as homepage	To save the currently browsed WAP page as the default homepage.
Save as...	To save images embedded in the pages that are displayed in the Picture album .
Exit	To end a WAP session.
Bookmarks	See page 23 for description of these options.
Go to URL	
Settings	
Push inbox	

8. Messages



Broadcast SMS



This menu allows you to manage the reception of SMS broadcasts regularly transmitted to all subscribers on the network. It gives you access to the following options:

District code

To select the type of messages you want to be permanently displayed on the idle screen (in this case, enter the type in both *District code* and *Topics* menus).

Reception

To set the reception of cell broadcast messages *On* or *Off*.

Topics

To define the type of messages you want to receive. To configure a topic, select *<New>*, enter the code provided by the operator, and, if desired, associate a name. You can also select an existing topic in the list, which you can rename or delete.

You can enter up to 15 different topics in the list. To obtain the codes corresponding to the different topics, contact your operator.

E-Mail



This menu allows you to access your e-mail with your Xenium 9@9h mobile phone. You can send and receive e-mails with attachments from two different e-mail accounts. Depending on your service provider and your subscription, your mobile phone may have been pre-configured with an e-mail account, in which case the parameters are already set.

If not included in your mobile phone contract, you will need to subscribe to an e-mail service in order to send and receive e-mails. In this case, all parameters are communicated to you by your provider.

The sections below describe in detail how to configure your mobile phone for e-mail. To enter special characters, such as @ or %, please see “Text Entry” on page 9.

Settings

To configure an e-mail account, select one and press *OK* to access the menus detailed below.

Rename profile

To rename an account from its default name. If one of the accounts has been pre-configured, it may be locked, in which case it cannot be renamed.

E-mail server

To configure the settings needed to connect to your e-mail service.

Password The password to access your e-mail account.

E-mail address Your e-mail address.

SMTP address The Simple Mail Transport Protocol (SMTP) address. This is the server for your outgoing mail and is usually in a format like smtp.yourmail.com.

POP3 address The Post Office Protocol (POP) address. This is the server for your incoming mail and is usually in a format like pop.yourmail.com.

Login The login (or user name) to access your e-mail account.

You must obtain the POP3 and SMTP addresses from your e-mail service provider.

If you wish to use a GPRS connection to access your e-mail, you may need to use the SMTP server of your mobile service provider to send e-mails.

Advanced

Port POP3 The port number on the POP3 server. This is usually port 110.

Port SMTP The port number on the SMTP server. This is usually port 25.

DNS address The IP address of your Domain Name Server.

SMTP authentication. SMTP authentication is usually set to **Off**. Contact your provider for more information.

Network access

Before you can consult your e-mails, you first need to configure your connection to the internet.

GSM Settings

When you use a GSM connection to connect to the internet, your mobile phone dials a number provided by your network operator and the data is sent and received over this connection, somewhat like a dial-up internet connection from a PC. The GSM connection parameters are described in the table below.

*Phone
number*

This is the number your mobile phone dials to establish a connection. First choose *ISDN* or *Analogic* (depending on your network operator) and then enter the *Phone number* provided by your operator.

*Login &
Password*

The login and password provided by your GSM network operator to access this service.

*Auto
disconnect*

Enter an inactivity time-out value after which the phone will automatically end the call (if a connection was in progress). The value must be over 30 seconds.

GPRS settings

If using GSM is like a dial-up internet connection, a GPRS connection would be the equivalent of broadband. GPRS (or Global Packet Radio Service) is a protocol for sending data rapidly using a radio signal.

To configure a GPRS connection, you may need to provide a a user name and password, although some GPRS connections function without them. You will need to provide the *APN* (or Access Point Name).

Bearer


This menu option allows you to choose which how to establish an internet connection.


- *GSM*: your mobile will only use the GSM network for e-mail connections.
- *GPRS*: your mobile will only use the GPRS network for e-mail connections.
- *GPRS first*: your mobile will first try to connect to the GPRS network. If no GPRS network is available, then it will try with the GSM network.



For these features to work, you must first have entered the corresponding settings.


Inbox E-mail

This menu allows you to connect to your mailbox and download the e-mail headers (sender and subject lines) from the server. You may then choose to retrieve the corresponding e-mails.







1. Select *Inbox E-mail*: your phone automatically connects to the e-mail server and downloads the list of e-mail headers if any (five at a time).
2. If *Next* (or *Previous*) appears at the end (or beginning) of the list, other e-mail headers are pending: select one of the available options and press  to retrieve them.

3. Select a header, and press  to display the [Details](#). The following status icons may appear to each header:

	The e-mail size is too large (over 50 Kb), it cannot be downloaded.
	The e-mail is marked to be deleted (see page 29).

4. If there is no icon next to the header, you can press  and select [Get mail](#) to download the e-mail. Repeat this operation to download each e-mail corresponding to each selected header.

If the e-mail you have received contains attachments (an image, a text file, or another e-mail), they are identified by a specific icon:

	Contains the details of the e-mail header (date and time, sender's e-mail address, etc.), press  to display these details.
	The text of the e-mail itself can be viewed as an attachment, press  to read it (no advanced options in this case).
	A text file (text only, ".txt" format) is attached to the e-mail, press  to read it (no advanced options in this case).




The application needed to manage this attachment isn't available in your phone, or the e-mail is too large to be uploaded.



Another e-mail is attached to the one you received. Up to five e-mails can be attached, although there will be no advanced options.




A picture is attached to this e-mail. Select it in the list and press  twice to store it in your phone (you can rename it if you wish).

You must download and save a picture before you can view it in the [Picture album](#). If there isn't enough memory to store the new picture, you must delete other items (images, sounds, messages, etc.) to free up memory to save the new picture.

An image file may not be accepted by your mobile phone if it isn't in the correct format. Images must be in JPEG, BMP or GIF format.

The optimal image size is 128 x 160 pixels (the dimensions of the screen). If you are transferring images from your home computer, you can use an image editing program to create images of the correct size.

5. Select an e-mail header and press  to access the following options:

Add to names To add the sender's e-mail address to your phonebook, even when you haven't yet downloaded his e-mail.

Select **<New>** to create a new contact, or a name in the list to add or change the e-mail address.

You must have selected the phone phonebook in this case; this menu item will NOT appear if you selected the SIM phonebook.

Delete To mark the e-mail to be deleted (select this option again to unmark it). When you exit the E-mail menu, you will be asked to confirm deletion of the selected item(s) from the e-mail server.

Reply To reply to the sender (whose address will be automatically added to the list). Proceed as described in "Inbox E-mail" on page 27.


Forward To forward the downloaded e-mail to someone else. Proceed as described in "Inbox E-mail" on page 27.

New mail

This menu allows you to send e-mails to one or several recipients at a time, including with an attachment such as a JPEG picture. Once received, your messages can be forwarded and the attachments visualised with the appropriate software.


If you exit the New mail menu before sending your e-mail or if you cancel the sending while it takes place, the e-mail content is deleted without being stored.

Add contacts To select the recipient(s) of your e-mail, provided that you have entered e-mail addresses for contacts saved in your phone phonebook (see "Contacts" on page 49).

After you have added contacts, select one of them and press  to **Change** the e-mail address, **Remove** it from the list.

If you select a contact from the SIM phonebook, an edit window will allow you to enter an e-mail address.

Add media

Allows you to design your message.
Enter the subject and text, then press  to access the next options:

- [Add sound](#) or [Add graphic](#) to attach a sound or a picture to your e-mail,
- [Send now](#) to send it to the selected recipient(s),
- [Modify](#) to redesign your e-mail.


You can only attach one picture (JPEG, GIF or BMP) or one sound at a time. If you accept an incoming call while writing an e-mail, the menu is closed and the phone goes back to idle when you hang up.


SMS



This menu allows you to send text messages using the Short Messaging Service (SMS) and to manage the messages you send and receive.

Archive

This menu allows you to consult all the messages stored in the phone's memory using the [Auto save SMS](#) or [Move to archive](#) options. The [<Delete all SMS>](#) item allows you to delete all SMS at once. When a message is displayed, press  or

 [Options](#) to access the following options: [Delete](#), [Edit SMS](#), [Forward to](#), [Call back](#), [Call handsfree](#).

New SMS

To compose and send an SMS, follow the steps detailed below:


1. Select [New SMS](#), then select one of the following options:

<New>

To write a new message.

Last message

To edit, modify and re-send the last message sent.

This menu also lets you recall the message you were entering and might have lost if you pressed the  key by accident and returned to idle screen.

Template

To select a pre-configured message such as [Can you ring me back on this number?](#)

2. Enter your text and press **OK** to access the next options:

<Add recipient>	You can specify the recipient of your SMS by selecting Enter phone no. or From contact list .
Save	To store the current message and its attachments in the Archive menu.
Add sound	To attach a melody.
Add graphic	To attach an image or an animation.
Input Language	To change the language for typing.


After entering the SMS text, you need to select **<Add recipient>** in order to send the message. If you select **Enter phone no.**, enter the phone number and press **OK**. Then select **Send now** from the list and press **Select**. If you select **From contact list**, choose the entry you want and press **Select**. Then select **Send now** from the list and press **Select**.

You can send up to two attachments of two different types together with your SMS. Images and animations and pictures are exclusive: if you first select an animation and then an image, only the image will be taken into account and vice-versa.

Copyright protected pictures and sounds cannot be sent by SMS.

SMS Inbox

This menu allows you to read SMS messages you have received. The messages are displayed in a list. At the end of the list, the **<Delete All>** item allows you to delete all the messages at once. Deleting old messages is useful to free memory space in order to receive new messages.

When a message is displayed, press **OK** or  **Options** to access the menu options listed below.

Delete	To delete the selected message.
Edit SMS	To edit, modify and resend the SMS to someone.
Reply by SMS	To reply to the sender.
Move to Spam Box	To move the selected message in the Spam Box (this will delete it from the SMS Inbox).

*Add to
blacklist*

To add the sender's phone number to the Firewall blacklist (see page 17 for details).

This option isn't available if the sender's identity (i.e. his phone number) is hidden.

*Move to
archive*

To store messages in the phone memory. You can then consult them in *Messages* > *SMS* > *Archive*. Moving a message to the archive deletes it from the *SMS Inbox* list.

Forward to

To forward the selected message. Note that attachments cannot be forwarded.

*Call
handsfree*

To call the sender of the message handsfree.

Call back

To call the sender of the message (operator- dependent).

Store number

To save the number of the sender if it is attached to the message.

No. extracted

To extract a number included in the message itself, if this number is included in double quotes (several numbers can be included and extracted). **This menu is only visible if there is a number to extract.**

Store melody


To save the melody that was sent with the SMS. **This menu is only visible if there is a melody to extract.**

Store graphic

To save the graphic and/or animation that was sent together with the SMS. **This menu is only visible if there is an image to extract.**

Spam SMS Box

This menu lists all SMS that were rejected via the Firewall option (see "Firewall" on page 16 for details)

on this feature). Select a message in the list and press  **Options** to access the following items:

Add to blacklist To add the sender's phone number to the Firewall blacklist.

This option isn't available if his identity (i.e. phone number) is hidden.

Move to inbox To move the selected message in the SMS Inbox (this will delete it from the Spam Box).

Delete To delete the selected message.

Settings

This menu allows you to configure the SMS settings. The options are:

SMS centre To select your default SMS centre. If not available on your SIM card, you must enter your SMS centre number.

Signature When **On**, allows you to add a signature at the end of your message. You can **Edit**, **Change** or **Save** the signature.

Validity period

To select the length of time your messages are to be stored in the SMS centre. This is useful when the recipient is not connected to the network (and thus cannot receive your message immediately). **This feature is subscription dependent.**

Auto save SMS

When **On**, this option will automatically save messages sent in the **Archive** menu.

Reply path

When **On**, this option allows you to transmit the number of your SMS message centre together with the message. The recipient can then reply using your own SMS centre and not theirs. This speeds up the rate of transmission. **This feature is subscription dependent.**

Delivery report

When **On**, this option will inform you via SMS whether your own SMS was received or not. **This feature is subscription dependent.**

SMS chat

When **On**, allows you to display received SMS on the idle screen. You can then quickly reply to a message received by pressing **OK**, entering your message in the edit screen, and pressing **OK** again.

If you receive an SMS while you are reading one, you can reply to the first one before reading the second. Alternatively, you can press **Back** to exit the first message. The second message then appears on your screen.

MMS



Your mobile phone can also send and receive MMS (Multimedia Messaging Service) messages. With MMS you can send messages that contain pictures, sounds, and text.

When sending MMS messages, your recipient must also have an MMS-enabled phone in order to be able to view your message.

Receiving MMS

If someone sends you an MMS, an icon and a sound alert will inform. If the sender of the message has asked for a **Read report**, a prompt will ask you to send it or not. Once the MMS is downloaded, it is available in **MMS > Inbox** (see below).

If the size of the MMS to download is bigger than the memory available in your phone, you must free memory by deleting data (picture, sounds, etc.). See "Memory status" on page 18.

New MMS

When you select **Create MMS**, you are first asked to enter the contact to whom you wish to send the MMS. You can select one or more existing contacts or enter a new mobile phone number.

Next you will be asked to **Add media**. In the MMS creation screen, five icons allow you to add a **Picture**, add **Text**, add **Sound**, **Send** the message or access the **MMS options**. Use **▲** or **▼** to move from one option to the next and press **Ⓞ** or **⌂** to access the menu.

1. Design your message: add a **Picture**, a **Text** and/or a **Sound**. Press **►** to create more slides.
2. The last icon on the left-hand side lets you access the **MMS options** (see below).
3. Select **Send** to send the MMS to the selected recipient(s).

Pictures are chosen from the **Picture album**. Copyright protected pictures cannot be sent via MMS.

Sounds can be chosen from the **Sound Album** melodies. If you wish to send a sound memo, you need to record it when creating the MMS. In this case,

in **Sound...** menu, select **<Records>**, then **<New>** and follow the procedure that appears on the screen. Recordings previously saved cannot be sent via MMS. The following options are available when creating new MMS messages:

- Add slide** To create a new slide and add it to your slide show. Press ◀ or ▶ to browse slides once you have created several.
- Next slide / Previous slide** To move to the next/previous slide. Note that this option only appears if the MMS contains more than one slide.
- Edit subject** To edit and change or enter the subject of your message.
- Delete slide** To delete the selected page (if there is more than one in the message).
- Save as draft** To save your message as a draft that you can edit, complete and send later on.

Save as template


To save your message as a template, that you can use as a basis for other MMS (e.g. "Happy birthday" type of message).

Preview MMS


To preview the slide show you have created.

Slide duration

To change the value of slide duration set in **Settings > Application settings** (see page 37), and to set a delay between each slide.

Once your message is completed, select **Send now** and press Ⓢ. A progress bar allows you to follow the sending of your message, press  **Cancel** if you wish to cancel the sending. If you saved the MMS as a draft, it will be available in the **Drafts** menu. If you have sent the MMS, it is available in the **Outbox**.

Inbox

You MMS inbox lists all the **Read** and **Unread MMS**, **Notifications**, **Delivery** and **Read reports**. To read a message, select it and press ▶. Press Ⓢ or  **Options** to access the following options:

Play

To switch back to automatic mode: the MMS is then played as a continuous slide show.

Next / previous slide	To move to the next or previous slide. You can also press ◀ or ▶ when viewing the MMS in manual mode. Note that this option only appears if the MMS contains more than one slide.
Save picture	To detach the picture of the current slide and save it in the Picture album .
Save sound	To detach the sound of the current slide and save it in the Sound album .
Close	To close the MMS and go back to the list of options.

Do NOT delete notifications before you have retrieved the MMS, or you will not be able to retrieve the MMS. Notifications are automatically deleted once you have received the full MMS.

Drafts


Lists all messages saved as drafts, or automatically saved if you quit the MMS menu before saving or sending your MMS. You can [Play](#), [Edit](#), [Send](#), view [Details](#) and [Delete](#) drafts.

Templates

Lists all messages saved as templates. You can [Play](#), [Edit](#) and [Delete](#) them.

Outbox

Lists the messages you have [Sent](#) or created but [Not sent](#) yet. You can [Play](#), [Delete](#) or view the [Details](#) of all these messages, [Send](#) or [Forward](#) them to someone.

Messages you have saved can only be sent from the Draft or Outbox folders. You can NOT recover an item (whether message, notification or report) that you have deleted. Press  Back to cancel deletion.

Settings

Your phone may have been pre-configured to directly access the services offered. If not, contact your operator to receive the information items described in the present section and enter them as given. With some operators, access parameters can be set «over the air».

Choose an MMS profile in the list and select [Modify](#) to access the following settings.

Application settings

Retrieval mode

Allows you to choose from:

- **Manual:** you connect manually to the server by selecting a notification in the **Inbox**, selecting **Read** to download, then **Play**.
- **Automatic:** new MMS are directly placed in the **Inbox**. Select the MMS and press **▶** to play it.

This mode is deactivated when roaming.

Validity period

To select how long your MMS will be stored on the server, from **1 hour** to **1 week** (maximum). This is useful when the recipient is not connected to the network (and thus cannot receive your message immediately).

Read report

This option can be set **On** or **Off** and informs you (via an SMS) when the status of the MMS you have sent has changed, i.e. if it was read or deleted.

Delivery report

This option can be set **On** or **Off** and informs you (via an SMS) of the status of delivery, e.g. if your MMS was received or rejected.

Auto save

This option can be set **On** or **Off** and allows you to automatically save the messages sent in the **Outbox** menu.

Slide duration

Allows you to select the duration between each slide of the MMS.

Network settings

Network access

To choose a connection profile from the ones you have set (see “Access settings” on page 43).

Bearer

To select the type of network used when launching a connection: **GSM**, **GPRS** or **GPRS first**.

MMS center


To enter the MMS address of the server you will connect to.

Gateway address Gateway port

To enter the IP and Port numbers of the server's gateway.

My Dictionary



This feature allows you to enrich the T9 dictionary used for writing messages. Select **<New>**, enter the word of your choice and simply press  to save it. For detailed information on entering with T9, please see “T9® text input” on page 9).

9. Settings



This menu allows you to change the settings related to each available option (sounds, time and date, security, etc.) and to customise your phone.

Time and date



Set time

Allows you to set the time using the keypad or with the navigation keys.

You should select your **Time zone** and activate **Daylight savings** (if appropriate) before setting the time.

Clock display

Allows you to select **Analogue**, **Digital**, **Tiny digital** or **No clock** time formats when shown in idle mode.

Set date

Allows you to set the date by pressing the appropriate numeric keys or the navigation keys.

Local zone

Allows you to select your current time zone. When you enter the menu, you are presented with a map of the world that which you can navigate with the up and down navigation keys. Each time zone is identified

according to its position relative to Greenwich Mean Time (GMT) and by the main cities within that time zone.

Summer time

Allows you to set the daylight saving to **On** (in summer time) or **Off** (in winter time). If daylight saving is **On** and you set the time to 12:00, it will automatically switch to 13:00 when turning the option to **Off**.

Sounds

Ringer volume



This option allows you to adjust the volume of your ringer. Press **▲** or **▼** to adjust the volume of your ringer from **Silent** to **Increasing**.

Ringtone

Allows you to select a ringer tone. The list also includes recorded sounds and melodies you saved. Scroll through the list and wait to hear the selected melody being played.

Messages ringer

Allows you to set **On** or **Off** an alert for each time you receive a new message. When **On**, you can select the alert of your choice from the ringers list.

Equaliser

This option allows you to choose from different audio settings. It is only available while a call is in progress. Scroll through the list and wait a few seconds to hear the difference.

Animation sounds

Allows you to switch **On** or **Off** sounds of your mobile phone.

Key tones

Allows you to switch the key tones **On** or **Off**.

Sounds alerts

Allows you to set alert sounds for the following items:

- **Organiser**: when an event programmed in your organiser is due,
- **Missed call**,
- **Battery alert**: when the battery is running low and requires charging,
- **Minute alert** for a beep alert that sounds every minute during a call to help you manage the duration of your call (the beep cannot be heard by the caller).

Select or deselect the item(s) of your choice by pressing ◀ or ▶.

This menu only allows you to set the alert sounds On or Off, NOT the alerts themselves. E.g. setting the

Organiser alert Off will not prevent your phone from displaying the Reminder screen (if you programmed one), but the corresponding sound will not be played.

Vibra alert

Allows you to set the vibra alert **On** or **Off** when receiving a call, when an event set in the organiser is due, when you receive a message and when the alarm rings.

The vibra alert is always **Off** when you connect the charger or the Cigarette Lighter Adapter.

Silent

When this mode is **On**, all alerts are deactivated and the vibra alert is active.

The Silent mode also applies to key tones.

Security



This menu allows you access the features relating to the security of your mobile phone and the data you store there.

Change codes

Allows you to change your **PIN** and **PIN 2** codes, as well as the call Barring code. Depending on your SIM card, some features or options may require a PIN2 secret code given to you by your operator.

If you enter a wrong PIN code 3 times, your SIM card is blocked. To unblock it, request the PUK code from your operator or retailer. If you enter an incorrect PUK code 10 times in a row, the SIM card will be blocked and unusable. If this happens, contact your operator or retailer.

PIN protection

This allows you to set the PIN protection **On** or **Off**. When **On**, you will be asked to enter your PIN code when switching your phone on.

You cannot change your PIN code if this option is Off.

Public names

Allows you to manage a specific names list called **Public Names** list, and restrict calls to this list via the **Call restriction** option.

This feature is subscription dependent and requires a PIN2 code (see page 40).

Public names	Allows you to consult, edit and modify your Public Names list via a PIN2 code.
---------------------	---

Call restriction

Allows you to restrict the calls to the **Public names** list when **Public only** is selected.

This feature is subscription dependent and requires a PIN2 code (see page 40). This option might also apply to WAP and e-mail connections over GPRS.

Call barring

Allows you to limit the use of your phone to specific calls. This can be applied to **Incoming calls** (**All calls** or **When roaming**) and/or to **Outgoing calls** (**All calls**, **International calls** and **Intl. Exc. Home**). In both cases, the **Cancel** option applies to all calls at once. The Status option allows you to know whether a type of call is barred or not.


This feature is network dependent and requires a specific call barring password supplied by your service provider.

Profiles



A profile is a group of predefined settings that allow you to quickly adapt your phone to your environment. Selecting **Meeting**, for

example, will set your ringer volume to silent, activate the vibrating alert and deactivate the key tones (the other items are set according to your *Personal* settings). When your meeting is over, selecting *Personal* will reactivate all your usual settings. The details of each profile are displayed when selecting a profile.

You can also associate a hotkey with a profile (e.g., long press key  to activate *Outdoors*). Long pressing the same key deactivates it and returns you to your *Personal* settings. For more information, see “Hotkeys” on page 45.

Personal	The information that appears here will depend on how your mobile phone has been configured.	
Autonomy	<i>Vibra alert</i>	On
	<i>Ringtone</i>	Medium
	<i>Backlight</i>	10 sec
	<i>Animation</i>	Off
Headset	<i>Ringtone</i>	Medium

Car	<i>Ringtone</i>	High
	<i>Backlight</i>	On
Outdoors	<i>Ringtone</i>	High
Meeting	<i>Vibra alert</i>	On
	<i>Ringtone</i>	Silent
	<i>Key tones</i>	Off

Autonomy



This menu gives you a direct access to the features that consume the most energy and allows you to improve your battery life by quickly changing each setting.

Display



This menu allows you to configure how the menus are displayed on screen.

Deactivating most of the functions in this menu increases battery life (see “Autonomy” above).

Backlight intensity

Allows you to choose from different levels of backlight intensity.

Wallpaper

Allows you to set the wallpaper of the main screen **On** or **Off**. The wallpaper is not displayed in idle when the **World clock** option is **On** (see page 12).

External LED

Allows you to set the feature **On** or **Off**. When **On**, the LED icon on the flip will flash upon an event (SMS received, call missed, receiving call, battery charging):

- when receiving a call,
- when an alarm is triggered,
- upon an event (call missed, SMS received, etc.),
- according to network availability.

Backlight

Backlight is activated when receiving incoming calls or messages, browsing menus, etc. Select one of the available values.

Network



Contact your phone operator to have full information about GPRS availability over its network and for an appropriate subscription.


You might also need to configure your phone with the

GPRS settings supplied by your operator, by using the menus described in this section. Then select the bearer (GSM or GPRS) in the menus of each application to be used (e.g. WAP, MMS, e-mail, etc.).

Access settings

This menu allows you to create different data profiles that can be used for connecting to various services: for example, when using WAP or when sending MMS, the selected profile will be used to connect to the GSM or GPRS network.

Options described below are operator and/or subscription dependent. Error messages during connections are mainly due to incorrect parameters: contact your operator before first use, in order to have the appropriate settings, which you may receive by SMS in some cases. Some pre-configured profiles might be locked, preventing re-programming and renaming.

Select an item in the list and press  to access the following options:

Change name

To rename the selected profile.

Show

To display all parameters of the selected profile.

GSM Settings

To change the GSM settings:

- **Login & Password**,
- **Phone number** needed to establish the connection and provided by your operator (**ISDN** or **Analogue**),
- **Inactivity time**, a value of over 30 seconds after which the phone disconnects automatically (if a connection was in progress).

GPRS settings

To change the GPRS settings:

- **Login**,
- **Password**,
- **Inactivity time**
- the **APN** menu allows you to enter the address of the external data network you want to connect to, a text string used to establish the connection.

GPRS attach

This menu allows you to define how your mobile phone connects to the GPRS service.

Always on

Your phone automatically connects to the GPRS service (if available). This option allows quicker access to GPRS features, but increases energy consumption.

For data calls

Your phone will connect to the GPRS service only when required. This option reduces energy consumption, but increases the connection delay.

Register again

Provides you with a list of the networks available in the area when the **Manual** mode is selected. Select the network you want to register with and press **Ⓢ** to confirm.

Preferred list

Allows you to build a network list in order of preference. Once defined, the phone will try to register on the network, according to your preferences.




Shortcuts



This feature allows you to configure shortcuts to the features and options you access most frequently.

Hotkeys

Allows you to set up direct access to a specific function or a contact by linking it to a key. A long press on the key in idle mode will then automatically activate the function or call the associated number (*Flash dial*).

A number of Hotkeys have been preconfigured, e.g.  for Silence, but you can reprogram them (keys from  to  only). The following keys are locked:



Call voice mailbox.







Dial international call.



Change language used.

Depending on your service provider, other hotkeys may be predefined and locked.

1. In the list, select a key from  to  and press **OK**. If the key was already programmed, select **Change**.
2. Browse the list to select the function you wish to associate with this key and press  or  **Select**.




If you select *Flash dial*, you will be asked to select a contact in the contacts list.


3. To use a hotkey, press and hold the programmed key when in idle mode.


Voice command

Allows you to set up a direct access to a specific function by linking it to a voice tag.

You can associate a voice command to most functions supported by the hotkeys.



1. Select **<New>**, then browse the list to select a function and press  or  **Select**.
2. When **Press OK and speak** appears, record your voice tag. Make sure you are in a quiet environment, choose a short and simple word and clearly pronounce it.
3. The next menu gives you access to **Delete**, **Play**, **Change function** and **Change voice** options. Press  **Back** to create another voice tag.

To use the voice command, press and hold  when in idle mode, then say the recorded voice tag.

To reprogram a voice command: select it, press  **OK** and select **Change function**. This will bring you to the list of available functions.


Voice dial

Allows you to set a voice tag that will dial the default number for the corresponding contact simply by saying the voice tag. To set up voice dial, proceed as follows:

1. Select **<New>**, then a contact in the list, then press  or  **Options**.

When the phonebook in phone is selected, choose the number of your choice in the list that is displayed.

2. When **Add voice tag?** appears, follow the instructions displayed on the screen.

To use the voice dial, press and hold  when in idle mode, then say the voice tag corresponding to the number you want to dial.





Up to 15 voice tags can be defined and shared between voice dial and voice command. Recorded voice tags are available in their respective menu and can be deleted, played or changed.

Quick Call

This feature allows you to set your four preferred or most frequently dialled numbers. You can then quickly call one of them by selecting the corresponding icon or picture on the screen, thereby removing the need to enter and browse the **Contacts** list. See “Quickcall” on page 6 for details.

Language



This menu allows you to select a language for all menu texts. Use  or  to browse the list and select a language by pressing  or  **Select**.

10. FM Radio



FM Radio

This menu allows you to listen to the radio on your phone. Connect the headset connector to your phone. There are 3 ways to tune to a station: *Manual Tune*, *Manual Search* and *Auto Tune*.



Manual Tune


You can use ▲ or ▼ for manual tune and radio stations scan. Short press on ▲ or ▼ will change the radio frequency.

Manual Search

Long press on ▲ or ▼ will do a radio station scan. The search will stop once a nearest station is found and the screen will show the frequency where it stops.

Auto Tune

When you select *Auto Tune*, the channel will be searched automatically. When the auto tune is in process, all the keys are made unavailable except  and .

After you have selected the way to tune a station, you can press  to access the following options:

Saved to preset Save the current radio frequency to selected presets.

Radio preset Show list of radio frequency presets.

Set frequency Set a frequency for listening or saved it into a preset.


When you starts manually tuning from a preset station, the preset number will be removed.

Auto Tune Automatically scan for radio frequency and then saved it into the 20 preset stations.


Play in background Listen to radio station without quitting the radio application.

Help Describe terminology and list the keys that is used in the radio application.



Change a radio using Radio Presets

This menu allows you to use ◀ or ▶ to go through the radio presets. If you are currently listening to a non-preset station, press ◀ or ▶ to go to the nearest preset station. You can also press  *Option* and select *Radio preset* to display to list of preset stations.

Play in background

If you need to activate other application while listening to the radio, you can press  *Option* and select *Play in background*. Then you can access other menus with radio playing at the background.

Stop radio

Press  or  to exit the radio menu.

Events during radio playing

When you have an incoming phone call while listening to the radio, the radio will stop playing until you have picked up or rejected the call. When you have an incoming message while listening to the radio, the radio will continue to play and you will hear a beep sound for the event.

11. Contacts



Contacts are stored in one of the two available phonebooks: in your SIM card (number of entries depending on capacity) or in your phone (up to 999 names). When entering new names, they will only be added to the phonebook you have selected.

Settings



This menu contains the settings for configuring the phonebooks for your mobile phone.

Delete all

To delete all contacts at once. This option only applies to the onboard phonebook, not to the SIM phonebook.

Select contacts

This menu allows you to select the phonebook to use, either *In SIM* or *In phone*. Press ▲ or ▼ to select a phonebook. Contacts added to the selected phonebook can then be copied into the other, via the *Copy to SIM* or *Copy to phone* options.

Your mobile phone only manages one phonebook at a time and will ignore the information relative to the other one, e.g. if "Smith" is present in both phonebooks and if you delete it in the phone, it remains unchanged in the SIM.

Status

Select this menu to display the total number of contacts you have saved in each phonebook, out of the total number available.

Copy to phone

This option will copy the content of your SIM card into your phone. If you cancelled or aborted the automatic copy of your SIM phonebook when you first switch on your phone, you can do it manually with this option.

Copy to SIM

This option will copy the phone names on your phone into your SIM card. If you cancelled or aborted the automatic copy of your SIM phonebook when you first switch on your phone, you can do it manually with this option.

Selecting this option twice will duplicate all the names.

Contacts list



It is in this menu that you can manage the names, telephone numbers, and e-mail addresses of your contacts. You can also access the [Names list](#) directly from the home screen by pressing ▾.

Adding contacts to the SIM phonebook

1. Select [<New>](#) in the list.
2. Enter the name and the number of your choice, then the type of number allocated to the name ([Phone](#), [Fax](#) or [Data](#)) and press [OK](#) to store this name in your phonebook.

A number is limited to 40 digits, depending on your SIM card. Entering international prefix, country and area codes allows you to dial a number from any location.

Adding contacts in the phone phonebook

1. Select [<New>](#) in the list.
2. Enter the first, then last name (up to 20 latin characters); one of the two fields can be empty, but not both.
3. Then select the [Number type](#). Numeric fields can hold up to 40 digits and one "+" sign and alphanumeric fields (e-mail and note) feature up

to 50 latin characters. Each contact can feature a maximum of 5 numeric fields (e.g. 2 mobile numbers, 3 work numbers, an e-mail address and a text note).

If you wish to personalise this contact with a picture and/or a sound, see below.

Own numbers

The [Own numbers](#) item that appears in the contacts list allows you to store your own phone number. We advise that you enter your mobile number as well as any other relevant information.

Although all its fields can be empty, the Own numbers item cannot be deleted.

Emergency number

The emergency number will call the emergency services number in your country. In most cases, you can call this number even if you haven't yet inserted a SIM card or entered your PIN.

In Europe the standard emergency number is 112, in the UK it is 999.

Edit and manage contacts

Press **▼** when in idle mode to access the phonebook.
To search for a given name:

1 to **9** Press the key for the letter that you want to go to in the list (e.g. press **U** twice to access the letter "U"). The first record starting with this letter is selected in the list.

****** Press this key then enter the first letters of the name you are searching, and press **OK** to go directly to that name.

You can also use the <Search> item appearing in the phonebook.

In the SIM phonebook

Choose a contact in your SIM phonebook and press **OK** or **Options** to access the following options:

Call	Voice dial	Add to blacklist
Call handsfree	Flash dial	Copy to phone
Send SMS	Delete	Details
Send MMS	Change	

In the onboard phonebook

Choose a contact of your phone phonebook and press **OK** or **Options** to access the following options:

Call handsfree	Call	Change name
Send SMS	Show	Select picture
Send MMS	Delete	Select sound
Send by infrared	Add to blacklist	

Select **Show** to access the list of numbers or fields saved for this contact. Select **<New>** to create a new field or select one of the number and press **Ⓢ** to access a second set of additional options, among which are:

Make default The first number you enter becomes the default number which is automatically dialled when pressing **☎**. This option allows you to set another default number.

Copy to SIM card To copy a contact of your phone phonebook into the SIM phonebook (it is then always updated when switching phonebooks or when using another phone).

Show To display the details of the selected field.


Change type	To change or to define the field type of the selected number.
Change	To change the number of the selected field.
Voice dial	To set a voice tag that will call the contact when pronounced (see page 46).
Flash dial	To set a direct access to this contact by linking to a key (see page 45).

Alphanumeric fields (note and e-mail) can only be changed or deleted.

Adding picture and sound to contacts

Contacts stored in the phone phonebook can be personalised with a picture and/or a sound.

This function is only available when you select the onboard phonebook.

1. Select a contact and press **OK** or  **Options**.
2. In the list, choose **Select picture** to add a picture from the Picture album and choose **Select melody** to open the list of ringers and add a melody.

When the contact calls, the picture and/or sound associated with this contact will be displayed/played.

The picture associated with a contact is also used for the Quickcall feature. When you change it, it is also updated in the Quickcall settings.

12. Call Info



The menus described in this section are used for managing how your Xenium 9@9h mobile phone handles calls and their related costs.

Call list





This menu provides you with the list of outgoing and incoming calls, attempts at auto redialling and call details. The different types of calls - calls made, calls missed and calls received - are represented by different icons. They are displayed in chronological order with the most recent on top. If the correspondent is listed stored in your contacts, the corresponding name is displayed.

Reset

To reset the whole list at once and delete all listed calls.

Call list

Select a number in the list, and press  to redial the number or press **OK** or  **Options** to access the options: **Details**, **Call** or **Call handsfree** this correspondent, **Send SMS**, **Send MMS**, **Delete** the

selected call or **Store** the associated number (if not already in your phonebook). **Add to blacklist** allows you to add the sender's phone number to the Firewall blacklist (see page 17).

This option isn't available if the sender's identity (i.e. his phone number) is hidden.

The menu **Rejected calls** lists all calls that have been rejected via the Firewall option (see "Firewall" on page 16 for details on this feature).

Counters



This menu allows you to track the cost and duration of your calls. Most options mentioned below are subscription dependent.

GPRS counters

The GPRS counter allows you to monitor the amount of data received via GPRS sessions. This feature is subscription and network dependent.

Mobile session

This option will display the last connection session or transfer volume of your mobile phone (e.g. after a WAP connection over GPRS).

PC session This option will display the last connection session or transfer volume of your PC transmission.

The call counters managed by your mobile phone might differ from the ones used by your operator. You should therefore consider the call counters displayed on the screen as informative items, but NOT as the actual charge rate basis.

GSM counters

This feature is used for keeping track of your incoming and outgoing GSM calls. Please note that the **GSM call counters** do not include WAP connections.

Last call info To display the duration and/or cost of your last call.

Total duration To **Show** or **Reset** the time duration of **Outgoing** or **Incoming** calls.

Total cost

To display the accumulated cost and to set the counter to zero (may be protected by PIN/PIN2 codes).

- **Show** how much has been spent based on the **Charge rate**.
- **Reset** the current total cost.
- **Show balance** to check the remaining credit (based on the **Cost limit**).
- **Cancel cost limit**
- **Cost limit** to enter the cost limit used in the Show balance menu.
- **Charge rate** to set the rate per unit. First enter the currency used (3 characters maximum), then enter the cost per unit.

Settings




This menu allows you to set all the options related to calling: call forwarding, call waiting, etc.

Info at call end

To set **On** or **Off** the systematic display of the length and/or cost of each call when hanging up.

Any key answer

When **On**, this options allows you to accept a call by pressing any key, except  (used to reject a call).

Call waiting

With GSM call Applies to **All calls**, **Voice calls**, **Fax calls** and **Data calls**. When this option is active, you hear a beep if someone tries to call you while already on a call. Select the **Status** option to find out whether the GSM call waiting is active or not.

With GPRS call Allows you to set **On** or **Off** the call waiting for voice incoming calls while a GPRS connection is ongoing.

Caller ID

To **Show** or **Hide** your identity to your correspondent. The **Status** will inform you on which option is activated.

Call forward

To divert incoming calls to your mailbox or to a number (whether in your contacts or not) and applies to: **Data calls**, **Voice calls** and **Fax calls**.

Unconditional Will divert all the incoming calls. If you select this option, you will not receive any calls until you deactivate it.

Conditional Allows you to choose when you want to divert incoming calls: **If no reply**, **If not reachable** or **If busy**. Each option can be set independently.

Status Will display the status of all call forwarding.

Before activating this option, you must enter your voice mailbox number (see next section). This feature is subscription dependent, and different from the call transfer, which takes place when one/several calls are in progress.

Mailboxes

To enter your voice mailbox numbers (if not available on your SIM card).

In some cases, you might have to enter two numbers: one to listen to your mailbox, the other one to forward calls. Contact your operator for more information.

Active flip

When **On**, this option allows you to pick up an incoming call by simply opening the phone. Closing the phone always hangs up an ongoing communication.

IP Prefix

To set the prefix provided by your operator (up to 10 digits can be stored) in order to make IP calls. This function is subscription and network dependent. Contact your operator for configuration parameters.

Auto redial

When **On**, if the person you are calling is busy, your phone will automatically redial the number until a successful connection is made or until the maximum number of attempts is reached (10). The phone beeps at the beginning of each attempt and emits a special beep if the connection is successful. The time between redials increases with each attempt.

Icons & symbols

In idle mode, several symbols can be displayed simultaneously on the main screen.

If the network symbol isn't displayed, the network is not currently available. You may be in a bad reception area, moving to a different location may help.



Silent - Your phone will not ring when receiving a call.



Vibra - Your phone will vibrate when receiving a call.



GPRS attach - Your phone is connected to the GPRS network.



SMS message - You have received a new message.



Voice mail - You have received a new voice mail.



Battery - The bars indicate the battery level (4 bars = full, 1 bar = low).



Alarm clock activated.



Roaming - Displayed when your phone is registered to a network other than your own (especially when you're abroad).



SMS full - Memory for messages is full. Delete old messages to receive new ones.



Call Forward Unconditional to number - All your incoming voice calls are being forwarded to a number other than voice mail.



Call Forward to voice mailbox - All your calls are being forwarded to voice mail.



Home zone - A zone designated by your network operator. Subscription dependent, contact your service provider for details.



GSM Network: your phone is connected to a GSM network.

Reception quality: the more bars are shown the better the reception is.



SMS Chat - option is set to **On**.



Memory full - The phone's memory is full. Delete items to store new ones.



MMS message - You have received a new multimedia message.



Wap message - You have received a message in the wap push inbox.



Auto switch on/off - option is set to **On**.

Precautions

Radio Waves



Your cellular mobile phone is a **low power radio transmitter and receiver**. When it is operating, it sends and receives radio waves. The radio waves carry your voice or data signal to a base station that is connected to the telephone network. The network controls the power at which the phone transmits.

- Your phone transmits/receives radio waves in the GSM frequency (900 / 1800 / 1900 MHz).
- The GSM network controls transmission power (0.01 to 2 watts).
- Your phone complies with all relevant safety standards.
- The CE mark on your phone shows compliancy with European electromagnetic compatibility (Ref. 89/336/EEC) and low voltage directives (Ref. 73/23/EEC).

Your cellular mobile phone is your responsibility. To avoid damage to yourself, to others or to the phone itself, read and follow all the safety instructions and make them known to anyone borrowing your phone. Furthermore to prevent unauthorised use of your phone:



Keep your phone in a safe place and keep it out of small children's reach.

Avoid writing down your PIN code. Try to remember it instead.

Switch off the phone and remove the battery if you are going to leave it unused for a long time.

Change your PIN code after purchasing the phone and to activate call restriction options.



The design of your phone complies with all applicable laws and regulations. However your phone may cause interference with other electronic devices. Consequently you should follow all **local recommendations and regulations** when using your cellular phone both at home and when away. **Regulations on the use of cellular phones in vehicles and aircraft are particularly stringent.**

Public concern has been focused for some time on the possible health risks for users of cellular phones. The current research on radio wave technology, including the GSM technology, has been reviewed and safety standards have been drawn up to ensure protection from exposure to radio wave energy. Your cellular telephone **complies with all applicable safety standards** and the Radio Equipment and

Telecommunications Terminal Equipment Directive 1999/5/EC.

Always switch off your phone...

Inadequately protected or **sensitive electronic equipment** may be affected by radio energy. This interference can lead to accidents.



Before boarding an **aircraft** and/or when packing the phone in your luggage: the use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.



In **hospitals**, clinics, other health care centres and anywhere else where you may be in the close vicinity of **medical equipment**.



In areas with a potentially **explosive atmosphere** (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders).

In a vehicle transporting flammable products (even if the vehicle is parked) or a vehicle powered by liquefied petroleum gas (LPG), check first that the vehicle complies with the applicable safety rules.

In areas where you are requested to turn off radio transmitting devices, such as quarries or other areas where blasting operations are in progress.



Check with the vehicle manufacturer that **electronic equipment** used in your vehicle will not be affected by radio energy.

Pacemakers

If you have a **pacemaker**:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breastpocket.
- Use the ear opposite to the pacemaker to minimise the potential interference.
- Switch off your phone if you suspect that interference is taking place.

Hearing aids

If you are a user of a **hearing aid**, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

Improved performance

In order to improve the performance of your phone, reduce radio energy emission, reduce battery consumption and ensure safe operation adhere to the following guidelines:



For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position (when not using in hands-free mode or with a hands-free accessory).

- Do not expose your phone to extreme temperatures.
- Treat the phone with care. Any misuse will void the International Guarantee.
- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.
- Placing and receiving calls consumes the same amount of battery energy. However, the mobile consumes less energy in idle screen when kept in the same place. When in idle screen and while you are moving, your phone consumes energy to transmit updated location information to the network. Setting the backlight for a shorter period of time as well as avoiding unnecessary navigating in the menus will also help to save the battery's

energy for longer phoning and stand-by performances.

Battery information

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat (>60° C or 140° F), moisture or caustic environments.



You should only use Philips Authentic battery and accessories, as the use of any other accessories may damage your phone and may be dangerous, and will make all guarantees for your Philips phone null and void. The use of an incorrect type of battery may also cause an explosion.

Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine Philips replacement parts.

Your mobile phone and your car



Studies have shown that speaking on the telephone while driving lowers your concentration, which can be dangerous.

Adhere to the following guidelines:

- Give your full attention to driving. Pull off the road and park before using the phone.
- Respect the local regulations in countries where you drive and use your GSM phone.
- If you want to use your phone in a vehicle, install the hands-free car kit which is designed for that purpose.
- Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

The use of an alarm system to operate a vehicle's light or horn to indicate incoming phone calls is prohibited on public roads in some countries. Check local regulations.

EN 60950 Norm

In hot weather or after prolonged exposure to the sun (e.g., behind a window or a windscreen), the temperature of your phone's casing might increase, especially when featuring a metallic finish. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40° C or below 5° C.

Environmental care



Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old phone and please promote their recycling.

Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



Disposal of your product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



The labelled packaging material is recyclable.



A financial contribution has been made to the associated national packaging recovery and recycling system.



The plastic material is recyclable (also identifies the type of plastic).

Troubleshooting

The phone does not switch on

Remove/reinstall the battery. Then charge the phone until the battery icon stops scrolling. Unplug from charger and try to switch the mobile on.

The display shows BLOCKED when you switch on

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The display shows IMSI failure

This problem is related to your subscription. Contact your operator.

Your phone doesn't return to the idle screen

Long press the hangup key or switch off the phone, check that the SIM card and the battery are installed correctly and switch it on again.

The network symbol is not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place, try to reconnect to the network (especially when abroad), check that the antenna is in

place if your mobile has an external antenna, or contact your network operator for assistance/information.

The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your battery seems to over heat

You might be using a charger that was not intended for your phone. Make sure you always use the Philips authentic accessory shipped with your phone.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display *Call 1* or *Withheld* instead. Contact your operator for detailed information on this subject.

You can't send text messages

Some networks don't allow message exchanges with other networks. First check that you entered the number of your SMS centre, or contact your operator for detailed information on this subject.

You can't receive and/or store JPEG pictures

A picture may not be accepted by your mobile phone if it is too large, if its name is too long, or if it doesn't have the correct file format.

You have the feeling that you miss some calls

Check your call divert options.

During battery charge, the battery icon shows no bar and the outline is flashing

Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).

In other cases please contact your phone supplier.

The display shows SIM failure

Check that the SIM card has been inserted in the right position. If the problem remains, your SIM card may be damaged. Contact your operator.

When attempting to use a feature in the menu, the mobile displays NOT ALLOWED

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows INSERT YOUR SIM CARD

Check that the SIM card has been inserted in the right position. If the problem remains, your SIM card might be damaged. Contact your operator.

The autonomy of your phone seems lower than indicated in the user guide

The autonomy is linked to your settings (e.g., ringer volume, backlight duration) and the features you use. To increase the autonomy, and whenever possible, you must deactivate features you do not use.

Your phone doesn't work well in your car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performances. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

Check with local authorities if you are allowed to use the phone whilst driving.

Your phone is not charging

If your battery is completely flat, it might take several minutes of pre-charge (up to 5 minutes in some cases) before the charging icon is displayed on the screen.

Philips Authentic Accessories

Some accessories, such as a battery and a charger, are included as standard in the package of your mobile phone. Additional accessories may also be provided or sold separately. Package contents may therefore vary.

To maximise the performance of your Philips mobile phone and not to void the warranty, always purchase Philips Authentic Accessories that are specially designed for use with your phone. Philips Consumer Electronics cannot be held liable for any damage due to use with non authorised accessories.

Charger

Charges your battery in any AC outlet. Small enough to carry in a briefcase/handbag.

Carry case

Protects your phone from nicks and scratches.

Data connect kit

Provides easy data connection to your Philips mobile phone. The USB cable enables high speed communication between your phone and your computer. The provided software allows you to download pictures and melodies and to synchronise your contacts and appointments.

Trademark declaration



Tegic Euro. Pat.
App. 0842463

T9® is a trademark of Tegic
Communications Inc.

Specific Absorption Rate Information

International standards

THIS MOBILE PHONE MEETS THE INTERNATIONAL RECOMMENDATIONS FOR EXPOSURE TO RADIO WAVES

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) energy defined by the international standards. These recommendations have been established by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) and, the Institute of Electrical and Electronics Engineers (IEEE) that forecast a substantial safety margin for assuring the protection of all persons, regardless of age and health.

The exposure recommendations for mobile phones use a measurement unit known as the Specific Absorption Rate (SAR). The SAR limit recommended by the ICNIRP for the mobile phones used by the general public is **2,0W/kg averaged over ten grams of tissue** and, is 1,6W/kg averaged over one gram of tissue by IEEE Std 1528 for the head.

Tests for SAR have been conducted using recommended operating positions with the mobile phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR levels of the mobile phone while operating are generally below the maximum SAR value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the international protection standards for exposure to radio waves.

The highest SAR value for this Philips Xenium 9@9h model phone when tested for compliance against the standard was 0,944W/kg for ICNIRP.

For limiting the radio waves exposure, it is recommended to reduce the mobile phone call duration or to use a headset. The purpose of those precautions is to take the mobile phone away from the head and the body.

Limited warranty

1. What Does This Limited Warranty Cover?

Philips warrants to the original retail purchaser (“Consumer” or “You”) that this Philips cellular product and all accessories originally provided by Philips in the sales package (“Product”) are free from defects in materials, design and workmanship under normal use in accordance with the operating instructions and pursuant to the following terms and conditions. This limited warranty extends only to the Consumer for Products purchased and used in the original country of purchase. The limited warranty is valid only in Philips’ intended country of sales of the product.

2. How Long is The Limited Warranty Period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase of the Product, documented by valid proof of purchase. The limited warranty for original Philips rechargeable battery extends for six (6) months from the date of purchase.

3. What Will Philips Do if The Product is Not Free From Material Defects in Materials and

Workmanship During The Limited Warranty Period?

During the limited warranty period, Philips or its authorized service representative will, at its option either repair or replace, without charge for parts or labour, a materially defective Product with new or refurbished parts or Product and return such repaired or replaced Product to the Consumer in working condition. Philips will retain defective parts, modules or equipment.

Repaired or replaced Product will be covered by this limited warranty for the balance of the original limited warranty period or ninety (90) days from the date of repair or replacement whichever is longer. Repair or replacement of Product, at Philips’ option is your exclusive remedy.

4. What is Not Covered By This Limited Warranty?

This limited warranty does not cover:

- a) Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation handling, neglect, inundation, fire, water or other liquid intrusion; or

- b) Product that has been damaged due to repair, alteration, or modification by anyone not authorized by Philips; or
 - c) Product that has reception or operation problems caused by signal conditions, network reliability or cable or antenna systems; or
 - d) Product defects or problems caused by uses with non-Philips products or accessories; or
 - e) Product which warranty/quality stickers, product serial number or electronic serial number has been removed, altered or rendered illegible; or
 - f) Product purchased, used, serviced, or shipped for repair from outside the original country of purchase, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or
 - g) Product returned without valid proof of purchase or which proof of purchase has been altered or is illegible.
 - h) Normal wear and tear or Force Majeure.
5. How Do You Get Warranty Service?
- a) Return the Product to an authorized service center of Philips. You may contact the local Philips office for the location of the nearest authorized service center.
 - b) The SIM card must be removed from the Product before it is given to Philips. Philips assumes no liability for damaged or loss of the SIM card or the data contained therein.
 - c) If the Product failure is not covered by this limited warranty, or this limited warranty is inapplicable, void or invalid due to any terms and conditions stated herein, the Consumer will be charged for the cost of repair or replacement of the Product and all other related cost incurred in repairing or replacing the Product.
 - d) IMPORTANT - you are required to return the Product together with a valid proof of purchase which must identify the point of purchase, date of purchase, Product model and Product serial number clearly.
6. Other Limitation: This Warranty is The Entire Agreement.
- EXCEPT FOR THE EXPRESS WARRANTIES SET FORTH ABOVE AND THOSE IMPLIED BY LAW AND WHICH CANNOT BE EXCLUDED OR MODIFIED BY AGREEMENT, PHILIPS PROVIDES NO OTHER WARRANTY WHETHER EXPRESS OR IMPLIED (WHETHER BY STATUTE, UNDER THE OPERATION OF LAW OR OTHERWISE) AND SPECIALLY DISCLAIMS

ANY WARRANTY OF SATISFACTORY QUALITY MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PHILIPS' TOTAL LIABILITY FOR DAMAGES RELATING TO OR ARISING OUT OF THE PURCHASE OR USE OF THE PRODUCT, REGARDLESS OF THE TYPE OR CAUSE OF SUCH DAMAGE OR THE FORM OR CHARACTERISATION OF THE CLAIM ASSERTED (E.G. CONTRACT OR TORT), SHALL NOT EXCEED THE ORIGINAL PURCHASE PRICE PAID FOR THE PRODUCT.

HOWEVER IN NO EVENT SHALL PHILIPS BE LIABLE FOR ANY PUNITIVE, SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES (INCLUDING BUT NOT LIMITED TO THE LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS, LOST BUSINESS OPPORTUNITIES, COST OF SUBSTITUTION OF GOODS OR SERVICES, INVESTMENTS, DAMAGE TO GOODWILL OR REPUTATION, OR LOSS OF DATA AND CLAIMS BY THIRD PARTIES) RESULTING FROM PURCHASE OR USE OF THE PRODUCT, TO THE FULLEST EXTENT ALLOWED BY LAW, WHETHER OR NOT PHILIPS HAS BEEN

ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THESE LIMITATIONS SHALL APPLY NOTWITHSTANDING THE FAILURE OF THE ESSENTIAL PURPOSE OF ANY LIMITED REMEDY.

This limited warranty represents the complete and exclusive agreement between the Consumer and Philips with respect to this cellular Product and it supercedes all prior agreements between the parties, oral or written, and all other communications between the parties relating to the subject matter of this limited warranty. No carrier, retailer, agent, dealer, employee, thereof, or employee of Philips is authorized to make modifications to this limited warranty and you should not rely on any such representation.

This limited warranty does not affect the Consumer's statutory rights under applicable national laws in force.

Declaration of conformity

We,
Philips Electronics Hong Kong Ltd
Business Group Mobile Phone
5/F, Philips Electronics Building
5 Science Park Avenue
Shatin New Territories
Hong Kong

declare under our sole responsibility that the product
CT9A9H
Cellular Mobile Radio GSM 900/1800
TAC number: 35430001

to which this declaration relates, is in conformity with
the following standards:

EN 301 489-1: V1.5.1 (2004-11)
EN 301 489-7: V1.2.1 (2002-08)
EN 301 511 V9.0.2 (2003-03)
EN 55022: 1998+A1: 2000+A2: 2003
EN 50360 July 2001, EN 50361 July 2001
EN 60950-1: 2001+A11: 2004
EN 61000-3-2:2000+A1: 2001
EN 61000-3-3:1995+A1: 2001

We hereby declare that all essential radio test suites
have been carried out and that the above named
product is in conformity to all the essential
requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in
Article 10 and detained in Annex IV of directive
1999/5/EC has been followed with the involvement
of the following Notified Body: BABT, Belfour
House, Churchfield Road, Walton-On-Thames, Surrey,
KT12 2TD, UK

Identification mark: **0168** (Notified Body)

January 30th, 2007



Quality Manager