

**PHILIPS**

Television

6808 Series

# User Manual

24PHS6808  
32PHS6808

Register your product and get support at  
[www.philips.com/TVsupport](http://www.philips.com/TVsupport)

# Content

---

<b>1 Home Screen Overview</b>	<b>4</b>	<b>9.3 TV Guide on Freeview Play</b>	<b>27</b>
<b>2 Get Support</b>	<b>5</b>	<b>10 Videos, Photos and Music</b>	<b>28</b>
2.1 Identify and Register your TV	5	10.1 From a USB Connection	28
2.2 TV Help and User Manual	5	10.2 From a Computer or NAS	28
2.3 TV Diagnose and Self-diagnose	5	10.3 Photos	28
2.4 Consumer Care / Repair	5	10.4 Videos	28
		10.5 Music	29
<b>3 Quick Guide</b>	<b>7</b>	<b>11 Open TV Setting Menus</b>	<b>30</b>
3.1 Remote Control	7	11.1 Quick Menu and Frequent Settings	30
3.2 IR sensor	10	11.2 All Settings	30
3.3 Batteries and Cleaning	10		
<b>4 Setting Up</b>	<b>11</b>	<b>12 Wireless and Networks</b>	<b>40</b>
4.1 Read the Safety Instructions	11	12.1 Home Network	40
4.2 TV Placement	11	12.2 Connect to Network	40
4.3 Turn on TV	11	12.3 Wireless and Network Settings	40
<b>5 Connections</b>	<b>13</b>	<b>13 Smart TV and Apps</b>	<b>42</b>
5.1 Connectivity guide	13	13.1 Setup Smart TV	42
5.2 Antenna	13	13.2 Store of Apps	42
5.3 Satellite	13	<b>14 Netflix</b>	<b>43</b>
5.4 Video Device	13	<b>15 Rakuten TV</b>	<b>44</b>
5.5 Audio Device	13	<b>16 Amazon Prime Video</b>	<b>45</b>
5.6 Mobile Device	14	<b>17 YouTube</b>	<b>46</b>
5.7 Other Device	15	<b>18 Alexa</b>	<b>47</b>
5.8 Computer	16	18.1 About Alexa	47
		18.2 Using Alexa	47
<b>6 Switch Source</b>	<b>17</b>	<b>19 Google Assistant</b>	<b>48</b>
6.1 Source List	17	<b>20 Software</b>	<b>49</b>
6.2 Rename Device	17	20.1 Update Software	49
		20.2 Software Version	49
<b>7 Channels</b>	<b>18</b>	20.3 Automatic Software Update	49
7.1 About Channels and Switch Channels	18	20.4 View Software Update History	49
7.2 Install Channel	18	<b>21 Environmental</b>	<b>51</b>
7.3 Channel List	23	21.1 European Energy Label	51
7.4 Favourite Channels	24	21.2 EPREL Registration Number	51
7.5 Text / Teletext	24		
<b>8 TV Guide</b>	<b>26</b>		
8.1 What You Need	26		
8.2 Using the TV Guide	26		
<b>9 Freeview Play (for UK models)</b>	<b>27</b>		
9.1 About Freeview Play	27		
9.2 Using Freeview Play	27		

21.3 End of Use	51
21.4 UK Declaration of Conformity	51
<b>22 Specifications</b>	<b>52</b>
22.1 Power	52
22.2 Reception	52
22.3 Display Resolution	52
22.4 Supported Input Resolution	52
22.5 Sound	52
22.6 Multimedia	52
22.7 Connectivity	53
<b>23 Troubleshooting</b>	<b>54</b>
23.1 Tips	54
23.2 Switch On	54
23.3 Remote Control	54
23.4 Channels	54
23.5 Satellite	55
23.6 Picture	55
23.7 Sound	56
23.8 HDMI	56
23.9 USB	56
23.10 Wi-Fi and Internet	57
23.11 Wrong Menu Language	57
<b>24 Safety and Care</b>	<b>58</b>
24.1 Safety	58
24.2 Screen Care	59
<b>25 Terms of Use</b>	<b>60</b>
<b>26 Copyrights</b>	<b>61</b>
26.1 HDMI	61
26.2 HEVC Advance	61
26.3 Dolby Audio	61
26.4 Wi-Fi Alliance	61
26.5 Other Trademarks	61
<b>27 Open Source</b>	<b>62</b>
27.1 Open Source Software	62
27.2 Open Source License	62
<b>28 Disclaimer regarding services and/or software offered by third parties</b>	<b>66</b>
<b>Index</b>	<b>67</b>

# 1. Home Screen Overview

---

To enjoy the benefits of your Smart TV, connect the TV to the Internet. Press **⬆ (Home)** on your remote control to get your Home screen. Like on your smartphone or tablet, the Home screen is the centre of your TV. From the Home screen you can decide what to watch by browsing entertainment options from apps and live TV.

The Home screen is organized in rows to let you discover great contents from your favourite apps. Apps may populate their recommendation (if available) according to their own choice as an individual row in the home screen.

## Highlights on your home screen

With multiple tabs like **Home**, **Free channels**, **Apps** and **🔍 Search**, you can discover movies and shows from your services and popular apps. The **Free channels** tab is a collection of free online contents including news, TV and movies, life style, entertainment, sports, music, kid and comedy channels. The **Apps** tab is an app collection to let you rent movies online, read newspapers, watch videos and listen to music, also shop online, or watch TV programmes when it suits you with On-line TV. You can also trigger input field for searching with **🔍 Search** tab.

## Favourite Apps

Your favourite Apps are placed on the first row. This row contains number of apps pre-installed. The order of these apps are according to business agreements with content service providers. In this row you will also find the Apps, like **Watch TV**, **Internet Browser**, **Media** and others.

## Live TV

Live TV row shows the currently running programmes from the installed channels.

## YouTube and Netflix

This row contains your Recommended, Subscriptions or Trending YouTube and Netflix videos.

## Accessing settings from Home

You can access **All Settings** menu via the icon at the top right corner. You can also find the **Frequent settings** and **Quick menu** with common settings in the Philips TV Menu, which can be invoked directly from the remote control.

## TV Guide

Select **☰ TV Guide** to open the TV Guide of your installed TV channels.

## Sources

Select **➡ SOURCES** to view and change to available sources in this TV.

**Note:** If your installed country is Germany, there will be additional **Public Value** tab on home screen to list **Featured** apps.

---

## 2. Get Support

---

### 2.1. Identify and Register your TV

#### Identify your TV - TV model number and serial number

You might be asked to provide the TV product model number and serial number. Find these numbers on the packaging label or on the type label on the back or bottom of the TV.

#### Register your TV

Register your TV and enjoy a range of benefits including full support (including downloads), privileged access to information about new products, exclusive offers and discounts, the chance to win prizes and even participate in special surveys about new releases.

Go to [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

---

### 2.2. TV Help and User Manual

#### ↑ (Home) > Settings > Help

You can use Help function to diagnose and get more information about your TV.

- **TV information** - View the Model name, Serial number and Software version of your TV.
- **How to** - You can see instructions on how to install channels, sort channels\*, update TV software, connect external devices and use Smart functions on your TV.
- **TV diagnose** - Run the TV diagnose to check the condition of your TV.
- **Self-diagnose** - You can check if the picture, sound, network and other settings are working fine.
- **Update software** - Check available software updates.
- **User manual** - Read the user manual for TV information.
- **Troubleshooting** - Find a solution for frequently asked questions.
- **Factory settings** - Reset all settings to factory settings.
- **Reinstall TV** - Reinstall and redo the complete TV installation.
- **Contact info** - Show the telephone number or web address for your country or region.

\* Sorting channels is only applicable for certain countries.

\*\* Ambilight setting is only for models which support Ambilight function.



---

### 2.3. TV Diagnose and Self-diagnose

#### TV diagnose

You can run the TV diagnose test to check the condition of your TV. At the end of the diagnose, TV will clear the cache memory and close any unused apps to continue the smooth functioning of your TV.



To run the TV diagnose test:

- 1 - Select  **Quick Menu** >  **Help** > **TV diagnose** and press **OK**.
- 2 - Select **Start** to run a series of diagnostic tests.
- 3 - When the test is completed, you can view the status of following items.
  - Power
  - Picture
  - Sound
  - Connect external devices
  - Network
  - TV tuner
  - Clear cache memory
  - Apps
- 4 - Select **OK** to close the result page and go back to **TV diagnose** wizard.
- 5 - Press **← Back** to exit from **TV diagnose**, select **Self-diagnose** to do other diagnostic check, select **View results** to view the result page again.

#### Self-diagnose

Self-diagnose can help you to do troubleshooting of your TV by checking the configurations of the TV.

To run the Self-diagnose:

- 1 - Select  **Quick Menu** >  **Help** > **Self-diagnose** and press **OK**.
- 2 - Select following items to check the configurations.
  - **Check the TV** - You can check if the picture, sound and other settings are working fine..
  - **Check the network** - Check the network connection.
  - **Check the remote control** - Perform the test to verify the TV bundled remote control functionality.
  - **View weak signal history** - Display the list of channel numbers that were automatically saved when signal strength was weak.
  - **Optimize internal storage** - Free up space in TV's internal storage for optimal performance.

---

## 2.4. Consumer Care / Repair

For support and repair, call the Consumer Care hotline in your country. Our service engineers will take care of a repair, if necessary.

Find the telephone number in the printed documentation that came with the TV.  
Or consult our website [www.philips.com/TVsupport](http://www.philips.com/TVsupport) and select your country if needed.

### TV model number and serial number

You might be asked to provide the TV product model number and serial number. Find these numbers on the packaging label or on the type label on the back or bottom of the TV.

### **⚠ Warning**


Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

# 3. Quick Guide

## 3.1. Remote Control

### Key Overview

#### Top (Type 1)

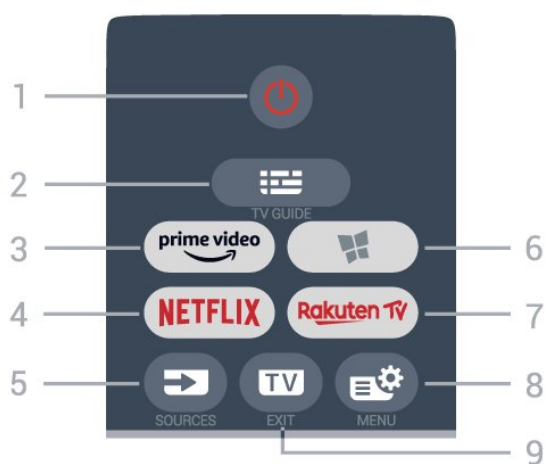

#### 1 - Standby / On

To switch the TV on or back to Standby.

#### 2 - TV Guide

To open or close the TV Guide.

#### 3 - prime video

To launch the Amazon **prime video** App.

#### 4 - **NETFLIX**

To open the Netflix App directly. With the TV switched on or from standby.

- If you have a Netflix membership subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.

- To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby. [www.netflix.com](http://www.netflix.com)

#### 5 - SOURCES

To open or close the Sources menu.

#### 6 - Apps

To open the **Apps** tab for Apps on Home screen.

#### 7 - Rakuten TV

To launch the **Rakuten TV** App.

#### 8 - Quick Menu/MENU


To open the Quick Menu with typical TV functions. Hold the **MENU** key to show the Gaming control bar when game signal detected and game mode enabled.

#### 9 - TV - EXIT

To switch back to watch TV or to stop an interactive TV

application. When TV is on Standby mode, press the key can directly go to the last viewed TV source.

#### Top (Type 2)

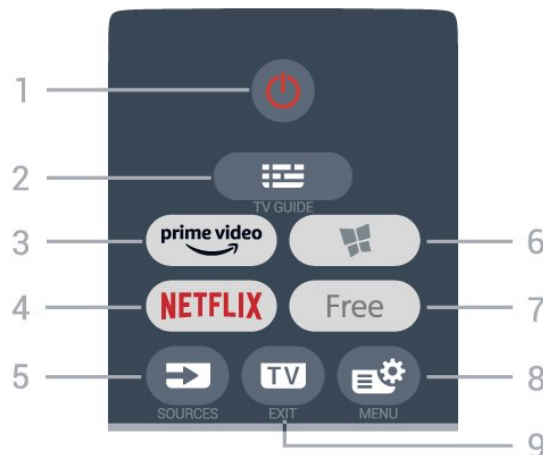

#### 1 - Standby / On

To switch the TV on or back to Standby.

#### 2 - TV Guide

To open or close the TV Guide.

#### 3 - prime video

To launch the Amazon **prime video** App.

#### 4 - **NETFLIX**

To open the Netflix App directly. With the TV switched on or from standby.

- If you have a Netflix membership subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.

- To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby. [www.netflix.com](http://www.netflix.com)

#### 5 - SOURCES

To open or close the Sources menu.

#### 6 - Apps

To open the **Apps** tab for Apps on Home screen.

#### 7 - **Free**

To launch the **Free chnnels** App.

#### 8 - Quick Menu/MENU


To open the Quick Menu with typical TV functions. Hold the **MENU** key to show the Gaming control bar when game signal detected and game mode enabled.

#### 9 - TV - EXIT

To switch back to watch TV or to stop an interactive TV application. When TV is on Standby mode, press the key can directly go to the last viewed TV source.

---

## Top (for UK models, Type 1)

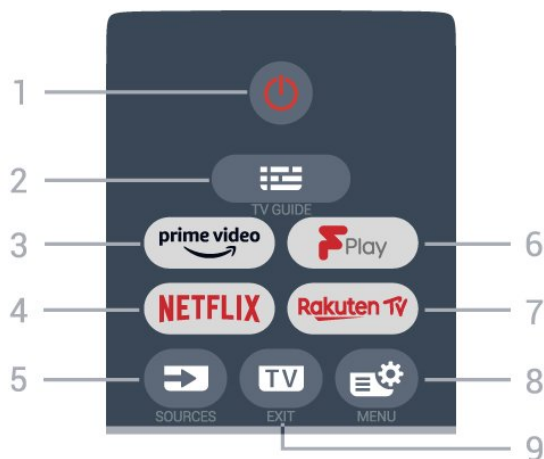

### 1 - Standby / On

To switch the TV on or back to Standby.

### 2 - TV Guide

To open or close the TV Guide.

### 3 - prime video

To launch the Amazon **prime video** App.

### 4 - **NETFLIX**

To open the Netflix App directly. With the TV switched on or from standby.

- If you have a Netflix membership subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.

- To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby. [www.netflix.com](http://www.netflix.com)

### 5 - SOURCES

To open or close the Sources menu.

### 6 - Freeview Play

To launch Freeview Play.

### 7 - Rakuten TV


To launch the Rakuten TV App.

### 8 - Quick Menu/MENU

To open the Quick Menu with typical TV functions. Hold the **MENU** key to show the Gaming control bar when game signal detected and game mode enabled.

### 9 - TV - EXIT

To switch back to watch TV or to stop an interactive TV application. When TV is on Standby mode, press the key can directly go to the last viewed TV source.

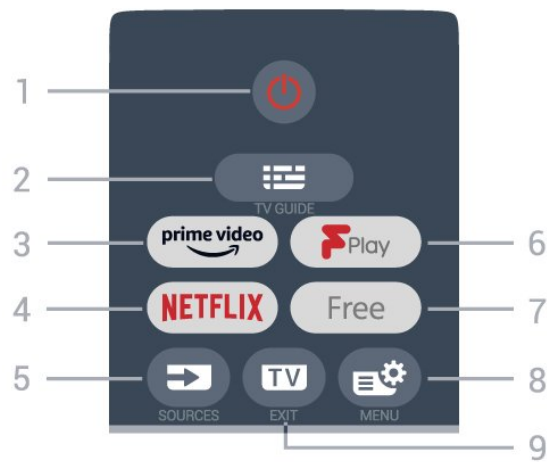

### 1 - Standby / On

To switch the TV on or back to Standby.

### 2 - TV Guide

To open or close the TV Guide.

### 3 - prime video

To launch the Amazon **prime video** App.

### 4 - **NETFLIX**

To open the Netflix App directly. With the TV switched on or from standby.

- If you have a Netflix membership subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.

- To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby. [www.netflix.com](http://www.netflix.com)

### 5 - SOURCES

To open or close the Sources menu.

### 6 - Freeview Play

To launch Freeview Play.

### 7 - Free

To launch the **Free** chnnels App.

### 8 - Quick Menu/MENU

To open the Quick Menu with typical TV functions. Hold the **MENU** key to show the Gaming control bar when game signal detected and game mode enabled.

### 9 - TV - EXIT

To switch back to watch TV or to stop an interactive TV application. When TV is on Standby mode, press the key can directly go to the last viewed TV source.

---

## Middle

---

## Top (for UK models, Type 2)





**1 - OK key**

To confirm a selection or setting. To open the channel list while watching TV.


**2 - Back**

To switch back to the previous channel you selected.  
To return to previous menu.  
To go back to the previous App/Internet page.

**3 - OPTIONS**

To open or close the options menu.

**4 - Colour keys**

Direct selection of options. Blue key , opens **Help**.

**5 - Arrow / navigation keys**

To navigate up, down, left or right.






**6 - Home**

To open the Home menu.

**7 - Search**


To open the **Search** tab on Home screen.

**8 - Playback**

- Play , to playback.
- Pause , to pause playback
- Stop , to stop playback
- Rewind , to rewind
- Fast forward , to go fast forward

---

**Bottom**

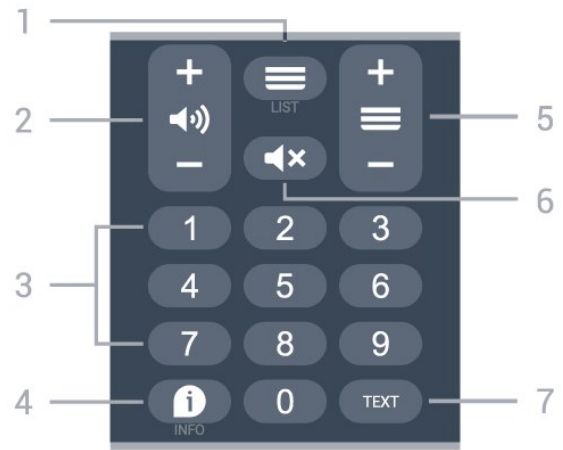

**1 - Channel list**

To open the channel list.

**2 - Volume**

Press + or - to adjust the volume level.

**3 - Number keys**

To select a channel directly.

**4 - INFO**

To open or close programme info.

**5 - Channel**

Press + or - to switch to the next or previous channel in the channel list. To open the next or previous page in Text/Teletext.

**6 - Mute**

To mute the sound or to restore it.

**7 - TEXT**

To open or close Text/Teletext.

---

**Bottom (for UK models)**



**1 - Channel list**

To open the channel list.

**2 - Volume**

Press + or - to adjust the volume level.

**3 - Number keys**

To select a channel directly.

#### 4 - **INFO**

To open or close programme info.

#### 5 - **Channel**

Press + or - to switch to the next or previous channel in the channel list. To open the next or previous page in Text/Teletext.

#### 6 - **Mute**

To mute the sound or to restore it.

#### 7 - **Apps**

To open the **Apps** tab for Apps on Home screen.

---

## 3.2. IR sensor

The TV can receive commands from a remote control that uses IR (infrared) to send commands. If you use such a remote control, always make sure you point the remote control at the infrared sensor on the front of the TV.



#### **Warning**

Do not put any objects in front of IR sensor of the TV, it may block the IR signal.

---

## 3.3. Batteries and Cleaning

### Replace batteries

Refer to the **Quick Start Guide** in your product package for detailed information about the remote control batteries.

If the TV does not react on a key press on the remote control, the batteries might be empty.

To replace the batteries, open the battery compartment on the back of the remote control.

1 - Slide the battery door in the direction shown by the arrow.

2 - Replace the old batteries with new batteries. Make sure the + and the - ends of the batteries line up correctly.

3 - Reposition the battery door and slide it back until it clicks.

- Remove the batteries if you are not using the remote control for a long time.
- Safely dispose of your old batteries according to the end of use directions.

For more information, in **Help**, select **Keywords** and look up **End of use**.

### Cleaning

Your remote control is treated with a scratch-resistant coating.

To clean the remote control, use a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the remote control.

# 4. Setting Up

## 4.1. Read the Safety Instructions


Please read the safety instructions before you use the TV.

To read the instructions, in **Help > User manual**, press the colour key **— Keywords** and look up **Safety and Care**.

## 4.2. TV Placement

### Tips on Placement

- Position the TV where light does not shine directly on the screen.
- The ideal distance to watch TV is 2 to 5 times its diagonal screen size. When seated, your eyes should be level with the centre of the screen.
- Recommended distance to the wall:
  - A. When wall mounted, position the TV 7 to 10 cm away from the wall.
  - B. When TV is with stand, position the TV 10 to 20 cm away from the wall depends on the size of stand.

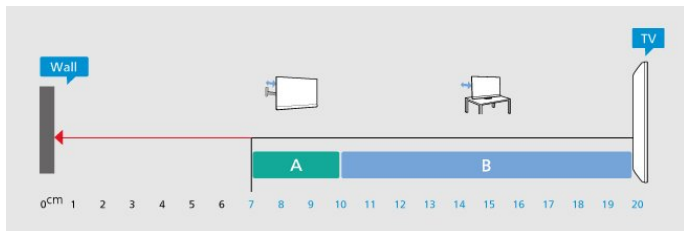

### Note:

Please keep the TV away from dust-producing sources such as stoves. It is suggested to clean the dust regularly to avoid getting dust into the TV.

### TV Stand

You can find the instructions for mounting the TV stand in the Quick Start Guide that came with the TV. In case you lost this guide, you can download it from [www.philips.com/TVsupport](http://www.philips.com/TVsupport).


Use the model number of the TV to look for the **Quick Start Guide** to download.

## Wall Mounting

Your TV is also prepared for the wall mount bracket (sold separately).

The wall mount size may vary depending on different type of back cases; refer to the **Quick Start Guide** in your product package to see which size is applied to your TV.


Use the following wall mount dimension when purchasing the wall mount.

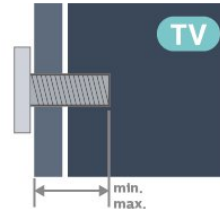

- 24PHS6808  
75x75, M4 (min.: 8 mm, max: 10 mm)
- 32PHS6808  
100x100, M4 (min.: 8 mm, max: 10 mm)
- 43PFS6808  
100x100, M6 (min.: 8 mm, max: 11 mm)

### Note

For 32 inch model, make sure the larger mounting pad or bracket will not interfere with power connector. It is suggested to use the mounting pad smaller than 135 mm x 135 mm.

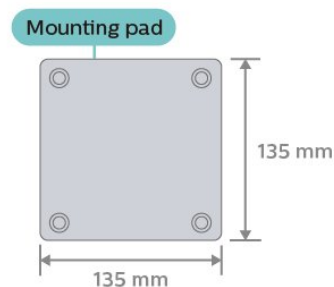

### Caution

Wall mounting the TV requires special skills and should only be performed by qualified personnel. The TV wall mounting should meet safety standards according to the TV's weight. Also read the safety precautions before positioning the TV.

TP Vision Europe B.V. bears no responsibility for improper mounting or any mounting that results in accident or injury.

---

## 4.3. Turn on TV

### Connect Power Cable

- Insert the power cable into the **POWER** connector on the back of the TV.
- Make sure the power cable is securely inserted in the connector.
- Make sure that the power plug, in the wall socket, is accessible at all times.
- When you unplug the power cable, always pull the plug, never pull the cable.



Although this TV has a very low standby power consumption, unplug the power cable to save energy if you do not use the TV for a long period of time.

### On or Standby


Before you switch on the TV, make sure you plugged in the mains power in the **POWER** connector on the back of the TV.

#### Switch On

Press the small joystick key on the bottom of the TV.



#### Switch to standby

To switch the TV to standby, press  on the remote control. You can also press the small joystick key on the bottom of the TV.

In standby mode, the TV is still connected to the mains power but consumes very little energy.

To switch off the TV completely, disconnect the power plug.


When disconnecting the power plug, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

# 5. Connections

## 5.1. Connectivity guide

Always connect a device to the TV with the highest quality connection available. Also, use good quality cables to ensure a good transfer of picture and sound.

When you connect a device, the TV recognizes its type and gives each device a correct type name. You can change the type name if you wish. If a correct type name for a device is set, the TV automatically switches to the ideal TV settings when you switch to this device in the Sources menu.

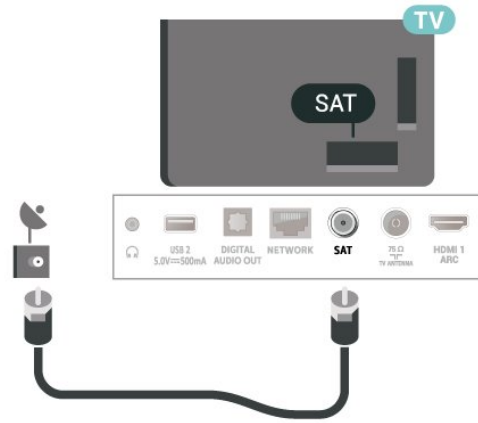


## 5.2. Antenna

Insert the antenna plug firmly into the **Antenna** socket at the back of the TV.

You can connect your own antenna or an antenna signal from an antenna distribution system. Use an IEC Coax 75 Ohm RF antenna connector.

Use this antenna connection for DVB-T and DVB-C input signals.

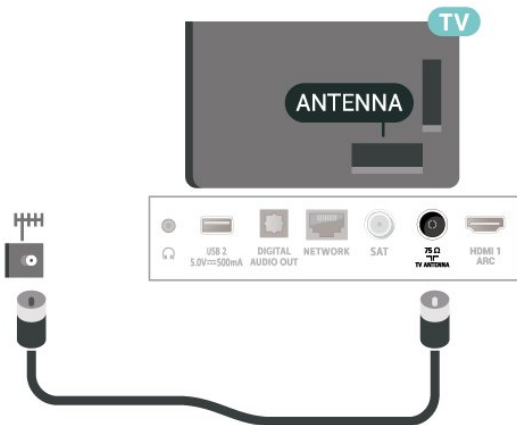

## 5.3. Satellite


Attach the satellite F-type connector to the satellite connection **SAT** at the back of the TV.

## 5.4. Video Device

### HDMI

An HDMI connection has the best picture and sound quality.

For best signal quality transfer, use a High speed HDMI cable and do not use an HDMI cable longer than 5 m, and also connect devices supporting HDR on any one of HDMI connections.

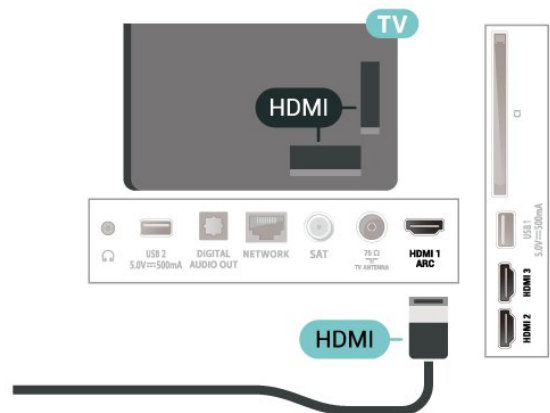

### Copy protection

HDMI ports support HDCP (High-bandwidth Digital Content Protection). HDCP is a copy protection signal that prevents copying content from a DVD disc or Blu-ray Disc. Also referred to as DRM (Digital Rights Management).


---

## 5.5. Audio Device

### HDMI ARC

Only **HDMI 1** on the TV have **HDMI ARC** (Audio Return Channel).


If the device, typically a Home Theatre System (HTS), also has the HDMI ARC connection, connect it to any of the HDMI connections on this TV. With the HDMI ARC connection, you do not need to connect the extra audio cable that sends the sound of the TV picture to the HTS. The HDMI ARC connection combines both signals.

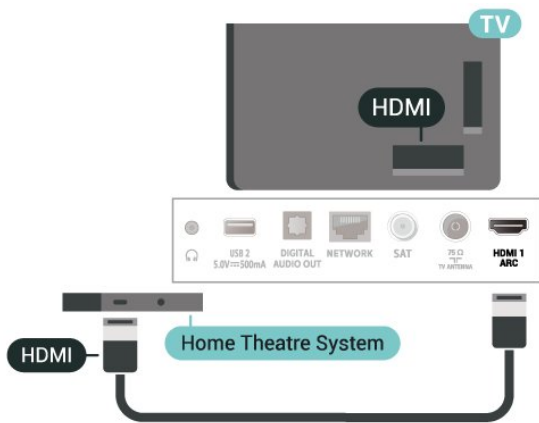

### Digital Audio Out - Optical


Audio Out - Optical is a high quality sound connection.


This optical connection can carry 5.1 audio channels. If your device, typically a Home Theatre System (HTS), has no HDMI ARC connection, you can use this connection with the Audio In - Optical connection on the HTS. The Audio Out - Optical connection sends the sound from the TV to the HTS.

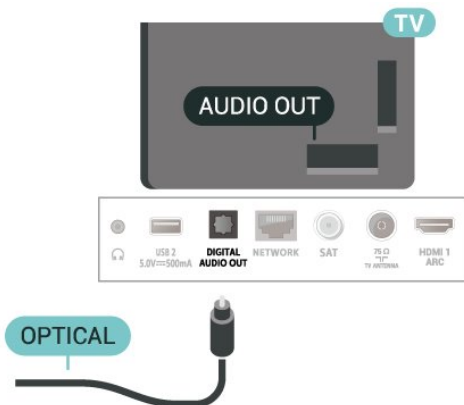

---

## Headphones

You can connect a set of headphones to the  connection on the side of the TV. The connection is a mini-jack 3.5mm. You can adjust the volume of the headphones separately.

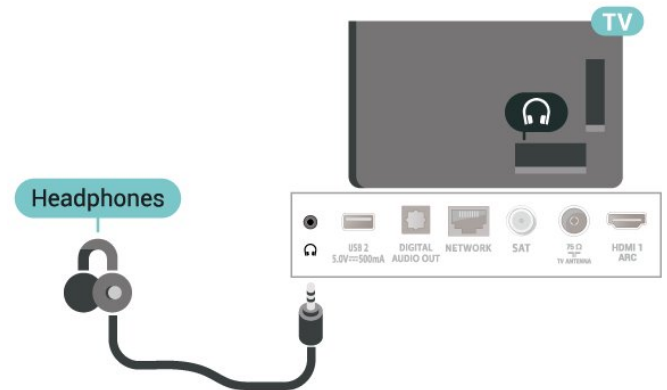

---

## 5.6. Mobile Device

### Screen Mirroring



#### About Screen Mirroring

You can view your photos or play your music and videos from a mobile device on your TV with Screen Mirroring. The mobile device and the TV should be within range, which usually means being in the same room.

---

#### Using Screen Mirroring

##### Switch on Screen Mirroring

Press  **SOURCES** >  **Screen Mirroring**

##### Share a Screen on TV

- 1 - Activate Screen mirroring on your mobile device.
- 2 - On your mobile device, select the TV. (This TV will be displayed as TV model name)
- 3 - Select the TV name on your mobile device, after connection, you can enjoy using Screen Mirroring.

---

##### Stop Sharing

You can stop sharing a screen from the TV or from the mobile device.

##### From the device

With the application you use to start Screen Mirroring,

you can disconnect and stop watching the screen of the device on TV. The TV will switch back to the last selected programme.

### From the TV

To stop watching the screen of the device on TV, you can ...

- press **TV EXIT** to watch a TV broadcast
- press **⬆️ (Home)** to start another activity on TV
- press **➡️ SOURCES** to open the Sources menu and select a connected device.

---

### Block a Device

The first time you receive a request to connect from a device, you can block the device. The request from this device and all its requests in the future, will be ignored.

To block a device...

Select **Block...** and press **OK**.

### Unblock all devices

All previously connected and also blocked devices are stored in the Screen Mirroring list of connections. If you clear this list, all blocked devices will be unblocked.

To unblock all blocked devices...

**⬆️ (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Reset Screen Mirroring connections.**

### Blocking a previously connected device

If you want to block a device that you previously connected, you need to clear the Screen Mirroring connections list first. If you clear this list, you will have to confirm or block the connection for every device again.

---

### Reset Screen Mirroring connections

All previously connected devices are stored in the Screen Mirroring list of connections.

To clear all connected Screen Mirroring devices:

**⬆️ (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Reset Screen Mirroring connections.**

---

### Screen Delay

The normal delay when sharing a screen with Screen Mirroring is about 1 second. The delay might be longer if you are using older devices with less processing power.

## Apps - Philips TV Remote App

The **Philips TV Remote App** on your smartphone or tablet is your new TV buddy. The app lets you switch channels and adjust the volume — just like a remote control.

Download the Philips TV Remote App from your favourite app store today.

The Philips TV Remote App is available for iOS and Android and is free of charge.

Alternatively, you can go **⬆️ (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Remote app QR code** and press **OK**; a QR code will be presented on TV screen. Scan the QR code with your mobile device and follow the instruction to download and install the Philips TV Remote App. When using the app, your mobile device and Philips TV need to connect to the same Wi-Fi network.

### Get connected



[www.philips.com/c-w/country-selectorpage/tv/tv-remote-app.html](http://www.philips.com/c-w/country-selectorpage/tv/tv-remote-app.html)

---

## 5.7. Other Device

### CAM with Smart Card - CI+

#### About CI+

This TV is ready for the CI+ Conditional Access.

With CI+ you can watch premium HD programmes, like movies and sports, offered by digital TV operators in your region. These programmes are scrambled by the TV operator and descrambled with a prepaid CI+ module. Digital TV operators provide a CI+ module (Conditional Access Module - CAM) and an accompanying smart card, when you subscribe to their premium programmes. These programmes have a high level of copy protection.

Contact a digital TV operator for more information on terms & conditions.



---

## Smart Card

Digital TV operators provide a CI+ module (Conditional Access Module - CAM) and an accompanying smart card, when you subscribe to their premium programmes.


Insert the smart card into the CAM module. See the instruction you received from the operator.

To insert the CAM in the TV...

1. Look on the CAM for the correct method of insertion. Incorrect insertion can damage the CAM and TV.
2. While looking at the back of the TV, with the front of the CAM facing towards you, gently insert the CAM into the slot **COMMON INTERFACE**.
3. Push the CAM in as far as it will go. Leave it in the slot permanently.

When you switch on the TV, it may take a few minutes before the CAM is activated. If a CAM is inserted and subscription fees are paid (subscription methods can differ), you can watch the scrambled channels supported by the CAM smart card.

The CAM and smart card are exclusively for your TV. If you remove the CAM, you will no longer be able to watch the scrambled channels supported by the CAM.

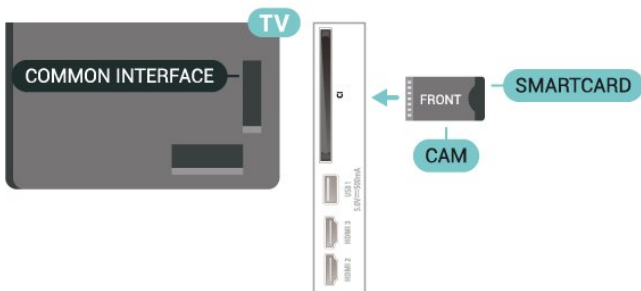


4. Select the TV operator of the CAM. The following screens come from the TV operator. Follow the on-screen instruction to look up the PIN code setting.

## USB Flash Drive

You can view photos or play your music and videos from a connected USB flash drive. Insert a USB flash drive in one of the **USB** connections on the TV while the TV is switched on.

The TV detects the flash drive and opens a list showing its content.

If the contents list does not appear automatically, press **SOURCES** and select **USB**.

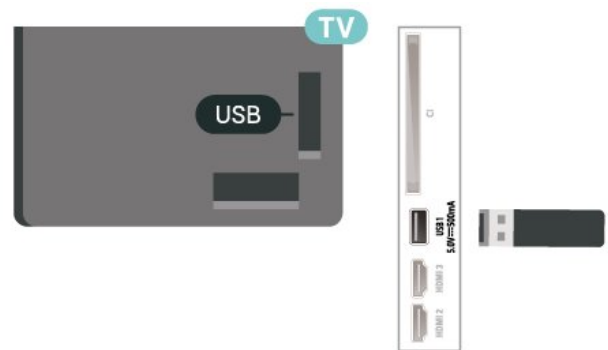

For more information on watching or playing content from a USB flash drive, in **Help**, press the colour key **Keywords** and look up **Photos, Videos and Music**.

---

## 5.8. Computer

You can connect your computer to the TV and use the TV as a PC monitor. Use an HDMI cable to connect the computer to the TV.

---

## Set Passwords and PIN Codes

For some CAMs, you must enter a PIN code to watch its channels. When you set the PIN code for the CAM, we recommend you to use the same code you are using to unlock the TV.

To set the PIN code for the CAM...

1. Press **SOURCES**.
2. Select the channel type you are using the CAM for.
3. Press **OPTIONS** and select **Common Interface**.



# 6. Switch Source

---

## 6.1. Source List

- To open the sources menu, press **➤ SOURCES**.
  - To switch to a connected device, select the device with the **Arrow / navigation** keys and press **OK**.
  - To view the technical information of the connected device you are watching, press **≡ OPTIONS** and select **Device info**.
  - To close the source menu without switching to a device, press **➤ SOURCES** again.
- 

## 6.2. Rename Device

🏠 (Home) > Settings > General settings > Edit input sources > Source

- 1 - Select one of the device icons, the preset name appears in the typing field and select.
- 2 - Select **Rename** to open on-screen keyboard.
- 3 - Use navigation keys to select characters.
- 4 - Select **Close** when complete the editing.

# 7. Channels

---

## 7.1. About Channels and Switch Channels

### To watch TV channels

- Press **TV**. The TV tunes to the TV channel you last watched.
- Press **⬆️ (Home) > TV > Channels** and press **OK**.
- Press **≡ +** or **≡ -** to switch channels.
- If you know the channel number, type in the number with the number keys. Press **OK** after you entered the number to switch channels.
- To switch back to the previously tuned channel, press **⬅️ Back**.

### To switch to a channel from a channel list

- While watching a TV channel, press **OK** to open the channel lists.
- The channel list can have several pages with channels. To view the next or previous page, press **≡ +** or **≡ -**.
- To close the channel lists without switching channels, press **⬅️ Back** or **TV EXIT**.

### Channel icons

After an Automatic channel update of the channel list, newly found channels are marked with a **★** (star). If you lock a channel, it will be marked with a **🔒** (lock).

### Radio channels

If digital broadcasting is available, digital radio stations are installed during installation. Switch to a radio channel just like you switch to a TV channel.

This TV can receive digital television standard DVB. TV may not work properly with some operators of digital television, non-compliance with requirements of the standard in full.

---

## 7.2. Install Channel

### Antenna and Cable

---

#### Manually Search for Channels and Channel Settings

---

##### Search for Channels

##### Update channels

**⬆️ (Home) > Settings > Install Channels > Antenna/Cable installation > Search for channels**

- 1 - Select **Start now** and press **OK**.

2 - Select **Update channels** to only add new digital channels.

3 - Select **Start** and press **OK** to update channels. This can take a few minutes.

##### Quick reinstall

**⬆️ (Home) > Settings > Install**

**Channels > Antenna/Cable installation > Search for channels**

1 - Select **Start now** and press **OK**.

2 - Select **Quick reinstall** to install all channels again with default settings.

3 - Select **Start** and press **OK** to update channels. This can take a few minutes.

##### Advanced reinstall

**⬆️ (Home) > Settings > Install**

**Channels > Antenna/Cable installation > Search for channels**

1 - Select **Start now** and press **OK**.

2 - Select **Advanced reinstall** to do a full re-installation which takes you through each step.

3 - Select **Start** and press **OK** to update channels. This can take a few minutes.

---

### Channel Settings

**⬆️ (Home) > Settings > Install**

**Channels > Antenna/Cable installation > Search for channels > Advanced reinstall**

1 - Select **Start now** and press **OK**.

2 - Select **Advanced reinstall** to do a full re-installation which takes you through each step.

3 - Select **Start** and press **OK**.

4 - Select the country where you are now and press **OK**.

5 - Select **Antenna (DVB-T)** or **Cable (DVB-C)**, and select one item you need to re-install.

6 - Select **Digital and analogue channels, Only digital channels, or Only analogue channels**.

7 - Select **Settings** and press **OK**.

8 - Press **🔴 Reset** to reset, or press **🟢 Done** when complete the settings.

### Frequency scan

Select the method of searching for channels.

- **Quick**: select the faster method and use the predefined settings used by most cable providers in your country.

- **Full**: If this results in having no channels installed or if some channels are missing, you can select the extended **Full** method. This method will take more time to search for and install channels.

- **Advanced**: If you received a specific network frequency value to search for channels, select **Advanced**.

### Frequency step size

The TV searches for channels in steps of **8MHz**.

If this results in having no channels installed or if some channels are missing, you can search in smaller steps

of 1MHz. Using the 1MHz steps will take more time to search for and install channels.

### Network frequency mode

If you intend to use the fast **Quick** method in **Frequency scan** to search for channels, select **Automatic**. The TV will use 1 of the predefined network frequencies (or HC - homing channel) as used by most cable providers in your country.

If you received a specific network frequency value to search for channels, select **Manual**.

### Network frequency

With the **Network frequency mode** set to **Manual**, you can enter the network frequency value received from your cable provider here. To enter the value, use the number keys.

### Network ID

Enter the network ID supplied by your cable provider.

### Symbol rate mode

If your cable provider did not give you a specific **symbol rate** value to install the TV channels, leave the **Symbol rate mode** setting on **Automatic**.

If you received a specific symbol rate value, select **Manual**.

### Symbol rate

With the **Symbol rate mode** set to **Manual**, you can enter the symbol rate value by using the number keys.

### Free / Scrambled

If you have a subscription and a CAM - Conditional Access Module for pay TV services, select **Free + scrambled**. If you did not subscribe to pay TV channels or services, you can select **Free channels only**.

---

## Automatically Search for Channels

🏠 (Home) > Settings > Install Channels > Antenna/Cable installation > Automatic channel update

If you receive digital channels, you can set the TV to automatically update the list with new channels.

Alternatively, you can start a channel update yourself.

### Automatic channel update

Once a day, at 6 AM, the TV updates the channels and stores new channels. New channels are stored in the All channels list but also in the New channels list. Empty channels are removed.

If new channels are found or if channels are updated or removed, a message is shown at TV start up. The TV must be in standby to automatically update channels.

---

## Channel Update Message

🏠 (Home) > Settings > Install Channels > Antenna/Cable installation > Channel update message

When new channels are found or if channels are updated or removed, a message is shown at TV start up. To avoid this message to appear after every channel update, you can switch it off.

---

## Digital: Reception Test

🏠 (Home) > Settings > Install Channels > Antenna/Cable installation > Digital: reception test

The digital frequency is shown for this channel. If the reception is poor, you can reposition your antenna. To check the signal quality of this frequency again, select **Search** and press **OK**.

To enter a specific digital frequency yourself, use the remote control digit keys. Alternatively, select the frequency, position the arrows on a number with **◀** and **▶** and change the number with **▲** and **▼**. To check the frequency, select **Search** and press **OK**.

---

## Analogue: Manual Installation

🏠 (Home) > Settings > Install Channels > Antenna/Cable installation > Analogue: manual installation

Analogue TV channels can be manually installed, channel by channel.

### • System

To set up the TV system, select **System**. Select your country or the part of the world where you are now and press **OK**.

### • Search Channel

To find a channel, select **Search Channel** and press **OK**. You can enter a frequency yourself to find a channel or let the TV search for a channel. Press **OK**, select **Search** and press **OK** to search for a channel automatically. The found channel is shown on screen and if the reception is poor, press **Search** again. If you want to store the channel, select **Done** and press **OK**.

### • Fine tune

To fine tune a channel, select **Fine tune** and press **OK**. You can fine tune the channel with **▲** or **▼**. If you want to store the channel found, select **Done** and press **OK**.

### • Store

You can store the channel on the current channel number or as a new channel number. Select **Store** and press **OK**. The new channel number is shown briefly.

You can redo these steps until you have found all available analogue TV channels.

---

## Satellite

---

### Search for Satellite and Satellite Settings

🏠 (Home) > Settings > Install Channels > Satellite installation > Search for satellite

#### Reinstall all channels

🏠 (Home) > Settings > Install Channels > Satellite installation > Search for satellite > Reinstall channels

- Select the group of channels you want to install.
- Satellite operators can offer channel packages that bundle free channels (free-to-air) and offer a sorting that suits a country. Some satellites offer subscription packages - a collection of channels you pay for.

#### Connection type

Select the number of satellites you want to install. The TV sets the appropriate connection type automatically.

- **Up to 4 Satellites** - You can install up to 4 satellites (4 LNBS) on this TV. Select the exact number of satellites you wish to install at the start of the installation. This will speed up the installation.
- **Unicable** - You can use an Unicable system to connect the antenna dish to the TV. You can select Unicable for 1 or for 2 satellites at the start of the installation.

#### LNB settings

In some countries, you can adjust the expert settings for homing transponder and each LNB. Only use or change these settings when a normal installation fails. If you have non-standard satellite equipment, you can use these settings to overrule the standard settings. Some providers might give you some transponder or LNB values which you can enter here.

- **Universal or Circular** - The general type of LNB, usually you can select this type for your LNB.
- **Low LO Frequency / High LO Frequency** - The local oscillator frequencies are set to standard values. Adjust the values only in case of exceptional equipment that needs different values.
- **22 kHz Tone** - By default, the Tone is set to Automatic.
- **LNB Power** - By default, LNB Power is set to Automatic.

---

### Automatically Search for Channels

🏠 (Home) > Settings > Install Channels > Satellite installation > Automatic channel update

If you receive digital channels, you can set the TV to automatically update the list with new channels.

Alternatively, you can start a channel update yourself.

#### Automatic channel update

Once a day, at 6 AM, the TV updates the channels and stores new channels. New channels are stored in the All channels list but also in the New channels list. Empty channels are removed.

If new channels are found or if channels are updated or removed, a message is shown at TV start up. The TV must be in standby to automatically update channels.

\* Only available when **Satellite channel list** is set to **From a sorted package**

---

### Channel Update Message

🏠 (Home) > Settings > Install Channels > Satellite installation > Channel update message

When new channels are found or if channels are updated or removed, a message is shown at TV start up. To avoid this message to appear after every channel update, you can switch it off.

---

### Automatic Update Option

🏠 (Home) > Settings > Install Channels > Satellite installation > Automatic update option

Unselect a satellite if you do not want to update automatically.

\* Only available when **Satellite channel list** is set to **From a sorted package**

---

### Manual Installation

🏠 (Home) > Settings > Install Channels > Satellite installation > Manual installation

Manually install satellite.

- **LNB** - Select the LNB for which you want to add new channels.
- **Polarisation** - Select the polarisation you need.
- **Symbol rate mode** - Select Manual to enter symbol rate.
- **Frequency** - Enter the frequency for the transponder.
- **Search** - Search for transponder.

---

## Satellite CAMs

If you use a CAM – a Conditional Access Module with a smart card – to watch satellite channels, we recommend to do the satellite installation with the CAM inserted in the TV.

Most CAMs are used to descramble channels.

CAMs (CI+ 1.3 with Operator Profile) can install all the satellite channels by themselves on your TV. The CAM will invite you to install its satellite(s) and channels. These CAMs not only install and descramble the channels but also handle regular channel updates.

---

## Channel List Copy

### Introduction

**Channel list copy** and **Satellite list copy** are intended for dealers and expert users.

With **Channel list copy/Satellite list copy** you can copy the channels installed on one TV onto another Philips TV of the same range. You can avoid the time-consuming channel search by uploading a predefined channel list on a TV.

### Conditions

- Both TVs are from the same year range.
- Both TVs have the same hardware type. Check the hardware type on the TV type plate on the back of the TV.
- Both TVs have compatible software versions.
- Use a USB flash drive of minimum 1 GB.

---

### Copy a Channel List, Check Channel List Version

#### Copy a channel list to USB flash drive

To copy a channel list...

- 1 - Switch on the TV. This TV should have channels installed.
- 2 - Plug in a USB flash drive to **USB 2\*** port.
- 3 - Select **⬆ (Home) > Settings > Channels > Channel list copy** or **Satellite list Copy** and press **OK**.
- 4 - Select **Copy to USB** and press **OK**.
- 5 - When copying is done, unplug the USB flash drive.

Now you can upload the copied channel list onto another Philips TV.

\* Note: only the USB port that marked with **USB 2** supports copying channel list operation.

#### Check channel list version

**⬆ (Home) > Settings > Channels > Channel list copy** or **Satellite list Copy > Current version**

---

## Upload a Channel List

### To not Installed TVs

Depending on whether your TV is already installed or not, you must use a different method to upload a channel list.

#### To a TV that is not yet installed

- 1 - Plug in the power plug to start the installation and select language and country. You can skip the channel search. Finish the installation.
- 2 - Plug in the USB flash drive that holds the channel list of the other TV.
- 3 - To start the channel list upload, select **⬆ (Home) > Settings > Channels > Channel List Copy** or **Satellite list Copy > Copy to TV** and press **OK**. Enter your PIN code if necessary.
- 4 - The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB flash drive.

---

### To Installed TVs

Depending on whether your TV is already installed or not, you must use a different method to upload a channel list.

#### To an already installed TV

- 1 - Verify the country setting of the TV. (To verify this setting, see **Reinstall channels** section. Start this procedure until you reach the country setting. Press **⬅ Back** to cancel the installation.) If the country is correct continue with step 2. If the country is not correct, you need to start a reinstallation. See **Reinstall channels** section and start the installation. Select the correct country and skip the channels search. Finish the installation. When done, continue with step 2.
- 2 - Plug in the USB flash drive that holds the channel list of the other TV.
- 3 - To start the channel list upload, select **⬆ (Home) > Settings > Channels > Channel List Copy** or **Satellite list Copy > Copy to TV** and press **OK**. Enter your PIN code if necessary.
- 4 - The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB flash drive.

---

## Channel Options

### Open Options

While watching a channel, you can set some options.

Depending on the type of channel you are watching or depending on the TV settings you made, some options are available.

To open the options menu...

- 1 - While watching a channel, press **≡ OPTIONS**.

2 - Press **≡** **OPTIONS** again to close.

---

## Programme Info

Select **Programme info** to view the information of the programme you are watching.

To call up the details of the selected programme...

- 1 - Tune to the channel.
- 2 - Press **i** **INFO** to open or close programme info.
- 3 - Alternatively, you can press **≡** **OPTIONS**, select **Programme Info** and press **OK** to open the programme info.
- 4 - Press **←** **Back** to close the programme info.

---

## Subtitles

To switch on Subtitles, press **≡** **OPTIONS** and select **Subtitles**.

You can switch subtitles **Subtitles on** or **Subtitles off**. Alternatively you can select **Automatic**.

### Automatic

If language information is part of the digital broadcast and the broadcasted programme is not in your language (the language set on TV), the TV can show subtitles automatically in one of your preferred subtitle languages. One of these subtitle languages must also be part of the broadcast.

You can select your preferred subtitle languages in **Subtitle language**.

---

## Subtitles Language

If none of the preferred subtitle languages are available, you can select another subtitle language if available. If no subtitle languages are available, you cannot select this option.

To read more information, in Help, press the colour key **—** **Keywords** and look up **Subtitle Language**.

---

## Audio Language

If none of the preferred audio languages are available, you can select another audio language if available. If no audio languages are available, you cannot select this option.

To read more information, in Help, press the colour key **—** **Keywords** and look up **Audio Language**.

---

## Dual I-II

If an audio signal contains two audio languages but one language or both has no language indication, this option is available.

---

## Common Interface

If prepaid premium content is available from a CAM, you can set the provider settings with this option.

---

## Mono / Stereo

You can switch the sound of an analogue channel to Mono or Stereo.

To switch to Mono or Stereo...

Tune to an analogue channel.

- 1 - Press **≡** **OPTIONS**, select **Mono/Stereo** and press **➤** (right).
- 2 - Select **Mono** or **Stereo** and press **OK**.
- 3 - Press **◀** (left) repeatedly if necessary, to close the menu.

---

## Channel Info

Select **Channel info** to view the technical information of the channel.

To call up the details of the selected channel...

- 1 - Tune to the channel.
- 2 - Press **≡** **OPTIONS**, select **Channel info** and press **OK** to open the channel info.
- 3 - Press **≡** **OPTIONS** again or press **←** **Back** to close the programme info.

---

## HbbTV on This Channel

If you want to avoid access to HbbTV pages on a specific channel, you can block the HbbTV pages for this channel only.

- 1 - Tune to the channel of which you want to block the HbbTV pages.
- 2 - Press **≡** **OPTIONS** and select **HbbTV on this channel** and press **➤** (right).
- 3 - Select **Off** and press **OK**.
- 4 - Press **◀** (left) to go back one step or press **←** **Back** to close the menu.

To block HbbTV on TV completely:

**⬆** (Home) > **Settings** > **Channels** > **HbbTV settings** > **HbbTV** > **Off**

---

## Universal Access

Only available when **Universal access** set to **On**.

▲ (Home) > Settings > Universal access > Universal access > On.

To read more information, in Help, press the colour key **— Keywords** and look up **Universal Access**.

---

## 7.3. Channel List

### Open Channel List

To open the current channel list...

- 1 - Press **TV**, to switch to TV.
- 2 - Press **OK** to open the channel list if Interactive Service is not available, or press **≡ Channel list** to open the channel list.
- 3 - Press **≡ OPTIONS** > **Select channel list**.
- 4 - Select one channel list you want to watch.
- 5 - Press **← Back** to close the channel list.

The channels displayed in All Channel list is listed based on genre\*. For example: Premium, Premium News, Premium Local, Children, Sport and etc. The Premium genre are top broadcast channels positioned with market share above 3%.

\* Note: The listed by genre function is only apply to Germany.

### Channel List Options

---

#### Open Options Menu

To open the channel list option menu:

- Press **TV**, to switch to TV.
- Press **≡ Channel list** to open the channel list.
- Press **≡ OPTIONS**, and select one of options.
- Press **← Back** to close the channel list.

---

#### Rename Channel

- 1 - Press **TV**, to switch to TV.
- 2 - Press **≡ Channel list** to open the channel list..
- 3 - Select one channel you want to rename.
- 4 - Press **≡ OPTIONS** > **Rename channel**, and press **OK** to open on-screen keyboard.
- 5 - Use navigation keys to select characters.
- 6 - Select **Enter** when complete the editing.
- 7 - Press **← Back** to close the channel list.

\* Note: Not available when UK Freeview Play is activated.

---

## Select Channel Filter

- 1 - Press **TV**, to switch to TV.
  - 2 - Press **≡ Channel list** to open the channel list.
  - 3 - Press **≡ OPTIONS** > **Digital/analogue, Free/scrambled**
  - 4 - Select one of channel combinations showing in the channel list.
- 

## Create or Edit Favourites Channel List

**TV** > **OK** > **≡ OPTIONS** > **Create favourites list**

Select a channel then press **OK** to add in a favourites channel list, once completed, press **— Done**.

**TV** > **OK** > **≡ OPTIONS** > **Edit favourites**

Select a channel then press **OK** to add in or remove from a favourites channel list, once completed, press **— Done**.

---

## Select Channel Range

**TV** > **OK** > **≡ OPTIONS** > **Select channel range**

Select a range of channels in a channel list. Press **OK** to mark the beginning of range and then press **OK** again to end the range selection. The selected channels will be marked as favourites.

---

## Select Channel List

**TV** > **OK** > **≡ OPTIONS** > **Select channel list**

Select one of channel lists that sorted by different kinds of channels.

---

## Search Channels

**TV** > **OK** > **≡ OPTIONS** > **Search channel**

You can search for a channel to find it in a long list of channels. The search will return the matching channel name with the result arranged in alphabetical order.

- 1 - Press **TV**, to switch to TV.
- 2 - Press **≡ Channel list** to open the channel list.
- 3 - Press **≡ OPTIONS** > **Search channel**, and press **OK** to open on-screen keyboard.
- 4 - Use navigation keys to select a character, then press **OK**.
- 5 - Select **Enter** when complete the input.
- 6 - Press **← Back** to close the channel list.

---

## Lock or Unlock Channel

**TV** > OK > **≡** OPTIONS > Lock channel, Unlock channel

To prevent children from watching a channel, you can lock a channel. To watch a locked channel, you must enter the 4 digit **Child Lock** PIN code first. You cannot lock programmes from connected devices.

The locked channel will have **🔒** next to the channel logo.

---

## Remove Favourite List

**TV** > OK > **≡** OPTIONS > Remove favourite list

To remove existing favourite list, select **Yes**.

---

## 7.4. Favourite Channels

### About Favourite Channels

You can create a favourite channel list that only holds the channels you want to watch. With the Favourite channel list selected, you will only see your favourite channels when you switch through channels.

### Create a Favourites List

1 - While watching a TV channel, press **≡** Channel list to open the channel list.

2 - Select the channel, and press **➤** Mark as favourites to mark as favourite.

3 - The selected channel is marked with a **♥**.

4 - To finish, press **←** Back. The channels are added to the Favourites list.

### Remove Channel from the Favourites List

To remove a channel from the favourites list, select the channel with **♥**, then press **➤** Unmark as favourite again to unmark as favourite.

### Reorder Channels

You can reorder — reposition — channels in the Favourite channel list (only available for certain countries).

1 - While watching a TV channel, press OK > **≡** OPTIONS > Select channel list.

2 - Select Antenna favourite, Cable Favourite or

Satellite favourite\*, and press **≡** OPTIONS.

3 - Select **Reorder channels**, select the channel you want to reorder, and press OK.

4 - Press the **Navigation buttons** to move the highlighted channel to another location and press OK.

5 - Once completed, press **➤** Done.

\* Satellite channel only can be searched on xxPxSxxxx TV models.

## Favourites List on TV Guide

You can link the TV Guide for your Favourite List.

1 - While watching a TV channel, press OK > **≡** OPTIONS > Select channel list.

2 - Select Antenna favourite, Cable Favourite or Satellite favourite\*, and press OK.

3 - Press **≡** TV GUIDE to open it.

With the TV Guide you can view a list of the current and scheduled TV programmes of your favourite channels. Along with your favourite channels, the first 3 most used channels from the broadcasters' default list will be appended after your favourite channels for your preview. You need to add these channels into your favourite list to enable its operation (refer to "TV Guide" chapter).

On each page of TV Guide, there is a "Did you know" grid inserted on your favourite channel list. The "Did you know"-channel provides useful tips to improve the way you use your TV.

\* Satellite channel only can be searched on xxPxSxxxx TV models.

---

## 7.5. Text / Teletext

### Subtitles from Text

If you tune to an analogue channel, you need to make the subtitles available for each channel manually.

1 - Switch to a channel and press **TEXT** to open Text.

2 - Enter the page number for subtitles, usually **888**.

3 - Press **TEXT** again, to close Text.

If you select **On** in the Subtitle menu when watching this analogue channel, subtitles will be shown if available.

To know if a channel is analogue or digital, switch to the channel and press **ℹ** INFO.



## Text Pages

To open Text/Teletext press **TEXT**, while you are watching TV channels.

To close Text, press **TEXT** again.

### Select a Text page

To select a page . . .

- 1 - Enter the page number with the number keys.
- 2 - Use the arrow keys to navigate.
- 3 - Press a colour key to select a colour-coded subject at the bottom of the screen.

### Text sub-pages

A Text page number can hold several subpages. The subpage numbers are shown on a bar next to the main page number.

To select a subpage, press **<** or **>**.

### T.O.P. Text pages

Some broadcasters offer T.O.P. Text.

To open T.O.P. Text pages within Text, press **≡** **OPTIONS** and select **T.O.P. overview**.

\* The teletext can only be reached when the channels are installed directly on the TV's internal tuner and the set is on TV mode. If a set-top box is being used, the teletext will be unavailable via TV. In that case, the set-top box's teletext can be used instead.

## Text Options

In Text/Teletext, press **≡** **OPTIONS** to select the following...

### • Freeze page / Unfreeze page

To stop the automatic rotation of subpages.

### • Dual screen / Full screen

To show the TV channel and Text alongside each other.

### • T.O.P. overview

To open T.O.P. Text.

### • Enlarge / Normal view

To enlarge the Text page for comfortable reading.

### • Reveal

To unhide hidden information on a page.

### • Cycle subpages

To cycle subpages when these are available.

### • Language

To switch the group of characters that Text uses to display correctly.

### • Text 2.5

To activate the Text 2.5 for more colours and better graphics.

## Text Setup

### Text language

Some digital TV broadcasters have several Text languages available.

### Set teletext preference language

**↑ (Home) > Settings > Region and language > Language > Primary text, Secondary text**

### Text 2.5

If available, Text 2.5 offers more colours and better graphics. Text 2.5 is activated as a standard factory setting.

To switch off Text 2.5...

- 1 - Press **TEXT**.
- 2 - With Text/Teletext open on screen, press **≡** **OPTIONS**.
- 3 - Select **Text 2.5 > Off**.
- 4 - Press **<** (left) repeatedly if necessary, to close the menu.

# 8. TV Guide

---

## 8.1. What You Need

With the TV guide you can view a list of the current and scheduled TV programmes of your channels. Depending on where the TV guide information (data) is coming from, analogue and digital channels or only digital channels are shown. Not all channels offer TV guide information.

The TV can collect TV guide information for the channels that are installed on the TV (e.g the channels you watch with Watch TV). The TV cannot collect the TV guide information for channels viewed from a digital receiver.

---

## 8.2. Using the TV Guide

### Open the TV Guide

To open the TV guide, press **TV GUIDE**.

Press **TV GUIDE** again to close.

The first time you open the TV Guide, the TV scans all TV channels for programme information. This may take several minutes. TV guide data is stored on TV.

### Tune to a Programme

#### Switch to a programme

- From the TV guide, you can switch to a current programme.
- To select a programme, use the arrow keys to highlight the programme name.
- Navigate to the right to view programmes scheduled later that day.
- To switch to the programme (channel), select the programme and press **OK**.

#### View programme details

To call up the details of the selected programme, press **INFO**.

### Update TV Guide

You can update the TV guide to get the latest programmes information.

To update the TV guide, press **OPTIONS** and select **Update TV guide\***. It may take few minutes to complete the update.

\* Note: Not available when UK Freeview Play is activated.

### Change Day

If the TV guide information comes from the broadcaster, you can press **Channel up** to view the schedule of one of the next days. Press **Channel down** to go back to the previous day.

Alternatively, you can press **OPTIONS** and select **Change day**.

### Search by Genre

If the information is available, you can look up scheduled programmes by genre like movies, sports, etc.

To search for programmes by genre, press **OPTIONS** and select **Search by genre\***. Select a genre and press **OK**. A list with the found programmes appears.

\* Note: Not available when UK Freeview Play is activated.

---

# 9. Freeview Play (for UK models)

---

## 9.1. About Freeview Play

To enjoy **Freeview Play\***, you need to connect your TV to Internet first.

Freeview Play offers:

- Watch TV programmes you missed from the last seven days.
- Watch live TV and on demand, all in one place without entering an app, you can search Freeview Play programmes in TV Guide.
- Watch over 70 standard channels and upto 15 HD channels.
- Enjoy on demand services like BBC iPlayer, the ITV Hub, All 4, Demand 5, BBC NEWS and BBC SPORT.
- There are no contracts and no monthly costs, you're in control.

For detail, please visit: <https://www.freeview.co.uk>

\* Freeview Play is only for UK models.

---

## 9.2. Using Freeview Play

To open **Freeview Play\***...

- 1 - Press **↑** (Home) to open the home menu.
- 2 - Press **➤** (right) to overview available Freeview players (apps) or select **Explore Freeview Play** to enter Freeview Play page.
- 3 - You can press **🔍 Search** or enter a keyword in search bar at the right-top to search channels.
- 4 - You can press **🟡 Recommendation** on TV Guide to sort different types of programmes on selecting a specific genre.
- 5 - Select a programme and press **🟢 Episodes Info** to view the details of the selected programme.
- 6 - Select a programme and press **OK** to start watching.
- 7 - Press **← Back** to close.

\* Freeview Play is only for UK models.

---

## 9.3. TV Guide on Freeview Play

When **Freeview Play\*** is activated, press **≡ TV GUIDE** can open the TV guide, press **≡ TV GUIDE** again to close.

### Change day

If the TV guide information comes from the broadcaster, you can press **Channel up** to view the schedule of one of the next days. Press **Channel down** to go back to the previous day.

Alternatively, you can press **≡ OPTIONS** and select **Change day**.

### Accessibility preferences

Press **≡ OPTIONS** on TV guide and select **Accessibility preferences** to adjust the preference of sorting programmes:

- Show only programmes with audio description
- Show only programmes with subtitles
- Show only programmes with sign language

### Privacy settings

Press **≡ OPTIONS** on TV guide and select **Privacy settings** to view the Privacy Policy terms. You can select to decline the Privacy Policy terms and disable the **Freeview Play**; or select to accept the Privacy Policy terms and enable **Freeview Play**.

\* Freeview Play is only for UK models.

# 10. Videos, Photos and Music

---

## 10.1. From a USB Connection

You can view your photos or play your music and videos from a connected USB flash drive or USB Hard Drive.

With the TV switched on, plug in a USB flash drive or a USB Hard Drive to one of the USB connections.

Press **SOURCES**, then select **USB**, you can browse your files in folder structure you have organised on the USB Hard Drive.

---

## 10.2. From a Computer or NAS

You can view your photos or play your music and videos from a computer or a NAS (Network Attached Storage) in your home network.

The TV and computer or NAS must be in the same home network. On your computer or NAS, you need to install Media Server Software. Your Media Server must be set to share your files with the TV. The TV shows your files and folders as they are organised by the Media Server or as they are structured on your computer or NAS.

The TV does not support subtitles on video streams from a computer or NAS.

If the Media Server supports searching for files, a search field is available.

To browse and play the files on your computer...

- 1 - Press **SOURCES**, select **Network** and press **OK**.
  - 2 - Once a device is connected, the **Network device** item will be replaced by connected device name.
  - 3 - You can browse and play your files.
  - 4 - To stop playing videos, photos and music, press **EXIT**.
- 

## 10.3. Photos

### View Photos

- 1 - Press **SOURCES**, select **USB** and press **OK**.
- 2 - Select **USB Flash Drive** and then select the USB device you need.

3 - Select **Photo**, you can press **Sort** to browse your photos by day, month or year.

4 - Select one of photos, and press **OK** to view the selected photo.

- To view photos, select **Photos** in the menu bar, select a photo thumbnail and press **OK**.
- If there are several photos in the same folder, select a photo and press **Slide show** to start a slide show of all photos in this folder.
- Watch a photo and press **INFO** to show below: Progress bar, Playback control bar, **◀** (Jump to the previous photo in a folder), **▶** (Jump to the next photo in a folder), **▶** (Start slideshow playback), **||** (Pause the playback), **▶** (Start slideshow), **↻** (Rotate photo)

When viewing a photo file, press **OPTIONS** to...

#### Shuffle off, Shuffle on

View the pictures in sequential order, or at random.

#### Repeat, Play once

View the pictures repeatedly or once only.

#### Stop music

Stop the music if the music playback is in progress.

#### Slideshow speed

Set the speed of the slideshow.

#### Slideshow transitions

Set the transition from one picture to the next.

### Photo Options

When browsing photo files, press **OPTIONS** to...

#### List/Thumbnails

View photos with list view or thumbnails view.

#### Shuffle off, Shuffle on

View the pictures in sequential order, or at random.

#### Repeat, Play once

View the pictures repeatedly or once only.

#### Stop music

Stop the music if the music playback is in progress.

#### Slideshow speed

Set the speed of the slideshow.

#### Slideshow transitions

Set the transition from one picture to the next.

---

## 10.4. Videos

### Play Videos

To play a video on TV...

Select **Videos**, and select the file name and press **OK**.

- To pause the video, press **OK**. Press **OK** again to continue.
- To rewind or go fast forward, press **▶▶** or **◀◀**. Press the keys several times to speed up - 2x, 4x, 8x, 16x, 32x.
- To jump to the next video in a folder, press **OK** to pause and select **▶** on screen and press **OK**.
- To go back to the folder, press **◀**.

#### Open video folder

1 - Press **SOURCES**, select **USB** and press **OK**.

2 - Select **USB Flash Drive** and then select the USB device you need.

3 - Select **Videos** and select one of video, you can press **OK** to play the selected video.

- Select a video and press **INFO** to show file information.
- Playback a video and press **INFO** to show below: Progress bar, Playback control bar, **◀** (Jump to the previous video in a folder), **▶** (Jump to the next video in a folder), **▶** (Playback), **◀◀** (Rewind), **▶▶** (Fast forward), **||** (Pause the playback), **—** (Play all/Play one), **—** (Shuffle on/Shuffle off)

During the video playback, press **≡** **OPTIONS** to...

#### Subtitles

Display the subtitles if available, select **On**, **Off**, or **On during mute**.

#### Subtitle language

Select subtitles language if available.

#### Character set

Select the character set if external subtitle is available.

#### Audio language

Select audio language if available.

#### Status

Display the information of the video file.

#### Repeat, Play once

Play videos repeatedly or once.

#### Subtitle settings

Set the Font size, Subtitle colour, Subtitle position and Time sync offset if the options are available.

## Video Options

When browsing video files, press **≡** **OPTIONS** to...

#### List/Thumbnails

View video files with list view or thumbnails view.

#### Subtitles

Display the subtitles if available, select **On**, **Off**, or **On during mute**.

#### Shuffle off, Shuffle on

Play videos in sequential order, or at random.

#### Repeat, Play once

Play videos repeatedly or once.

---

## 10.5. Music

### Play Music

Open music folder

1 - Press **SOURCES**, select **USB** and press **OK**.

2 - Select **USB Flash Drive** and press **▶** (right) to select the USB device you need.

3 - Select **Music** and select one of music, you can press **OK** to play the selected music.

- Select a music and press **INFO** to show file information.
- Playback a music and press **INFO** to show below: Progress bar, Playback control bar, **◀** (Jump to the previous music in a folder), **▶** (Jump to the next music in a folder), **▶** (Playback), **◀◀** (Rewind), **▶▶** (Fast forward), **||** (Pause the playback), **—** (Play all/Play one)

During the music playback, press **≡** **OPTIONS** to...

#### Repeat, Play once

Play songs repeatedly or once.

## Music Options

When browsing music files, press **≡** **OPTIONS** to...

#### Shuffle off, Shuffle on

Play songs in sequential order, or at random.

#### Repeat, Play once



Play songs repeatedly or once.

---

# 11. Open TV Setting Menus

---

## 11.1. Quick Menu and Frequent Settings

Press  Quick Menu/MENU key on the remote control to find the **Quick Menu**, then press the arrows  (Left) to find the **Frequent settings**.


Quick menu:

- **Help** - Diagnose and get more information about your TV.
- **Install channels** - Update channels or start a complete new channel installation.
- **Update software** - Check if there is newer TV software available to update for your TV.
- **Watch TV** - To switch back to watch TV.
- **TV Guide** - To open the TV Guide.
- **Channels** - To open the channel list.
- **Sources** - To open the Sources menu.
- **Media** - To launch media file player to play files from USB or network.
- **Demo Me** - To manage demo files.

Frequent settings:

- **Picture style** - Select one of preset picture styles for ideal picture viewing.
- **Picture format** - Select one of preset picture format which fits the screen.
- **Sound style** - Select one of preset sound styles for ideal sound settings.
- **EasyLink 2.0** - Control and adjust settings of the EasyLink 2.0 compliant HDMI sound system.
- **Audio out** - Set the TV to play the sound on TV or on the connected audio system.
- **Wireless and networks** - Connect to your home network or adjust the network settings.
- **Screen off** - If you only listen to music on TV, you can switch off the TV screen.
- **Sleep timer** - Set the TV to switch to standby automatically after a preset time.
- **All settings** - View all settings menu.

All settings menu:

Press  (Home) key on the remote control will go back to the Home screen. You can access **Settings** menu via the settings icon at the top right corner on Home screen.

---

## 11.2. All Settings

---


### Picture Settings

---

Picture Style

Select a style

For easy picture adjustment, you can select a preset picture style.

 (Home) > Settings > Picture > Picture style, press OK to change to next available option.

The available Picture styles are:



- **Personal** - The picture preferences you set during the first start up
- **Vivid** - Ideal for daylight viewing
- **Natural** - Natural picture settings
- **ECO** - Most energy conscious setting
- **Movie** - Ideal for watching movies
- **Game** - Ideal for gaming\*
- **Monitor** - Ideal for computer monitor

\* Picture style - Game is not available for some video sources.

Custom a style

You can adjust and store picture settings in in the currently selected picture style, like **Colour**, **Contrast** or **Sharpness**.

Restore a style



To restore the style to its original setting, go to  (Home) > Settings > Picture > Picture style, then press  Restore style.

---

Colour, Contrast, Sharpness, Black level


Adjust the picture colour

 (Home) > Settings > Picture > Colour

Press the arrows  (Right) or  (Left) to adjust the colour saturation value of the picture.

Adjust the picture contrast

 (Home) > Settings > Picture > Backlight contrast

Press the arrows  (Right) or  (Left) to adjust the contrast value of the picture.

You can decrease contrast value to reduce power consumption.

## Adjust the picture sharpness

🏠 (Home) > Settings > Picture > Sharpness

Press the arrows ▶ (Right) or ◀ (Left) to adjust the sharpness value of the picture.

## Adjust the black level of the picture

🏠 (Home) > Settings > Picture > Black level

Press the arrows ▶ (Right) or ◀ (Left) to set the black level of the picture signal.

**Note:** setting of black level much away from reference value (50) may result lower contrast.

---

## Expert Mode Picture Settings

---

### Colour Settings

🏠 (Home) > Settings > Picture > Expert mode settings

#### Adjust the colour enhancement

🏠 (Home) > Settings > Picture > Expert mode settings > Colour enhancement

Select **Maximum**, **Medium**, or **Minimum** to set the level of the colour intensity and the details in bright colours.

#### Select the preset colour temperature

🏠 (Home) > Settings > Picture > Expert mode settings > Colour temperature

Select **Normal**, **Warm**, or **Cool** to set the colour temperature for your preference.

#### Whitepoint alignment

🏠 (Home) > Settings > Picture > Expert mode settings > Whitepoint alignment

Customise the whitepoint alignment based on the selected colour temperature of the picture. Press the arrows ▶ (Right) or ◀ (Left) to adjust the value, press **Reset** to reset the value.

---

## Contrast Settings

---

### Contrast Modes

🏠 (Home) > Settings > Picture > Expert mode settings > Contrast mode

Select **Normal**, **Optimised for picture**, **Optimised for energy saving** to set the TV automatically reduces the contrast, for best power consumption or for best picture

experience, or select **Off** to switch off the adjustment.

---

## Dynamic Contrast

🏠 (Home) > Settings > Picture > Expert mode settings > Dynamic contrast

Select **Maximum**, **Medium**, or **Minimum** to set the level at which the TV automatically enhances the details in the dark, middle and light areas of the picture.

---

## Video Contrast, Gamma

### Video contrast

🏠 (Home) > Settings > Picture > Expert mode settings > Video contrast

Press the arrows ▶ (Right) or ◀ (Left) to adjust the video contrast level.

### Gamma

🏠 (Home) > Settings > Picture > Expert mode settings > Gamma

Press the arrows ▶ (Right) or ◀ (Left) to set a non-linear setting for picture luminance and contrast.

---

## Light Sensor

🏠 (Home) > Settings > Picture > Expert mode settings > Light sensor

To save energy, the built-in ambient light sensor lowers the brightness of the TV screen when the surrounding light darkens. The built-in light sensor automatically adjusts the picture to the lighting conditions of the room.

---

## Super Resolution

🏠 (Home) > Settings > Picture > Expert mode settings > Super resolution

Switch **On** to have a superior sharpness in line edges and details.

---

## Picture Clean

### Noise reduction

🏠 (Home) > Settings > Picture > Expert mode settings > Noise reduction

Select **Maximum**, **Medium**, **Minimum** to set the level for removing the noise in video content. Noise is mostly visible as small moving dots in on-screen

picture.

## MPEG Artefact Reduction

🏠 (Home) > Settings > Picture > Expert mode settings > MPEG Artefact Reduction

Select **Maximum**, **Medium**, **Minimum** to have different degrees of smoothing the artefact in digital video content.

MPEG artefact is mostly visible as small blocks or jagged edges in on-screen images.

---

## Picture Format

🏠 (Home) > Settings > Picture > Picture format

If the picture is not filling the whole screen, if black bars are showing on the top or bottom or at both sides, you can adjust the picture to fill the screen completely.

To select one of the basic settings to fill the screen...

- **Wide screen** – automatically zooms in the picture to 16:9 full screen. Picture content aspect ratio may change.
- **Fill screen** – automatically enlarges the picture to fill the screen. Picture distortion is minimal, subtitles remain visible. Not suitable for PC input. Some extreme picture formats can still show black bars. Picture content aspect ratio may change.
- **Fit to screen** – automatically zooms in the picture to fill the screen without distortion. Black bars may be visible. Not supported for PC input.
- **Original** – automatically zooms in the picture to fit the screen with original aspect ratio. No content lost visible.

🏠 (Home) > Settings > Picture > Picture format > Advanced

To format the picture manually...

- **Shift** – select on the arrows to shift the picture. You can only shift the picture when it is zoomed in.
- **Zoom** – select on the arrows to zoom in.
- **Stretch** – select on the arrows to stretch the picture vertically or horizontally.
- **Undo** – select to return to the picture format you started with.

Some Picture format setting selections may not be available in some conditions. For example, in video streaming, Android app application, gaming mode, etc.

---

## Quick Picture Settings

🏠 (Home) > Settings > Picture > Quick picture settings

- During the first installation, you did some picture settings in a few easy steps. You can redo these steps with **Quick picture settings** menu.
- Select the picture setting you prefer and go to the next setting.

- To do these steps, make sure the TV can tune to a TV channel or can show a programme from a connected device.

## Sound Settings

---

### Sound Style

#### Select a style

For easy sound adjustment, you can select a preset sound style.

🏠 (Home) > Settings > Sound > Sound style

The available sound styles are:

- **AI mode** - Select AI mode for intelligent switching of sound style based on audio content.
- **Original** - Most neutral sound setting
- **Movie** - Ideal for watching movies
- **Music** - Ideal for listening to music
- **Game** - Ideal for gaming
- **Dialogue** - Ideal for speech
- **Personal** - Select to adjust your preferred sound settings

#### Restore Personal settings

- 1 - Set the sound style to Personal.
- 2 - Press the colour key **— Restore Style**, and press OK. The style is restored.

---

## Personal Sound Settings

### Clear dialogue

🏠 (Home) > Settings > Sound > Personal settings > Clear dialogue

Select **On** to improve the sound for speech. Ideal for news programmes.

### AI Equaliser

🏠 (Home) > Settings > Sound > Personal settings > AI Equaliser

Select **On** to enable intelligent equaliser adjustment based on audio content and custom settings.

### Custom AI Equaliser

🏠 (Home) > Settings > Sound > Personal settings > Custom AI Equaliser

Press the **Arrow / navigation** keys to adjust the equaliser settings.

\* Note: To restore the **Personal settings** to its original setting, select back to **Sound style**, then press **— Restore**



style.

---

## TV Placement

🏠 (Home) > Settings > Sound > TV placement

Select **On a TV stand** or **On the wall** to have best sound reproduction according to the setting.

---

## EasyLink 2.0

Control the sound settings of the HDMI sound system via EasyLink 2.0

🏠 (Home) > Settings > Sound > EasyLink 2.0.

You can adjust the individual sound settings of the HDMI sound system via **Frequent settings** or **Settings > Sound > EasyLink 2.0**. This is only applicable with EasyLink 2.0 compliant HDMI sound system. To switch on the control, make sure the **EasyLink 2.0 sound control** menu item is set to **On** under **General settings > EasyLink > EasyLink 2.0 sound control**.

## Select sound style

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Sound style.

Switch between the preset sound styles. There are ideal styles for watching movies, listening to music, or other sound contents.

- **Movie** - Ideal sound style for watching movie.
- **Music** - Optimised for listening to music.
- **Voice** - Enhanced the dialog in the vocals.
- **Stadium** - Gives a feel of a large open-air stadium.
- **Custom** - Personalised sound mode. The setting is only available when connected device is compatible with TV for the feature.

## Adjust bass level

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Bass.

Press the **Arrow / navigation** keys to adjust the level of bass.

## Adjust treble level

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Treble.

Press the **Arrow / navigation** keys to adjust the level of treble.

## Custom Equaliser

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Custom Equaliser.

Adjustable frequency bands when the **Sound style** is set to **Custom**. Press the **Arrow / navigation** keys to adjust the level of AI Equaliser. The setting is only available when connected device is compatible with TV for the feature.

## Surround Sound

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Surround Sound.

Select a surround effect from the preset types.

- **Upmix** - Upmix to take full advantage of all speakers.
- **Standard** - Speakers output follow the original channels.
- **Surround AI** - Optimum surround effect using AI analysis.

## DRC

🏠 (Home) > Settings > Sound > EasyLink 2.0 > DRC.

Select the preferred Dynamic Range Control (DRC).

- **Auto** - Dynamic range is automatically adjusted.
- **On** - Optimize the dynamic range.
- **Off** - Turn off dynamic range adjustment.

## Height speakers

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Height speakers.

Select the preferred height speakers movement. The setting is only available when connected device is compatible with TV for the feature.

- **Auto** - Dynamic movement follow contents.
- **On** - Always elevated.
- **Off** - Flat position.

## Select sound stage

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Sound stage.

Select a listening experience. The setting is only available when connected device is compatible with TV for the feature.

- **Auto** - Dynamic setting follow contents.
- **On** - Immersive Sound Stage, good for watching movies.
- **Off** - Crystal Sound Stage, good for listening to music and dialogue.

## Reset all to default

🏠 (Home) > Settings > Sound > EasyLink 2.0 > Reset all to default.

Reset all the EasyLink 2.0 sound settings back to the original factory settings.

---

## Advanced sound settings

---

### Volume Control

#### Auto volume

🏠 (Home) > Settings > Sound > Advanced > Auto volume

Select **On** to automatically level out sudden volume differences. Typically when you are switching channels. Select **Night mode** for a more comfortable quiet listening experience.

#### Delta volume

🏠 (Home) > Settings > Sound > Advanced > Delta volume

The Delta volume setting can be used to adjust to balance the sound level difference between the TV channel and the HDMI source input. Press the **Arrow / navigation** keys to adjust the delta value for TV speaker volume.

\* Note: Delta volume is available when the input source is set to HDMI or Analogue sources and the Audio out is set to **TV speakers** or **HDMI sound system**.

---

## Audio Out Settings

🏠 (Home) > Settings > Sound > Advanced > Audio out

Set the TV to play the sound on TV or on the connected audio system.

You can select where you want to hear the TV sound and how you want to control it.

- If you select **TV Speakers**, the TV speakers are always on. All the sound related settings are applicable to this mode.
- If you select **Wired headphones**, the sound will be played through headphones.
- If you select **Optical**, the TV speakers are switched off and the sound will be played through the device connected to Digital Audio Out - Optical.
- If you select **TV Speakers + Wired headphones**, the sound will be played through TV speakers and headphones.

With an audio device connected with HDMI CEC, select **HDMI sound system**. The TV will switch off the TV speakers when the device is playing the sound.

To adjust the volume of TV speakers or headphones, press **Volume** and press the arrows **➤** (right) or **➤** (left) to select the output source you want to adjust. Press **Volume +** or **-** to adjust the volume level of selected

output source.

---

## Digital Output Settings

Digital output settings are available for SPDIF output (optical) and HDMI ARC sound signals.

### Digital out format

🏠 (Home) > Settings > Sound > Advanced > Digital out format

Set the audio out signal of the TV to fit the sound capabilities of the connected Home Theatre System.

- **Stereo (uncompressed)**: If your audio playback devices have no multichannel sound processing, select to only output stereo content to your audio playback devices.
- **Multichannel**: Select to output multichannel audio content (compressed multichannel sound signal) or stereo audio content to your audio playback devices.
- **Multichannel (bypass)**: Select to send original bitstream from HDMI ARC to the connected HDMI Sound System.

- Make sure your audio playback devices support Dolby Atmos feature.

- SPDIF output (DIGITAL AUDIO OUT) will be disabled when streaming Dolby Digital Plus content.

### Digital out levelling

🏠 (Home) > Settings > Sound > Advanced > Digital out levelling

Adjust the loudness level from device which is connected to digital audio output (SPDIF) or HDMI.

- Select **More** to have louder volume.
- Select **Less** to have softer volume.

### Digital out delay

🏠 (Home) > Settings > Sound > Advanced > Digital out delay

For some Home Theatre Systems you might need to adjust the audio sync delay to synchronise the audio to the video. Select **Off** if a sound delay is set on your Home Theatre System.

### Digital out offset (Only available when Digital out delay set to On)

🏠 (Home) > Settings > Sound > Advanced > Digital out offset

- If you cannot set a delay on the Home Theatre System, you can set the TV to sync the sound.
- You can set an offset that compensates for the time necessary for the Home Theatre System to process the

sound of the TV picture.

- You can set the value in steps of 5ms. Maximum setting is 60ms.

## Channels

---

### HbbTV Settings - Hybrid Broadcast Broadband TV

🏠 (Home) > Settings > Channels > HbbTV settings > HbbTV

If a TV Channel offers HbbTV services, you must first switch on HbbTV in the TV settings to access to these advanced services, e.g. video on-demand and catch-up TV services.

🏠 (Home) > Settings > Channels > HbbTV settings > HbbTV tracking

Switch the tracking of HbbTV browsing behaviour on or off. Switching off will inform the HbbTV services not to track your browsing behaviour.

🏠 (Home) > Settings > Channels > HbbTV settings > HbbTV cookies

Switch the storage of third-party cookies, site data and cache from HbbTV services on or off.

🏠 (Home) > Settings > Channels > HbbTV settings > HbbTV Device ID reset

You can reset your TV unique device identifier. A new identifier will be created.

🏠 (Home) > Settings > Channels > HbbTV settings > Clear approved app listing

Allow you to clear the list of HbbTV applications that you have allowed to be launched on the TV.

---

## CAM Settings

🏠 (Home) > Settings > Channels > CAM Operator profile

When CAM profile installation is done, select to enable or disable CAM Operator profile UI pop up message.

🏠 (Home) > Settings > Channels > CAM profile name

When **CAM Operator profile** is enabled, select to display the profile name of current connected CAM card.

## General Settings

---

### Connection Related Settings

---

#### USB Keyboard Settings

🏠 (Home) > Settings > General settings > USB keyboard settings

To install the USB keyboard, switch on the TV and connect the USB keyboard to one of the USB connections on the TV. When the TV detects the keyboard for the first time, you can select your keyboard lay-out and test your selection.

---

#### Mouse Settings

🏠 (Home) > Settings > General settings > Mouse settings

Adjust the motion speed of the USB mouse.

---

#### HDMI-CEC Connection - EasyLink

Connect HDMI CEC-compatible devices to your TV, you can operate them with the TV remote control. EasyLink HDMI CEC must be switched on on the TV and the connected device.



#### Switch on EasyLink

🏠 (Home) > Settings > General settings > EasyLink > EasyLink > On

Operate HDMI CEC-compatible devices with TV remote control

🏠 (Home) > Settings > General settings > EasyLink > EasyLink remote control > On

#### EasyLink 2.0 sound control

🏠 (Home) > Settings > General settings > EasyLink > EasyLink 2.0 sound control > On

Slide to turn On/Off to control the sound settings of the HDMI sound system. You can adjust these settings via

**Frequent settings** or **Settings > Sound > EasyLink 2.0**.  
This is only applicable with EasyLink 2.0 compliant HDMI sound system.

**Note:**

- EasyLink might not work with devices from other brands.
- The HDMI CEC functionality has different names on different brands. Some examples are: Anynet, Aquos Link, Bravia Theatre Sync, Kuro Link, Simplink and Viera Link. Not all brands are fully compatible with EasyLink. Example HDMI CEC branding names are property of their respective owners.

---

### Screensaver Settings

🏠 (Home) > Settings > General settings > Screensaver settings > Screensaver

Select **Backdrop** to enable the Screensaver. Select **Off** to disable the Screensaver.

🏠 (Home) > Settings > General settings > Screensaver settings > When to start

Set the duration (in minutes) when TV is in idle state before activating the Screensaver.

🏠 (Home) > Settings > General settings > Screensaver settings > Preview

Press **OK** to preview the Screensaver.

---

### Power-on Behaviour

#### Set the Power-on behaviour

🏠 (Home) > Settings > General settings > Power-on behaviour

Set the TV to stay on **Home** screen or on **Last source** when power on the TV.

---

### Eco Settings

#### Set screen off to save energy consumption

🏠 (Home) > Settings > General settings > Eco settings > Screen off

Select **Screen off**, the TV screen is switched off, to switch the TV screen back on, press any key (except **AMBILIGHT\***, **Volume +** or **-** keys) on the remote control.

\* **AMBILIGHT** key is only available on models which support Ambilight function.

### Set the Light Sensor

🏠 (Home) > Settings > General settings > Eco settings > Light sensor

To save energy, the built-in ambient light sensor lowers the brightness of the TV screen when the surrounding light darkens. The built-in light sensor automatically adjusts the picture to the lighting conditions of the room.

### Set TV switch off timer

🏠 (Home) > Settings > General settings > Eco settings > Switch off timer

Press the arrows **▶** (Right) or **◀** (Left) to adjust the value. The value **0 (Off)** deactivates the automatic switch off.

Select **Switch off timer**, the TV switches off automatically to save energy.

- TV switches off if receiving a TV signal but you don't press a key on the remote control during a 4 hour period.
- TV switches off if not receiving a TV signal nor a remote control command for 10 minutes.
- If you use the TV as a monitor or use a digital receiver to watch TV (a Set-Top Box - STB) and you do not use the remote control of the TV, you should deactivate this automatic switch off, to set the value to **0**.

---

### Location - Home or Shop

🏠 (Home) > Settings > General settings > Location

- Select the location of your TV
- Select **Shop**, the picture style is switched back to **Vivid**, and can adjust shop settings.
- Shop mode is for in-store promotion.

---

### Shop Setup

🏠 (Home) > Settings > General settings > Shop setup

If the TV is set to **Shop**, you can view feature logos or set the availability of a specific demo for in store use.

### Adjust Picture and audio

🏠 (Home) > Settings > General settings > Shop setup > Picture and audio

Select **Optimised to shop** or **Custom settings** for picture and audio settings.

### Logos and banner

🏠 (Home) > Settings > General settings > Shop

## setup > Logos and banner

Set to display **Feature logos** and **Promotional banner**.

## Demo Me autostart

🏠 (Home) > Settings > General settings > Shop setup > Demo Me autostart

Turn On/Off the Demo Me autostart.

---

## Manage Demos

🏠 (Home) > Apps > Demo me > Manage demos

If the TV is set to **Shop**, you can manage the demo videos in **Demo me** app.

## Play demo video

🏠 (Home) > Apps > Demo me > Manage demos > Play  
Select a demo video file and play.

## Copy demo file

🏠 (Home) > Apps > Demo me > Manage demos > Copy to USB  
Copy demo file to USB drive.

## Delete demo file

🏠 (Home) > Apps > Demo me > Manage demos > Delete  
Delete demo file from your TV.

## Configuration of demo

🏠 (Home) > Apps > Demo me > Manage demos > Configuration  
Set the TV to **Main TV** or **Sub TV**.

## Download new demo file

🏠 (Home) > Apps > Demo me > Manage demos > Download new  
If the **Configuration** is set to **Main TV**, you can download new demo file.

## Auto delay setting

🏠 (Home) > Apps > Demo me > Manage demos > Auto delay setting  
Set the Auto delay time from **15 seconds** to **5 minutes**.

## Auto loop selection

🏠 (Home) > Apps > Demo me > Manage demos > Auto loop selection  
Select a demo file for auto loop playing.

---

## Reset TV Settings and Reinstall TV

Reset all settings value to original TV settings

🏠 (Home) > Settings > General settings > Factory settings

Redo full TV installation , and set TV status back to the first time you switch on

🏠 (Home) > Settings > General settings > Reinstall TV

Enter PIN code and select **Yes**, the TV will reinstall completely. All settings will be reset and installed channels will be replaced. The installation can take a few minutes.

## Universal Access Settings

🏠 (Home) > Settings > Universal access

With **Universal Access** switched on, the TV is prepared for use for the deaf, hard of hearing, blind or partially sighted people.

## Switch on universal access settings

🏠 (Home) > Settings > Universal access > Universal access > On.

## Universal access for hearing impaired people

🏠 (Home) > Settings > Universal access > Hearing impaired > On

- Some digital TV channels broadcast special audio and subtitles adapted for the hard of hearing or deaf people.
- Switched on, the TV automatically switches to the adapted audio and subtitles, if available.

## Universal access for blind or partially sighted people

🏠 (Home) > Settings > Universal access > Audio description > Audio description > On

Digital TV channels can broadcast special audio commentary describing what is happening on screen.

🏠 (Home) > Settings > Universal access > Audio description > Audio description > Mixed volume, Audio effects, Speech

- Select **Mixed volume**, you can mix the volume of the normal audio with the audio commentary. Press the arrows **>** (Right) or **<** (Left) to adjust the value.
- Set **Audio effect** to **On** for extra audio effects in the commentary audio, like stereo or fading sound.
- Select **Speech** to set speech

preference, **Descriptive** or **Subtitles**.

## Dialogue enhancement

🏠 (Home) > Settings > Universal access > Dialogue enhancement

Increase the intelligibility of dialogue and commentary. Only available when sound setting **Clear dialogue** is **On** and audio stream is AC-4.

## Text magnification

🏠 (Home) > Settings > Universal access > Text magnification

Turn on to magnify selected texts and display on the upper screen.

## Lock Settings

---

### Set Code and Change Code

🏠 (Home) > Settings > Child lock > Set code, Change code

Set new code or reset change code. The child lock code is used to lock or unlock channels or programmes.

**Note:** If you forgot your PIN code, you can override the current code use **8888** and enter a new code.

### Lock for Programme

🏠 (Home) > Settings > Child lock > Parental rating

Set a minimum age to watch rated programmes.

### App lock

🏠 (Home) > Settings > Child lock > App lock

You can lock apps unsuited for children. The App lock will ask for a PIN code when you try to start an 18+ rated app. This lock is only valid for 18+ rated apps from the Philips apps.

## Region and Language Settings

---

### Language

🏠 (Home) > Settings > Region and language > Language

Change the language of the TV menu and messages

🏠 (Home) > Settings > Region and

language > Language > Menu language

### Set audio preference language

🏠 (Home) > Settings > Region and language > Language > Primary audio, Secondary audio

Digital TV channels can broadcast audio with several spoken languages for a programme. You can set a preferred primary and secondary audio language. If audio in one of these languages is available, the TV will switch to this audio.

### Set subtitle preference language

🏠 (Home) > Settings > Region and language > Language > Primary subtitle, Secondary subtitle

Digital channels can offer several subtitle languages for a programme. You can set a preferred primary and secondary subtitle language. If subtitles in one of these languages are available, the TV will show the subtitles you selected.

### Set teletext preference language

🏠 (Home) > Settings > Region and language > Language > Primary text, Secondary text

Some digital TV broadcasters have several Text languages available.

### Clock

🏠 (Home) > Settings > Region and language > Clock

#### Correct clock automatically

🏠 (Home) > Settings > Region and language > Clock > Auto clock mode

- The standard setting for the TV clock is **Automatic**. The time information comes from the broadcasted UTC - Coordinated Universal Time information.
- If the clock is not correct, you can set the TV clock to **Country dependent**.
- When select **Country dependent**, you can set the time for **Automatic**, **Standard time**, or **Daylight saving time**.

#### Correct clock manually

🏠 (Home) > Settings > Region and language > Clock > Auto clock mode > Manual

🏠 (Home) > Settings > Region and language > Clock > Date, Time

Go to previous menu, and select **Date** and **Time** to adjust the value.

**Note:**

- If none of the automatic settings display the time correctly, you can set the time manually.
- The Auto clock mode setting will be back to Automatic after the TV power is turned off and on again.

**Set time zone or set a time offset for your region**

🏠 (Home) > Settings > Region and language > Clock > Time zone

Select one of the time zones.

**Set the TV to switch to Standby automatically after a preset time**

🏠 (Home) > Settings > Region and language > Clock > Sleep timer.

Set the TV to switch to Standby automatically after a preset time. With the slider bar you can set the time to up to 180 minutes in increments of 5 minutes. If set to 0 minutes, the sleep timer is switched off. You can always switch off your TV earlier or reset the time during the countdown.

# 12. Wireless and Networks

## 12.1. Home Network

To enjoy the full capabilities of your Philips Smart TV, your TV must be connected to the Internet.

Connect the TV to a home network with a high-speed Internet connection. You can connect your TV wirelessly or wired to your network router.

## 12.2. Connect to Network

### Wireless Connection

#### What You Need

To connect the TV to the Internet wirelessly, you need a Wi-Fi router with a connection to the Internet. Use a high-speed (broadband) connection to the Internet.



#### Make the Connection - Wireless

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Connect to network > Wireless (Wi-Fi)

- 1 - In the list of found networks, select on your wireless network. If your network is not in the list because the network name is hidden (you switched off the SSID broadcast of the router), select Add New Network to enter the network name yourself.
- 2 - Enter your encryption key. If you entered the encryption key for this network before, you can select **OK** to make the connection immediately.
- 3 - A message will be shown when the connection is successful.

#### Turn Wi-Fi On or Off


🏠 (Home) > Settings > Wireless & networks > Wired or

Wi-Fi > Wi-Fi On/Off

### Wired Connection

#### What You Need

To connect the TV to the Internet, you need a network router with a connection to the Internet. Use a high-speed (broadband) connection to the Internet.

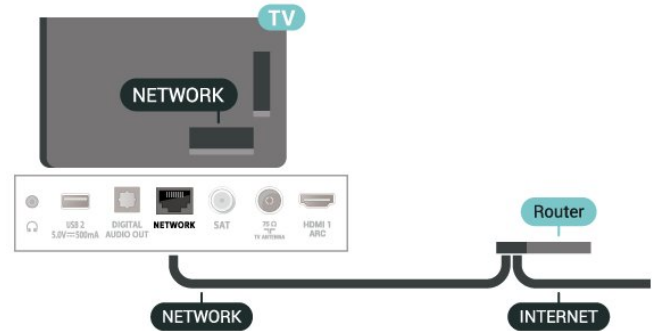

#### Make the Connection

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Connect to network > Wired

- 1 - Connect the router to the TV with a network cable (Ethernet cable\*\*).
- 2 - Make sure that the router is switched on.
- 3 - The TV constantly searches for the network connection.
- 4 - A message will be shown when the connection is successful.

If the connection fails, you can check the DHCP setting of the router. DHCP should be switched on.

\*\*To fulfill EMC regulations, use a shielded FTP Cat. 5E Ethernet cable.

## 12.3. Wireless and Network Settings

### View Network Settings

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > View network settings

You can view all current network settings here. The IP and MAC address, signal strength, speed, encryption method, etc.

### Network Configuration - Static IP

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Network Configuration > Static IP

If you are an advanced user and want to install your



network with Static IP addressing, set the TV to **Static IP**.

### Network Configuration - Static IP Configuration

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Static IP configuration

1 - Select **Static IP configuration** and configure the connection.

2 - You can set the number for IP Address, Netmask, Gateway, DNS 1, or DNS 2.

### Switch On with Wi-Fi (WoWLAN)

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Switch On with Wi-Fi (WoWLAN)

You can switch this TV on from your smartphone or tablet if the TV is in Standby. The setting **Switch On with Wi-Fi (WoWLAN)** must be switched on.

### Digital Media Renderer - DMR

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Digital Media Renderer - DMR

If your media files do not play on your TV, make sure that the Digital Media Renderer is switched on. As a factory setting, DMR is switched on.

### Switch on Wi-Fi connection

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Wi-Fi On/Off

You can switch on or off Wi-Fi connection on your TV.

### Reset Screen Mirroring connection

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Reset Screen Mirroring connection

Clear the list of connected and blocked devices that are used with Screen Mirroring.

### TV network name

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > TV network name

If you have more than one TV in your home network, you can give the TV a unique name.

### Terms of use

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Terms of use

You can view the contents of Terms of use, which is

displayed when you first time to connect your TV to the Internet.

### Privacy settings

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Privacy settings

You can view the contents of Privacy settings, which is displayed when you first time to connect your TV to the Internet.

### Netflix settings

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Netflix settings

With **Netflix settings**, you can view ESN number or deactivate Netflix device.

### Clear Internet Memory

🏠 (Home) > Settings > Wireless & networks > Wired or Wi-Fi > Clear Internet Memory

With Clear Internet Memory you clear your Philips server registration and parental rating settings, your video store app logins, all Philips App Gallery favourites, Internet bookmarks and history. Interactive MHEG applications can also save so-called 'cookies', on your TV. These files will also be cleared.

# 13. Smart TV and Apps

---

## 13.1. Setup Smart TV

The first time you open Smart TV, you need to configure your connection. Read and agree to the terms and conditions to continue.

The Smart TV Home screen is your link to the Internet. You can rent movies online, read newspapers, watch videos and listen to music, also shop online, or watch TV programmes when it suits you with On-line TV.

TP Vision Europe B.V. bears no responsibility regarding the content and the quality of the content provided by the content service providers.

---

## 13.2. Store of Apps

Open the **Apps** tab on Home screen to browse the Apps, the collection of tailored websites for TV.

Find the App for YouTube videos, a national newspaper, an online photo album, etc. There are Apps to rent a video from an online video store and Apps for watching programmes you missed. If the App in **Apps** does not hold what you are looking for, try the World Wide Web and surf the Internet on TV.

### Categories of Apps

You can sort the Apps in **Apps** by different categories like **New**, **Video**, **Entertainment**, **News** or **Lifestyle**.

### Featured Apps

In this area, Philips presents a range of recommended Apps for you. You can select and install them to enrich your Smart TV life.

### Internet

The Internet App opens the World Wide Web on your TV.

On your TV, you can view any Internet website but most of them are not tailored for a TV screen.

- Some plug-ins (e.g. to view pages or videos) are not available on your TV.

- Internet pages are shown one page at a time and full screen.

# 14. Netflix

---

If you have a Netflix membership subscription, you can enjoy Netflix on this TV. Your TV must be connected to the Internet.

To open Netflix, press **NETFLIX** to open the Netflix App. You can open Netflix immediately from a TV in standby.

[www.netflix.com](http://www.netflix.com)

# 15. Rakuten TV

---


Watch the latest new releases on your Smart TV. The biggest blockbusters, award winning classics and TV series available instantly.

Press the **Rakuten TV** key on your remote control or the app icon to open the Rakuten TV app. Your TV must be connected to the Internet to use the app. For more information about Rakuten TV, please visit [www.rakuten.tv](http://www.rakuten.tv).

# 16. Amazon Prime Video

---

With an Amazon prime membership, you gain access to thousands of popular movies and TV show, including exclusive Prime Originals.

Press the  key to open the Amazon Prime Video app. Your TV must be connected to the Internet to use the app. For more information about Amazon Prime Video, please visit [www.primevideo.com](http://www.primevideo.com).

# 17. YouTube

---

YouTube provides a platform to connect to the world. Watch and discover popular videos that uploaded by YouTube users around the world. Use the YouTube app to explore the latest topics on music, news, and more.

Press the app icon to open the YouTube app. Your TV must be connected to the Internet to use the app. For more information about YouTube, please visit [www.youtube.com](http://www.youtube.com).

# 18. Alexa

---

## 18.1. About Alexa

Your TV supports Amazon Alexa\* voice control operations.

### About Alexa

Alexa is a cloud-based voice service available on Alexa Echo devices from Amazon and device manufacturers. With Alexa working on your TV, you can switch on/off TV, change channels, change volume and more.

To control your TV with Alexa, you will need:

- Philips Smart TV that supports Alexa
- Amazon account
- Alexa app\* (mobile/tablet version)
- Wireless or wired network connection
- Philips TV Remote App

### About Alexa Skill

Alexa uses the Alexa Skills to extend the voice control operations. Skills add new capabilities that create a more personalised experience with your Alexa enabled TV. "Philips Smart TV" skill can be found on Alexa Skills store, it offers various voice control commands to work with your Philips Smart TV.

**Note:** The supported Ambilight styles may depend on specific TV models. Please refer the user manual of your TV to know the supported Ambilight styles.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Amazon Alexa is available in selected languages and countries.

Services availability depends on region. A part or whole of software/services installed into or accessible through the product may be changed, discontinued, removed, suspended, or terminated without notice.

---

## 18.2. Using Alexa

To use Alexa, you need to first setup the Alexa client service on your Philips Smart TV. Start the setup by launching the "Amazon Alexa" app from the Home screen of your TV. Follow the instructions and complete the following steps:

- Select a name for your Smart TV for Alexa to recognize.
- Select an Amazon account and sign-in.
- Return to this skill in the Alexa App on your phone to

enable it, link accounts, and discover your devices.  
- Return to your TV to complete setup.

### Setup on TV for Alexa

- 1 - Press **Home** and open "Amazon Alexa" app.
- 2 - You need Alexa app (on mobile device or web version) be ready to start the setup.
- 3 - Follow the instructions on screen to accept Privacy Policy terms, name your TV and sign in your Amazon account. The Amazon account is needed to pair with Alexa on TV.
- 4 - On your mobile device, sign in with the same Amazon account in the Amazon Alexa app.
- 5 - Complete following steps in the Amazon Alexa app. The first is to enable "Philips Smart TV" skill. The second is to link your Amazon account and then the final is to discover devices
- 6 - At the end of setup screen, you can select **Done** to start to use Alexa.

To start Alexa voice control operations, if your TV remote control does not have Alexa button, you can use Philips TV Remote App (iOS and Android) on mobile devices.

# 19. Google Assistant

---

Your TV can work with the Google Assistant. Google Assistant allows you to use your voice to control your TV – e.g. changing volume, channels and more.

**Note:** Google Assistant is not available in all languages and countries.

To enable Google Assistant on your TV, you will need:

- A Google Home device, like Google Home Mini
- Internet connection on TV
- Google account
- Google Home app (mobile/tablet version)

## Setup TV Control with Google Assistant

1 - Follow the instructions on screen to accept the Privacy Policy for the usage of Google Assistant voice control feature on this TV.

2 - Choose a name for the TV so that Google Assistant can recognise it.

3 - Sign in Google account. If you already have a Google account, please sign in. If not, please create an account and sign in. After you have signed in successfully, select "Get Code" to get the device code of this TV for your device registration.

4 - On your mobile/tablet, search for "Google Home" app in app store (iOS and Android). Download and open the Google Home app. Sign in with the same Google account, which is used to register this TV. You need to continue the setup on Google Home app in mobile/tablet to control your TV with voice commands.

5 - On Google Home app, select "Set up device", then select 'Works with Google' and search for Philips Smart TV. Sign in to link to your Google account and enable TV control on Google Home app.

6 - You can use Google Assistant to turn on your TV using voice command. For this, the TV needs to remain in a special power mode, which may result in slightly higher power consumption during standby.

You are ready to use your Google Home device to control this TV. Here are some things to try:

- Turn off TV
- Switch to channel 10 on TV
- Channel down on TV
- Increase volume on TV
- Mute TV

**Note:** If you logout from Google Assistant, you will no longer be able to use voice commands on this TV. You will need to redo the Setup TV control with Google Assistant to use the feature again.

Google Assistant is available in selected languages and countries with English-UK and German-DE being supported from the start. Supported language/countries list is going to be expanded overtime. For latest language and countries support list please contact our consumer care.

Services availability depends on region. A part or whole of software/services installed into or accessible through the product may be changed, discontinued, removed, suspended, or terminated without notice.



# 20. Software

---

## 20.1. Update Software


### Search for Updates

---

#### Update from Internet

🏠 (Home) > Settings > Update software > Search for updates > Internet (Recommended)

Look for a software update yourself.

- If the TV is connected to the Internet, you may receive a message to update the TV software. You need a high-speed (broadband) Internet connection. If you receive this message, we recommend you to carry out the update.
- During the software update, there is no picture and the TV will switch off and on again. This might happen several times. The update can take a few minutes.
- Wait until the TV picture comes back up. Do not press the power switch  on the TV or on the remote control during the software update.

---

#### Update from USB

🏠 (Home) > Settings > Update software > Search for updates > USB

- You need a computer with a high-speed Internet connection and a USB memory device to upload the software on the TV.
- Use a USB memory device with 512MB free space. Make sure that write protection is switched off.

##### 1 - Start the update on TV

Select **Update software > Search for updates > USB**, then press **OK**.

##### 2 - Identify the TV

Insert the USB memory into one of the USB connections of the TV.

Select **Start** and press **OK**. An identification file is written on the USB memory device.

##### 3 - Download the TV software

- Insert the USB memory into your computer.

- On the USB memory device, locate the file **update.html** and double click it.

- Click on **Send ID**.

- If new software is available, download the .zip file.

- After the download, unzip the file and copy the file **autorun.upg** onto the USB memory device.

- Do not place this file in a folder.


##### 4 - Update the TV software

Insert the USB memory into the TV again. The update starts automatically.

The TV switches itself off for 10 seconds and then back

on again. Please wait.

Do not . . .

- use the remote control
- remove the USB memory device from the TV
- press  twice
- press the power switch on the TV

The TV switches itself off (for 10 seconds) and then back on again. Please wait.

The TV software has been updated. You can use the TV again.

To prevent an accidental update of the TV software, delete the **autorun.upg** file from the USB memory device.

### Local Updates

🏠 (Home) > Settings > Update software > Search for updates > USB > Local updates.

For dealers and expert users.

---

## 20.2. Software Version

🏠 (Home) > Settings > Update software > Current software info

To view the current TV software version.

---

## 20.3. Automatic Software Update

🏠 (Home) > Settings > Update software > Automatic software update

To switch on Automatic software update to update your TV software automatically. Leave the TV in standby.

When the setting is enabled, the upgrade gets downloaded when the TV is powered ON and installed 15min after the TV has gone to standby (as long as there is no alarm scheduled).

When the setting is disabled, the "Upgrade Now" / "Later" OSD will be shown.

---

## 20.4. View Software Update History

🏠 (Home) > Settings > Update software > View software update history

Display the list of software versions that are successfully

update on the TV.

# 21. Environmental

---

## 21.1. European Energy Label

The **European Energy Label** informs you on the energy efficiency class of this product. The greener the energy efficiency class of this product is, the lower the energy it consumes.

On the label, you can find the energy efficiency class, the average power consumption of this product in use. You can also find the power consumption values for this product on the Philips website for your country at [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

---

## 21.2. EPREL Registration Number

EPREL registration number

24PHS6808 : 1399412

32PHS6808 : 1399594

43PFS6808 : 1423305

---

## 21.3. End of Use

### Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2012/19/EU.



Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.



Please find out for yourself about the local rules on separate collection of batteries because correct disposal will help to prevent negative consequences for the environment and human health.

---

## 21.4. UK Declaration of Conformity

Hereby, TP Vision Europe B.V. declares that this television is in compliance with the essential requirements and other relevant provisions of Directives Radio Equipment Regulations 2017 and the Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019 and the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

---

## 22. Specifications

---

### 22.1. Power

Product specifications are subject to change without notice. For more specification details of this product, see [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

#### Power

- Mains power : AC 220-240V +/-10%
  - Ambient temperature : 5°C to 35°C
- 

### 22.2. Reception

- Aerial input : 75 ohm coaxial (IEC75)
- Tuner bands : Hyperband, S-Channel, UHF, VHF
- DVB : DVB-T/T2, DVB-C (cable) QAM
- Analogue video playback : SECAM, PAL
- Digital video playback : MPEG2 SD/HD (ISO/IEC 13818-2), MPEG4 SD/HD (ISO/IEC 14496-10), HEVC\*
- Digital audio playback (ISO/IEC 13818-3)
- Satellite aerial input : 75 ohm F-type
- Input frequency range : 950 to 2150MHz
- Input level range : 25 to 65 dBm
- DVB-S/S2 QPSK, symbol rate 2 to 45M symbols, SCPC and MCPC
- LNB : DiSEqC 1.0, 1 to 4 LNBs supported, Polarity selection 14/18V, Band selection 22kHz, Tone burst mode, LNB current 300mA max

\* Only for DVB-T2, DVB-S2

---

### 22.3. Display Resolution

#### Diagonal screen size

- 60 cm / 24 inch
- 80 cm / 32 inch
- 108 cm / 43 inch

#### Display resolution

- PHx: 1366 x 768
- PFx: 1920 x 1080

---

### 22.4. Supported Input Resolution

#### Supported Video only resolution

Resolution — Refresh rate

- 480i - 60 Hz
- 576i - 50 Hz
- 1080i - 50 Hz, 60 Hz

#### Supported Computer/Video resolution

Resolution — Refresh rate

- 640 x 480 - 60Hz
  - 576p - 50Hz
  - 720p - 50 Hz, 60 Hz
  - 1920 x 1080p - 24 Hz, 25 Hz, 30 Hz, 50 Hz, 60 Hz
- 

### 22.5. Sound

- Output power (RMS) : 24" - 6W; 32" - 10W; 43" - 16W
  - Dolby MS12 V2.5
  - Dolby Volume Leveler / Night mode
  - Dolby Bass Enhancement
  - Clear Dialogue
  - AI Sound
  - AI EQ
- 

### 22.6. Multimedia

#### Connections

- USB 2.0
- Ethernet LAN RJ-45
- Wi-Fi 802.11n (built-in)

#### Supported USB file systems

- FAT, NTFS

#### Playback formats

- Video Codec : AVI, MKV, H.264/MPEG-4 AVC, MPEG1, MPEG2, MPEG4, VP9, HEVC (H.265), AV1
- Audio Codec : MP3, WAV, AAC, WMA (v2 up to v9.2), WMA-PRO (v9 and v10), FLAC
- Subtitles :
  - Format : SRT, SMI, SSA, SUB, ASS, TXT
  - Character encodings : Western Europe, Turkish, Central Europe, Cyrillic, Greek, UTF-8 (Unicode), Hebrew, Arabic, Baltic
- Maximum Supported Data Rate :
  - MPEG-4 AVC (H.264) is supported up to High Profile @

L5.1. 30Mbps

– H.265 (HEVC) is supported up to Main / Main 10 Profile  
up to Level 5.1 40Mbps

- Image Codec : JPEG, GIF, PNG, BMP, HEIF

#### **Wi-Fi Certified**

This TV is Wi-Fi Certified device.

---

## **22.7. Connectivity**

#### **TV Side**

- Common Interface slot: CI+/CAM
- USB 1 - USB 2.0
- HDMI 3 in
- HDMI 2 in

#### **TV Bottom**

- Headphones - Stereo mini-jack 3.5mm
- USB 2 - USB 2.0
- Audio out - Optical Toslink
- Network LAN - RJ45
- Satellite tuner
- Antenna (75 ohm)
- HDMI 1 in - ARC

# 23. Troubleshooting

---

## 23.1. Tips

If you can't find a solution for your TV problem in **Troubleshooting**, you can use **— Keywords in Help > User manual** to find the information you are looking for. Select a keyword to go to the most relevant page in the User manual.

If the User manual doesn't answer your question, you can go to the support website of Philips.

To solve any Philips TV related problem, you can consult our online support. You can select your language and enter your product model number.

Go to [www.philips.com/TVsupport](http://www.philips.com/TVsupport).

On the support site you can find your country's telephone number to contact us as well as answers to frequently asked questions (FAQs). In some countries, you can chat with one of our collaborators and ask your question directly or send a question by email. You can download new TV software or the manual to read on your computer.

### TV Help on your tablet, smartphone or computer

To carry out extended sequences of instructions more easily, you can download the TV Help in PDF format to read on your smartphone, tablet or computer. Alternatively, you can print the relevant Help page from your computer.

To download the Help (user manual) go to [www.philips.com/TVsupport](http://www.philips.com/TVsupport)

---

## 23.2. Switch On

### The TV does not switch on

- Disconnect the power cable from the power outlet. Wait for one minute then reconnect it. Make sure that the power cable is securely connected. Try switching on again.
- Connect the TV to another wall mains socket and try switching on.
- Disconnect all connected devices from the TV and try switching on.
- If the standby light on TV is on, the TV might not respond to the remote control.

### Creaking sound at startup or switch off

When you are turning the TV on or standby, you hear a creaking sound from the TV chassis. The creaking sound

is due to the normal expansion and contraction of the TV as it cools and warms up. This does not affect performance.

### The TV goes back to standby after showing the Philips startup screen

When the TV is in standby, a Philips startup screen is displayed, then the TV returns to standby mode. This is normal behaviour. When the TV is disconnected and reconnected to the power supply, the startup screen is displayed at the next startup. To switch on the TV from standby, press **⏻** (Standby / On) the remote control or the TV.

### The standby light keeps on blinking

Disconnect the power cable from the power outlet. Wait 5 minutes before you reconnect the power cable. If the blinking reoccurs, contact Philips TV Consumer Care.

In **Help > User manual**, press the colour key **— Keywords** and look up **Contact Info**.

### TV switches off by itself

If the TV switches off suddenly, the setting **Switch off timer** might be switched on. With **Switch off timer** the TV switches off after 4 hours if no remote control signals were received. To avoid this automatic switch off, you can deactivate this switch off. In **Help > User manual**, press the colour key **— Keywords** and look up **Switch Off Timer**.

Also, if the TV does not receive a TV signal nor a remote control command for 10 minutes, the TV switches off automatically.

---

## 23.3. Remote Control

### TV does not respond to the remote control

- The TV requires some time to start up. During this time, the TV does not respond to the remote control or TV controls. This is normal behaviour.
  - The batteries of the remote control might be empty. Replace the batteries with new ones.
- 

## 23.4. Channels

### No digital channels found during the installation

- Check if the TV was connected with an antenna or is using a provider signal. Check the cable connections.
- Check if the country where you install the TV, has digital channels available.
- Check if you selected the correct DVB (Digital Video Broadcast) system. Select DVB-T (terrestrial) when you

use an antenna or common antenna, select DVB-C (cable) if you use a TV cable service.

- Redo the installation and check if you select the correct country and system.

#### No analogue channels found during the installation

- Check if the TV was connected with an antenna. Check the cable connections.

- Check if you selected the correct DVB (Digital Video Broadcast) system. Select DVB-T (terrestrial) when you use an antenna or common antenna.

- Redo the installation and select **Digital and analogue channels** during the installation.

#### Some channels disappeared, cannot find all or some previously installed channels

- Check if you selected the correct **Channel list** or **Favourites list** you normally use.

- Some channels might be moved or even deleted by the broadcaster. In the normal channels list, try to search for the channel you're missing. If the channel is still available, you can put it back in the favourites list.

- A channel can be deleted from the channel list during **Automatic channel update**. These automatic updates are done overnight if the TV is on standby. Channels that do not exist anymore are deleted and new channels will be added to the channel list. Exceptionally, a channel can be deleted because the TV could not find it while checking for its presence. It might not broadcast at night.

To avoid channels being deleted during the **Automatic channel update** because the TV could not find them although these channels are still there, you can switch off **Automatic channel update**.

🏠 (Home) > Settings > Channels > Antenna/Cable installation, Satellite installation\* > Automatic channel update

\* Satellite installation is only for models which support satellite functions.

#### DVB-T2 HEVC channel

- See the technical specifications to make sure that your TV supports DVB-T2 HEVC in your country and reinstall DVB-T channel.

---

## 23.5. Satellite

### The TV cannot find the satellites I want or the TV installs the same satellite twice

Check if the correct number of satellites is set in settings at the start of the installation. You can set the TV to search for One, Two or 3/4 satellites.

#### A dual head LNB cannot find a second satellite

- If the TV finds one satellite but cannot find a second one, turn the dish a few degrees. Align the dish to get the strongest signal on the first satellite. Check the signal

strength indicator of the first satellite on-screen.

- Check if the settings are set to two satellites.

### Changing the installation settings did not solve my problem

All settings, satellites and channels are only stored at the end of the installation when you finish.

#### All satellite channels are gone

If you use an Unicable system, It might be that another satellite receiver in your Unicable system is using the same user band number.

#### Some satellite channels seem to have disappeared from the channel list

If some channels seem to be gone or displaced, the broadcaster might have changed the transponder location of these channels. To restore the channel positions in the channel list, you can try an update of the channel package.

#### I cannot remove a satellite

Subscription packages do not allow removing a satellite. To remove the satellite, you have to do a complete installation again and select another package.

#### Sometimes the reception is poor

- Check if the satellite dish is solidly mounted. Strong winds can move the dish.
- Snow and rain can degrade the reception.

---

## 23.6. Picture

### No picture / distorted picture

- Check if the TV is connected with an antenna or is using a provider signal. Check the cable connections.

- Check if the correct source/input is selected in the sources menu. Press **Sources** and select the source/input you need.

- Check if the external device or source is properly connected.

- Check if the reception is poor.

- Check if the picture is set to a minimal value.

Select **Picture style** and select a style and press **OK**.

- To check if the TV is broken, try to play a video clip.

Press **Quick Menu** > **Help** > **TV diagnose** > **Check the TV**. If the video clip stays black, call Philips. Wait until the clip ends and select **Contact info** in the Help menu. Call the telephone number for your country.

#### Sound but no picture

- Change to other video sources and then change back to current source.

- Select **Picture style** and select a style and press **OK**.

- Restore picture style, select back to **Picture style**, then press **Restore style**.

- Reset all TV settings, go to **⬆️ (Home) > Settings > General settings > Reinstall TV**.
- Check the connections of the source/input devices.

### Poor reception

If the TV picture is distorted or variable in quality, the input signal might be poor. A weak digital signal is seen as a picture that is breaking up in square blocks and freezes occasionally. Much sooner than a bad analogue signal, a bad digital signal will fall away.

- Check if the antenna cable is properly connected.
- Large loudspeakers, unearthed audio devices, neon lights, high buildings and other large objects can influence reception quality when you are using an antenna. Try to improve the reception by changing the antenna direction or moving devices away from the TV. Bad weather might deteriorate the reception.
- Check if all connections, to and from your devices, are properly connected.
- If reception on only one channel is poor, fine-tune this channel with **Analogue: manual installation**. (Only for analogue channels)
- Check if the incoming digital signal is sufficiently strong. While watching a digital channel, press **≡ OPTIONS** and select **Status** and press **OK**. Check the **Signal strength** and **Signal quality**.

### Poor picture from a device

- Make sure that the device is connected properly. Make sure that the device's output video setting is the highest possible resolution if applicable.
- Restore picture style or change to another picture style.

### Picture settings change after a while

Make sure that **Location** is set to **Home**. You can change and save settings in this mode.

**⬆️ (Home) > Settings > General settings > Location**

### A banner appears

If an on screen promotion banner appears occasionally or the **Picture style** automatically switches back to **Vivid** at startup, the TV is in **Shop** location. Set the TV to **Home** location for use at home.

**⬆️ (Home) > Settings > General settings > Location**

### Picture does not fit the screen / Wrong or unstable picture size / Picture position is incorrect

- If the picture size - its aspect ratio - does not fit the screen, with black bars on the top and bottom or left and right side of the screen, press **⬆️ (Home) > Settings > Picture > Picture Format > Fill screen**.
- If the picture size changes all the time, press **⬆️ (Home) > Settings > Picture > Picture Format > Fit to screen**.
- If the position of the picture is incorrect on the screen, try to check the signal resolution and output type of the connected device, press **⬆️ (Home) > Settings > Picture > Picture Format > Original**.

### Computer picture is not stable

Make sure that your PC uses the supported resolution and refresh rate.

## 23.7. Sound

### No sound or poor sound quality

- Check if the sound settings of the TV are OK, press the **🔊** volume or **🔇** mute key.
- If you use a digital receiver (set-top box), check if the volume on this receiver is not set to zero or mute.
- Check if the TV - the audio signal - is properly connected with the Home Theatre System, if you use such a system for the TV sound. Check if you connected the HDMI cable to an **HDMI1 ARC** connection on the Home Theatre System.
- Make sure that the TV audio output is connected to the audio input on the Home Theatre System. Sound should be heard from the HTS (Home Theatre System) speakers.

### Sound with loud noise

If you watch a video from a plugged in USB flash drive or connected computer, the sound from your Home Theatre System might be distorted. This noise is heard when the audio or video file has DTS sound but the Home Theatre System has no DTS sound processing. You can fix this by setting the **Digital out format** of the TV to **Stereo**.

Press **⬆️ (Home) > Settings > Sound > Advanced > Digital out format**

## 23.8. HDMI

### HDMI

- Note that HDCP (High-bandwidth Digital Content Protection) support can delay the time taken for a TV to display content from an HDMI device.
- If the TV does not recognise the HDMI device and no picture is displayed, switch the source from one device to another and back again.
- If there are intermittent sound disruptions, make sure that output settings from the HDMI device are correct.

### HDMI EasyLink does not work

- Check if your HDMI devices are HDMI-CEC compatible. EasyLink features only work with devices that are HDMI-CEC compatible.

### No volume icon shown

- When an HDMI-CEC audio device is connected and you use the TV Remote Control to adjust the volume level from the device, this behaviour is normal.



---

## 23.9. USB

**Photos, videos and music from a USB device do not show**

- Check if the USB storage device is set to Mass Storage Class compliant, as described in the storage device's documentation.
- Check if the USB storage device is compatible with the TV.
- Check if the audio and picture file formats are supported by the TV. For more information, in **Help**, press the colour key **— Keywords** and look up **Multimedia**.

**Choppy playback of USB files**

- The transfer performance of the USB storage device may limit the data transfer rate to the TV which causes poor playback.

---

## 23.10. Wi-Fi and Internet

**Wi-Fi network not found or distorted**

- Check if the firewalls in your network allow access to the TV's wireless connection.
- If the wireless network does not work properly in your home, try the wired network installation.

**Internet does not work**

- If the connection to the router is OK, check the router connection to the Internet.

**The PC and Internet connection are slow**

- Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.
- Use a high-speed (broadband) Internet connection for your router.

**DHCP**

- If the connection fails, you can check the DHCP (Dynamic Host Configuration Protocol) setting of the router. DHCP should be switched on.

---

## 23.11. Wrong Menu Language

**Change the language back to your language**

- 1 - Press **⬆ Home** and select **Settings** via the icon at the top right corner.
- 2 - Press 7 times **⬇ (down)** and press **OK**.
- 3 - Press **OK** again to enter **Language**, select the first item **Menu language** and press **OK**.
- 4 - Select your language and press **OK**.

# 24. Safety and Care

---

## 24.1. Safety

### Important

Read and understand all safety instructions before you use the TV. If damage is caused by failure to follow instructions, the warranty does not apply.

### Risk of Electric Shock or Fire

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips TV Consumer Care to have the TV checked before use.
- Never expose the TV, remote control or batteries to excessive heat. Never place them near burning candles, naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the TV.
- Never place heavy objects on the power cord.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire. Ensure that no strain is exerted on the power cord when you swivel the TV screen.
- To disconnect the TV from the mains power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

### Risk of Injury or Damage to the TV

- Two people are required to lift and carry a TV that weighs more than 25 kg or 55 lbs.
- If you mount the TV on a stand, only use the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the weight of the TV and the stand.
- When wall mounted, ensure that the wall mount can safely bear the weight of the TV set. TP Vision bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Parts of this product are made of glass. Handle with care to avoid injury or damage.

#### Risk of damage to the TV !

Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the

back of the TV. Never connect the TV to the power outlet if the voltage is different.

### Stability Hazards

This product is designed and intended for consumers and personal use in a domestic home environment, unless agreed otherwise with the manufacturer in writing. Failure to follow this recommendation or the instructions provided in the product user manual and the product supportive documentation can cause damage to the product and will void the warranty for such cases.

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

### Risk of Batteries

- Do not ingest the battery. Chemical burn hazard.
- The remote control may contain a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Risk of fire or explosion if the battery is replaced by an

incorrect type.

- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

## Risk of Overheating

Never install the TV in a confined space. Always leave a space of at least 20 cm or 8 inches around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.

## Lightning Storms

Disconnect the TV from the power outlet and antenna before lightning storms.  
During lightning storms, never touch any part of the TV, power cord or antenna cable.

## Risk of Hearing Damage

Avoid using earphones or headphones at high volumes or for prolonged periods of time.

## Low Temperatures

If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature reaches room temperature before connecting the TV to the power outlet.

## Humidity

In rare occasions, depending on temperature and humidity, minor condensation can occur on the inside of the TV glass front (on some models). To prevent this, do not expose the TV to direct sunlight, heat or extreme humidity. If condensation occurs, it will disappear spontaneously while the TV is playing for a few hours. The condensation moisture will not harm the TV or cause malfunction.

---

## 24.2. Screen Care

### Clean

- Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth and wipe gently. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and colour fading, wipe off water drops as quickly as possible.
- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

# 25. Terms of Use

---

2023 © TP Vision Europe B.V. All rights reserved.

This product was brought to the market by TP Vision Europe B.V. or one of its affiliates, hereinafter referred to as TP Vision, which is the manufacturer of the product. TP Vision is the warrantor in relation to the TV with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V or their respective owners. TP Vision reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The written material packaged with the TV and the manual stored in the memory of the TV or downloaded from the Philips website [www.philips.com/TVsupport](http://www.philips.com/TVsupport) are believed to be adequate for the intended use of the system.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied. TP Vision cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

Terms of warranty - Risk of injury, damage to TV or void of warranty!

Never attempt to repair the TV yourself. Use the TV and accessories only as intended by the manufacturer. The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips TV Customer Care for service or repairs. Find the telephone number in the printed documentation that came with the TV. Or consult our website [www.philips.com/TVsupport](http://www.philips.com/TVsupport) and select your country if needed. Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual, shall void the warranty.

Pixel characteristics

This TV product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction. Therefore, please

note this is not subjected to repair, exchange or refund within and/or out of the warranty period.

Backlight characteristics

All Philips TV have gone through stringent tests and checks before shipping to you. You can be rest assured that we place the quality of our TVs the utmost importance so that you do not suffer any viewing displeasure while watching your TV. However, please note that backlight bleeding ("Mura effect") and /or unevenness of background light that can only be observed in dark images or in a very dark and dim room are considered to be within TV specifications. Such occurrences do not represent a deterioration nor shall be regarded as a defect of the TV. Hence, we regret that claims of this nature for warranty, free of charge service, replacement or refund cannot be accepted within and/or out of the warranty period.

CE compliance

Hereby, TP Vision Europe B.V. declares that this television is in compliance with the essential requirements and other relevant provisions of Directives 2014/53/EU (RED), 2009/125/EC (Regulation (EU) 2019/2021) (Eco Design) and 2011/65/EC (RoHS).

Compliance with EMF

TP Vision manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals. One of TP Vision's leading business principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the Electro Magnetic Field (EMF) standards applicable at the time of producing the products.

TP Vision is committed to developing, producing and marketing products that cause no adverse health effects. TP Vision confirms that, as long as its products are handled properly for their intended use, they are safe to use according to scientific evidence available today. TP Vision plays an active role in the development of international EMF and safety standards, enabling TP Vision to anticipate further developments in standardisation for early integration in its products.

---

## 26. Copyrights

---

### 26.1. HDMI

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



---

### 26.2. HEVC Advance

Covered by one or more claims of the HEVC patents listed at [patentlist.accessadvance.com](http://patentlist.accessadvance.com).  
Future proof with advanced HEVC decoding.



---

### 26.3. Dolby Audio

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.



---

### 26.4. Wi-Fi Alliance

The Wi-Fi CERTIFIED™ Logo is a registered trademark of Wi-Fi Alliance®.



---

### 26.5. Other Trademarks

All other registered and unregistered trademarks are the property of their respective owners.

# 27. Open Source

---

## 27.1. Open Source Software

This television contains open source software. TP Vision Europe B.V. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licences.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain the source code, please write in English to . . .

[open.source@tpv-tech.com](mailto:open.source@tpv-tech.com)

---

## 27.2. Open Source License

### About Open Source License

README for the source code of the parts of TP Vision Europe B.V. TV software that fall under open source licenses.

This is a document describing the distribution of the source code used on the TP Vision Europe B.V. TV, which fall either under the GNU General Public License (the GPL), or the GNU Lesser General Public License (the LGPL), or any other open source license. Instructions to obtain copies of this software can be found in the Directions For Use.

TP Vision Europe B.V. MAKES NO WARRANTIES WHATSOEVER, EITHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS SOFTWARE. TP Vision Europe B.V. offers no support for this software. The preceding does not affect your warranties and statutory rights regarding any TP Vision Europe B.V. product(s) you purchased. It only applies to this source code made available to you.

### Open Source

apr (1.7.0)

The Apache Portable Runtime Library provides a predictable and consistent interface to underlying platform-specific implementations, with an API to which software developers may code and be assured of predictable if not identical behavior

regardless

of the platform on which their software is built, relieving them of

the need to code special-case conditions to work around or take

advantage of platform-specific deficiencies or features.

Source: <https://github.com/apache/apr>

bind ( 9.11.36)

BIND (Berkeley Internet Name Domain) is a complete, highly portable implementation of the Domain Name System (DNS) protocol.

Source: <https://github.com/isc-projects/bind9>

busybox (1.31.1)

BusyBox combines tiny versions of many common UNIX utilities into a single small executable. It provides replacements for most of the utilities you usually find in GNU fileutils, shellutils, etc. The utilities in BusyBox generally have fewer options than their full-featured GNU cousins; however, the options that are included provide the expected functionality and behave very much like their GNU counterparts. BusyBox provides a fairly complete environment for any small or embedded system.

Source: <https://www.busybox.net/downloads/>

binutils (2.31.510)

The GNU Binutils are a collection of binary tools. The main ones are:

ld - the GNU linker.

as - the GNU assembler.

Source: <https://www.gnu.org/software/binutils/>

bzip2 (1.0.6)

bzip2 is a free and open-source file compression program that uses the Burrows–Wheeler algorithm. It only compresses single files and is not a file archiver. It was developed by Julian Seward, and maintained by Mark Wielaard and Micah Snyder.

Source: <https://sourceware.org/bzip2/>

c-ares (1.10.1)

c-ares is a C library for asynchronous DNS requests (including name resolves)

Source: <https://c-ares.org/>

cairo (1.16.0)

Cairo is a 2D graphics library with support for multiple output devices. Currently supported output targets include the X Window System (via both Xlib and XCB), Quartz, Win32, image buffers, PostScript, PDF, and SVG file output. Experimental backends include OpenGL, BeOS, OS/2, and DirectFB.

source <https://www.cairographics.org/>

dbus (1.11.2)

D-Bus is a simple system for interprocess communication and coordination.

The "and coordination" part is important; D-Bus provides

a bus daemon that does things like:

- notify applications when other apps exit
- start services on demand
- support single-instance applications

Source: <https://github.com/freedesktop/dbus>

e2fsprogs (1.43.3)

e2fsprogs (sometimes called the e2fs programs) is a set of utilities for maintaining the ext2, ext3 and ext4 file systems. Since those file systems are often the default for Linux distributions, it is commonly considered to be essential software

Source: <http://e2fsprogs.sourceforge.net/>

expat (2.2.9)

xml parser; Expat is an XML parser library written in C. It is a stream-oriented parser in which an application registers handlers for things the parser might find in the XML document (like start tags). An introductory article on using.

This piece of software is made available under the terms and conditions of the Expat license, which can be found below.

Source: <http://expat.sourceforge.net/>

fuse (2.9.7)

JBoss Fuse is an open source ESB with capabilities based on Apache Camel, Apache CXF, Apache ActiveMQ, Apache Karaf and Fabric8 in a single integrated distribution.

Source <https://github.com/jboss-fuse/fuse>

gdb (8.2.1)

GDB, the GNU Project debugger, allows you to see what is going on 'inside' another program while it executes -- or what another program was doing at the moment it crashed.

Source: <https://www.sourceware.org/gdb/>

glibc (2.30.0)

Any Unix-like operating system needs a C library: the library which defines the "system calls" and other basic facilities such as open, malloc, printf, exit...The GNU C library is used as the C library in the GNU system and most systems with the Linux kernel

This piece of software is made available under the terms and conditions of the glibc license, which can be found below.

Source: <http://www.gnu.org/software/libc/>

gstreamer (1.18.3)

The GStreamer team is excited to announce a new major feature release of your favourite cross-platform multimedia framework!

Source: <https://gstreamer.freedesktop.org/>

libasound (1.1.8)

The Advanced Linux Sound Architecture (ALSA) provides audio and MIDI functionality to the Linux operating system. ALSA has the following significant features:

Efficient support for all types of audio interfaces, from consumer sound cards to professional multichannel audio interfaces.

Fully modularized sound drivers.

SMP and thread-safe design (PLEASE READ THIS).

User space library (alsa-lib) to simplify application programming and provide higher level functionality.

Support for the older Open Sound System (OSS) API, providing binary compatibility for most OSS programs.

Source: [https://www.alsa-project.org/wiki/Main\\_Page](https://www.alsa-project.org/wiki/Main_Page)

Libcurl (7.79.1)

HTTP client; libcurl is a free and easy-to-use client-side URL transfer library, supporting FTP, FTPS, HTTP, HTTPS, SCP, SFTP, TFTP, TELNET, DICT, LDAP, LDAPS, FILE, IMAP, SMTP, POP3 and RTSP. libcurl supports SSL certificates, HTTP POST, HTTP PUT, FTP uploading, HTTP form based upload, proxies, cookies, user+password authentication (Basic, Digest, NTLM, Negotiate, Kerberos4), file transfer resume, http proxy tunneling and more!

This piece of software is made available under the terms and conditions of the Libcurl license, which can be found below.

Source: <http://curl.haxx.se/>

libevent (1.4.13)

The libevent API provides a mechanism to execute a callback function when a specific event occurs on a file descriptor or after a timeout has been reached.

Furthermore, libevent also support callbacks due to signals or regular timeouts.

source: <https://libevent.org/>

libjpeg-turbo (2.1.1)

libjpeg-turbo is a JPEG image codec that uses SIMD instructions (MMX, SSE2, AVX2, Neon, AltiVec) to accelerate baseline JPEG compression and decompression on x86, x86-64, Arm, and PowerPC systems, as well as progressive JPEG compression on x86 and x86-64 systems. On such systems, libjpeg-turbo is generally 2-6x as fast as libjpeg, all else being equal. On other types of systems, libjpeg-turbo can still outperform libjpeg by a significant amount, by virtue of its highly-optimized Huffman coding routines. In many cases, the performance of libjpeg-turbo rivals that of proprietary high-speed JPEG codecs.

Source: <https://libjpeg-turbo.org/>

libjpng (6b)

This library is used to perform JPEG decoding tasks.

This piece of software is made available under the terms and conditions of the libjpng license, which can be found below.

Source: <http://www.ijg.org/>

libpng (1.0.1)

libpng -THE reference library for reading, displaying, writing and examining png Image Network Graphics.

This piece of software is made available under the terms and conditions of the libpng license, which can be found

below.

Source: <http://sourceforge.net/projects/libpng/files/>

#### libffi (3.2.1)

Compilers for high level languages generate code that follows certain conventions. These conventions are necessary, in part, for separate compilation to work. One such convention is the "calling convention". The "calling convention" is a set of assumptions made by the compiler about where function arguments will be found on entry to a function. A "calling convention" also specifies where the return value for a function is found.

Source: <https://sourceware.org/libffi/>

#### libjansson (2.13.1)

Jansson is a C library for encoding, decoding and manipulating JSON data. Its main features and design principles are:

Simple and intuitive API and data model

Comprehensive documentation

No dependencies on other libraries

Full Unicode support (UTF-8)

Extensive test suite

Source: <https://github.com/akheron/jansson>

#### libmicrohttpd (0.9.73)

GNU libmicrohttpd is a small C library that is supposed to make it easy to run an HTTP server as part of another application. GNU Libmicrohttpd is free software and part of the GNU project

Source: <https://www.gnu.org/software/libmicrohttpd/>

#### libupnp (1.6.10)

The portable SDK for UPnP™ Devices (libupnp) provides developers with an API and open source code for building control points, devices, and bridges that are compliant with Version 1.0 of the Universal Plug and Play Device Architecture Specification and support several operating systems like Linux, \*BSD, Solaris and others.

Source: <https://pupnp.sourceforge.io/>

#### libuuid (1.3.0)

This library is free software; you can redistribute it and/or modify it under the terms of the Modified BSD License.

The complete text of the license is available at the Documentation/licenses/COPYING.BSD-3 file

Source: <https://sourceforge.net/projects/libuuid/>

#### Libxml2 (2.9.12)

The "libxml2" library is used in AstroTV as a support for the execution of NCL application. This library was developed for the GNOME software suite and is available under a "MIT" license.

Source: <http://www.xmlsoft.org>

#### linux\_kernel (4.19)

The Linux kernel is a mostly free and open-source,[11] monolithic, modular, multitasking, Unix-like operating system kernel. It was originally authored in 1991 by Linus Torvalds for his i386-based PC, and it was soon adopted

as the kernel for the GNU operating system, which was written to be a free (libre) replacement for UNIX.

Source: <https://www.kernel.org/>

#### mbed TLS (2.26.0)

Mbed TLS is a C library that implements cryptographic primitives, X.509 certificate manipulation and the SSL/TLS and DTLS protocols. Its small code footprint makes it suitable for embedded systems.

Source: <https://github.com/ARMmbed/mbedtls>

#### ncurses (6.1)

The ncurses (new curses) library is a free software emulation of curses in System V Release 4.0 (SVr4), and more. It uses terminfo format, supports pads and color and multiple highlights and forms characters and function-key mapping, and has all the other SVr4-curses enhancements over BSD curses. SVr4 curses is better known today as X/Open Curses.

Source: <http://www.gnu.org/software/ncurses/>

#### nghttp2 (1.6.3)

nghttp2 is an implementation of HTTP/2 and its header compression algorithm HPACK in C

Source: <https://nghttp2.org/>

#### NTFS-3G (7.8)

NTFS-3G is an open source cross-platform implementation of the Microsoft Windows NTFS file system with read-write support. NTFS-3G often uses the FUSE file system interface, so it can run unmodified on many different operating systems. It is runnable on Linux, FreeBSD, NetBSD, OpenSolaris, BeOS, QNX, WinCE, Nucleus, VxWorks, Haiku, MorphOS, and Mac OS X It is licensed under either the GNU General Public License or a proprietary license. It is a partial fork of ntfsprogs and is under active maintenance and development.

This piece of software is made available under the terms and conditions of the NTFS-3G Read/Write Driver license, which can be found below.

Source: <http://www.tuxera.com>

#### openssl (1.1.1l)

OpenSSL is an open source implementation of the SSL and TLS protocols. The core library (written in the C programming language) implements the basic cryptographic functions and provides various utility functions. Wrappers allowing the use of the OpenSSL library in a variety of computer languages are available.

Source: <http://www.openssl.org/>

#### pcre (8.45)

The PCRE library is a set of functions that implement regular expression pattern matching using the same syntax and semantics as Perl 5. PCRE has its own native API, as well as a set of wrapper functions that correspond to the POSIX regular expression API. The PCRE library is free, even for building proprietary software.

<https://www.pcre.org/>



#### procps (ps, top) (3.3.15)

procps is the package that has a bunch of small useful utilities that give information about processes using the /proc filesystem.

The package includes the programs ps, top, vmstat, w, kill, free, slabtop, and skill.

Source: <http://procps.sourceforge.net/index.html>

#### SQLite3 (3.36.0)

SQLite is a in-process library that implements a self-contained, serverless, zero-configuration, transactional SQL database engine.

This piece of software is made available under the terms and conditions of the SQLite3 license, which can be found below.

Source: <http://www.sqlite.org/>

#### util-linux-ng (2.35.2)

Various system utilities.

Source: <http://userweb.kernel.org/~kzak/util-linux-ng/>

#### wpa\_supplicant (2.9)

wpa\_supplicant is a WPA Supplicant for Linux, BSD, Mac OS X, and Windows with support for WPA and WPA2 (IEEE 802.11i / RSN). It is suitable for both desktop/laptop computers and embedded systems.

Supplicant is the IEEE 802.1X/WPA component that is used in the client stations. It implements key negotiation with a WPA Authenticator and it controls the roaming and IEEE 802.11 authentication/association of the wlan driver.

Source: [https://w1.fi/wpa\\_supplicant/](https://w1.fi/wpa_supplicant/)

#### zlib (1.2.8)

The 'zlib' compression library provides in-memory compression and decompression functions, including integrity checks of the uncompressed data.

This piece of software is made available under the terms and conditions of the zlib license, which can be found below.

Source: <http://www.zlib.net/>

## **28. Disclaimer regarding services and/or software offered by third parties**

---

Services and/or software offered by third parties may be changed, suspended, or terminated without prior notice. TP Vision does not bear any responsibility in these sorts of situations.

# Index

---

<b>A</b>			
Advanced Picture Settings	31	Get Support	5
Advanced Sound Settings	34	Google Assistant	48
Alexa	47	<b>H</b>	
Antenna	13	HbbTV	35
App lock	38	HDMI	13
Audio Language	38	HDMI - ARC	14
Audio Out Menu	34	HDMI - CEC	35
Auto Clock Mode	38	HDMI Sound System	34
Automatic software update	49	Headphone Connection	14
		Headphones	34
<b>C</b>		Help Menu	5
Channel List	23	Home or Shop	36
Channel List Copy	21	<b>I</b>	
Channel Options	21	Identify TV	5
Channel, Channel Filter	23	Install Channel - Antenna	18
Channel, Rename Channel	23	Install Channel - Cable	18
Channels	18	Install Channel - Satellite	20
Child Lock	38	<b>L</b>	
Child Lock, Change Code	38	Location	36
Child Lock, Set Code	38	Lock Channel	24
CI Card	15	<b>M</b>	
Clear Internet Memory	40	Menu Languages	38
Clock	38	Mouse Settings	35
Connect Device	13	<b>N</b>	
Connection - Power Cable	12	Netflix Settings	40
Consumer Care	6	Network - Wired	40
Contact Info	5	Network - Wireless	40
		Network Settings	40
<b>D</b>		Network Settings Menu	40
Date	38	<b>P</b>	
Daylight Saving	38	Parental Rating	38
Dialogue enhancement	37	Philips TV Remote App	15
Digital Audio Out - Optical	14	Photos, Videos and Music	28
Digital Media Renderer - DMR	40	Picture Clean, Noise Reduction	31
Digital Out Delay	34	Picture Contrast Menu	31
Digital Out Format	34	Picture Contrast Mode	31
Digital Out Levelling	34	Picture Format	32
Digital Out Menu	34	Picture Style	30
Digital Out Offset	34	Picture, Brightness	30
Dynamic Contrast	31	Picture, Colour	30
Dynamic surround	32	Picture, Contrast	30
		Picture, Light sensor	31
<b>E</b>		Picture, Sharpness	30
EasyLink 2.0	33	Privacy settings	40
Eco, Light Sensor	36	Problems	54
End of Use	51	<b>Q</b>	
Energy Saving	36	Quick menu	30
Equalizer	32	Quick Picture Settings	32
European Eco-label	51	<b>R</b>	
		Reception	52
<b>F</b>		Register TV	5
Favourite Channel, Channel Range	23	Remote Control - IR Sensor	10
Favourite Channel, Create	23	Rename or replace device icon	17
Favourite Channel, Edit	23	Repair	6
Favourite Channels	24		
Frequent settings	30		
<b>G</b>			
Gamma	31		
General Settings	35		

Reset Settings	37
<b>S</b>	
Safety and Care	58
Satellite	13
Screen Mirroring	14
Screen Mirroring Connection	14
Screen Off	36
Screensaver settings	36
Self-diagnose	5
Shop Setup	36
Sleep Timer	38
Smart TV	42
Software Version	49
Sound Menu	32
Sound Styles	32
Sound, Auto Volume Levelling	34
Sound, Delta Volume	34
Source List	17
Standby Mode	12
Static IP	40
Store	42
Subtitle Language	38
Super resolution	31
Switch Off Timer	36
Switch On with Wi-Fi	40
Switching On	12
<b>T</b>	
Teletext	24
Terms of use	40
Text	24
Time	38
Time Zone	38
Troubleshooting	54
TV Diagnose	5
TV Guide	26
TV Information	5
TV Network Name	40
TV Placement	33
TV Speaker	34
<b>U</b>	
Universal Access	37
Universal Access, Audio Description	37
Universal Access, Audio Effects	37
Universal Access, Hearing Impaired	37
Universal Access, Mixed Volume	37
Universal Access, Speech	37
Unlock Channel	24
Update Software	49
Update Software - Internet	49
Update Software - Local Updates	49
Update Software - USB	49
USB Flash Drive	16
USB Keyboard Settings	35
User Manual	5
<b>V</b>	
Video Contrast	31
View Network Settings	40
View software update history	49
Viewing Distance	11
<b>W</b>	
Wi-Fi	40



All registered and unregistered trademarks are property of their respective owners.  
Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured and is sold under the responsibility of TP Vision Europe B.V., and TP Vision Europe B.V. is the warrantor in relation to this product.  
2023 © TP Vision Europe B.V. All rights reserved.

[www.philips.com/welcome](http://www.philips.com/welcome)