



Philips Philips 5400  
Series  
Fully automatic  
espresso machines

- 12 Beverages
- LatteGo milk solution
- Chrome
- TFT display

EP5447/90



## 12 delicious fresh bean coffees, easier than ever

### LatteGo, the fastest to clean milk system ever\*

Easily make aromatic coffee varieties like Espresso, Coffee, Cappuccino and Latte Macchiato at the touch of a button. LatteGo tops milk varieties with silky smooth froth, is easy to set up and can be cleaned in as little as 15 seconds\*

#### A variety of coffees customised to your taste

- Silky-smooth cappuccino; freshly brewed by yourself at home.
- Easy selection of your coffee with the intuitive display
- Adjust aroma and volume with the coffee customiser
- Your perfect cup, every time, thanks to 4 user profiles
- Enjoy 12 coffees at your fingertips, including café au lait

#### High-quality coffee from fresh beans

- 20,000 cups of finest coffee with durable ceramic grinders
- The perfect temperature, aroma and crema cup after cup\*\*
- Easily adjust to your taste with 12-step grinder levels
- Even more flavour thanks to the extra shot function

#### Effortless use and cleaning for everyday enjoyment

- Easy cleaning thanks to the fully removable brew group
- Up to 5000 cups\*\*\* without descaling thanks to AquaClean
- Premium machine, elegantly designed for your kitchen

# PHILIPS

Fully automatic espresso machines  
12 Beverages LatteGo milk solution, Chrome, TFT display

EP5447/90

# Highlights

## LatteGo milk system



Enjoy silky-smooth cappuccino, even with your favourite plant-based milk alternatives. Thanks to the cyclonic frothing technology, LatteGo transforms various types of milk and plant-based alternatives with the right amount of fat and protein into the best possible dense layer of foam.

## 12 delicious coffees



Every moment has its own kind of coffee to enjoy. From a powerful espresso to an indulgent cappuccino, your bean to cup coffee machine delivers perfect in-cup results in no time, without any fuss.

## Intuitive display



There's little standing between you and your next delicious cup of coffee with our easy to use display. In a few steps you can customise your fresh-bean flavour and flow smoothly from craving to cup.

## Coffee customiser



Make any coffee your own with the coffee customiser's easily adjustable settings for intensity, coffee and milk length.

## User profiles


Enjoy coffee you love the same way every time with four user profiles that store your customised recipes. With an extra guest profile, your visitors can savour a coffee exactly the way they like, without changing yours.

## Extra shot function



Boost your drink's intensity with the coffee customiser's extra-shot feature, which adds powerful flavour without the bitterness.

## Perfect temperature and aroma

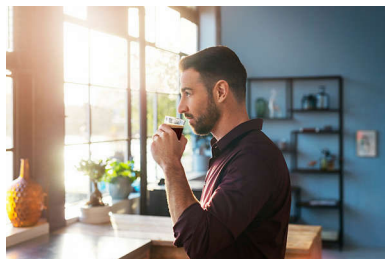

The Aroma Extract system intelligently strikes the optimum balance between brewing temperature and aroma extraction by keeping the water temperature between 90 and 98°C,

while regulating the water flow rate, so you can enjoy delicious coffees.

## 12-step grinder adjustment




Our durable ceramic grinders can be adjusted in 12 steps, so you can turn your beans into anything from ultra-fine powder to coarse grindings.

## 100% ceramic grinders



Bring out the full flavour of your coffee with our hard-wearing ceramic grinder. Our sharp-edged grinders extract the best aroma and flavour from your beans. Made from 100% ceramic material which ensures that they last for at least 20.000 cups, from coarse to ultra-fine.

## Exceptionally easy to clean

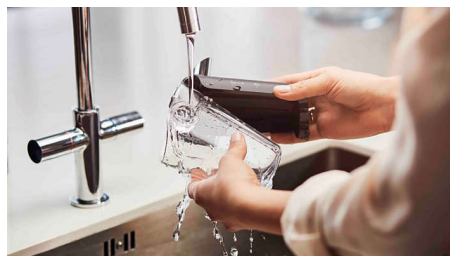

For your convenience, you can put the LatteGo drip tray and the coffee ground container in the dishwasher. This will save time and ensure a hygienic clean.

# Specifications

## Country of origin

- Designed in: Italy
- Made in: Romania

## Customisation

- Aroma Strength Settings: 5
- Coffee and Milk Length: Adjustable
- Grinder Settings: 12
- Pre-Brew Aroma control
- User Profiles: 4, Guest
- Temperature settings: 3

## Variety

- Beverages: Espresso, Coffee, Americano, Cappuccino, Latte Macchiato, Flat white, Café au Lait, Caffè Latte, Caffè crema, Ristretto, Espresso Lungo, Travel mug function, Frothed milk, Hot water
- Coffee Powder Option
- Double Cup
- Milk Double Cup: No

## Other features

- Removable brew group
- Aroma Seal
- Guided descaling
- AquaClean

## Accessories

- Included: Measuring scoop, Water hardness test strip, AquaClean filter, Grease tube, LatteGo storage lid

## Technical specifications

- Cord length: 100 cm
- Colour(s): Black
- Voltage: 230 V
- Frequency: 50 Hz
- Capacity milk carafe: 0.26 L
- Capacity water tank: 1.8 L
- Capacity waste container: 12 servings
- Weight of product: 8 kg
- Coffee bean capacity: 275 g
- Waste container: Frontal access
- Water tank: Frontal access
- Filter compatibility: AquaClean
- Pump pressure: 15 Bar
- Product dimensions: 246x372x433 mm
- Finishing: Chrome

## General specifications

- Adjustable spout height: 85 - 145 mm
- Milk Solution: LatteGo
- Ease of cleaning and maintenance: AquaClean filter compatible
- Dishwasher-safe parts: Drip tray, LatteGo
- Type of display: TFT

## Service

- 2 year guarantee

## Sustainability

- ECO setting
- Power consumption brewing: 1500 W
- Recyclable packaging material: > 95%



Issue date 2023-08-16

Version: 9.9.1

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Based on consumer testing in Germany comparing leading One Touch (Coffee + Milk) Full Automatic Espresso Machines (2018).  
\* \*\*Based on 70-82°C.  
\* \*\*Based on 8 filter replacements as indicated by the machine. Actual number of cups depends on selected coffee varieties, rinsing and cleaning patterns.