

Philips 5000 series
Tower Fan

Fan airflow 2230 m³/h

Remote controller
105 cm slim design
Suitable for aroma diffusion

CX5535/11

Powerful yet quiet cooling

Performance, quality and comfort

Enjoy powerful cooling with minimal noise and energy usage. Designed for high performance, this self-rotating fan brings a quick cooling effect to the entire room. Optionally, it can also infuse the air with your favourite scents.

High Performance

- Large airflow coverage for comfortable cooling
- Aromatherapy add-on to refresh your home
- Quiet Sleep mode for a comfortable night
- Feel the breeze with the Natural Wind mode

Effortless control

- A mode for every mood
- Save energy and reduce hassle with the timer feature
- Slim, space-saving design
- 60° oscillation reaches anywhere you need
- Convenience at your fingertips with remote and touch panel

Seamless operation

- Thoroughly tested for durability and quality
- High performance, durable copper motor
- Added peace of mind with the child lock

PHILIPS

Tower Fan

Fan airflow 2230 m³/h Remote controller, 105 cm slim design, Suitable for aroma diffusion

CX5535/11

Highlights

Large Airflow



Our air outlet is designed to be wide and high, providing maximum coverage and quickly cooling the entire room. With a 60° oscillation feature, the fan can reach wherever you need it, ensuring that the entire room is cool and comfortable.

A mode for every mood



Fully customise your fan's performance to your needs, whether you prefer a gentle breeze or a more powerful blast of air, with its three speed settings. With three versatile modes (Normal, Natural Wind, Quiet Sleep), you can choose the perfect mode to suit your preferences and fully customise your comfort.

Aromatherapy add-on



Enhance the cooling experience by infusing the breeze with your favourite essential oils, creating a soothing and rejuvenating sensory atmosphere. The optional aroma-diffuser add-


on allows you to create the perfect ambiance for relaxation and well-being (1).

Quiet Sleep mode



Experience a cool and peaceful night's sleep with the Quiet Sleep mode. This mode gradually decreases the fan speed to the lowest setting over 30 minutes, helping you fall asleep naturally while also conserving energy.

Refreshing Natural wind

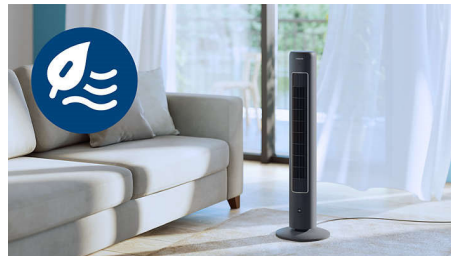

Bring the refreshing feeling of an outdoor breeze into your room with the Natural Wind mode and enjoy a more natural and invigorating indoor experience.

Timer function



Set the timer for anywhere between 1 and 7 hours, allowing you to enjoy a cool breeze for the perfect amount of time while also conserving energy and reducing costs. Our 40-


W tower fan is energy efficient, using less energy than a traditional light bulb.

Slim Design



A minimalistic, eye-catching design that blends seamlessly with any decor. The slim, space-saving design makes it perfect for use in bedrooms, offices, kitchens and other areas where space is at a premium. Place your tower fan in the corner or against a wall without it getting in the way of things.

Rotation function

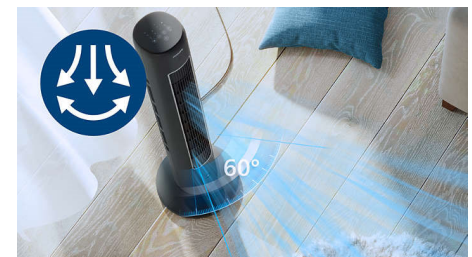

Optimum oscillation that ensures that air is circulated throughout your room. No more hot spots or stuffy air, just a comfortable and cool experience.

Remote availability



The feather touch control panel and ergonomic remote controller make our tower fan a pleasure to use and have in any room.

Tower Fan

Fan airflow 2230 m3/h Remote controller, 105 cm slim design, Suitable for aroma diffusion

CX5535/11

Specifications

Performance

- Airflow: 2230 m3/h
- Power consumption: 40 W
- Standby power consumption: 0.2 W
- Voltage: 220-240 V

Usability

- Cord length: 1.8 m
- Child Lock
- Oscillation
- Min. noise level: 39 dB(2)
- Max. noise level: 46 dB(2)
- Timer

Modes

- Speed levels: 3
- Normal Mode
- Natural Mode
- Quiet Sleep Mode
- Aroma diffuser

Weight and dimensions

- Product weight: 4.5 kg
- Product dimensions (L*W*H):
31.0 x 31.0 x 104.8 cm
- Weight (Incl. packaging): 6.1 kg
- Packaging dimensions (L*W*H):
23.8 x 23.8 x 109.5 cm



Issue date 2023-11-21

Version: 3.3.2

EAN: 87 20389 02972 1

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* (1) No essential oils included with the purchase of this product.
* (2) The average sound level, based on IEC 60704-2-7:2020.