




Philips 5000 series  
3D Ultra Slim Smart LED  
TV

**107cm (42")**  
Easy 3D

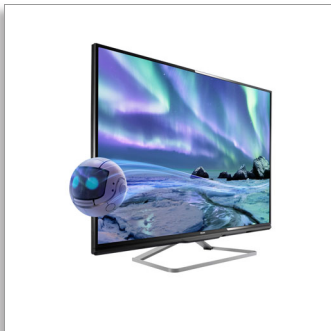

**42PFL5008D**

## Journey beyond the screen

3D Smart Ultra Slim LED TV with Ambilight

Immerse yourself in the action—online and off—with the Philips 5008 series 3D SMART LED TV. Enjoy the vibrant quality of Full HD LED, the endless possibilities of Smart TV and our most comfortable 3D experience to date.

### A world of online content at your fingertips

- Skype™ for easy voice and video calls on your TV
- Integrated Wi-Fi to connect easily to the world online
- Smart TV—a world of online entertainment
- Simply share photos, music and movies through DLNA

### Control how you share and record on the big screen

- MyRemote app—control your TV with your phone or tablet

### Experience the next dimension in entertainment

- Easy 3D for a comfortable 3D experience
- Full HD LED TV—brilliant LED images with incredible contrast
- 200Hz Perfect Motion Rate (PMR) for clear motion sharpness
- Pixel Plus HD for better details and clarity

### Taking design to the next level

- With an aluminum look and eco A-frame stand to blend in

**PHILIPS**

# Highlights

## Aluminum look and A-frame

With an aluminum look and eco A-frame stand to blend in

## Skype™ TV video calls\*



Add a new dimension to your calls and share experiences with the people that matter to you, wherever they are. With Skype™ on your TV, make voice and video calls from your living room. Just plug the optional Philips TV camera (PTA317) into your TV and enjoy excellent video and sound quality from the comfort of your couch.

## Integrated Wi-Fi



Integrated Wi-Fi on your Philips Smart TV makes connecting to your home network quick and easy, allowing you to access a world of content or share wirelessly at home.

## Smart TV online apps



Explore the boundaries that lie beyond traditional TV. Rent and stream movies, videos, games and more, directly onto your TV from online video stores. Watch catch-up TV from your favorite channels and enjoy a rich selection of online apps with Smart TV. Connect to family and friends with Skype™ or social networking. Or... just browse the Internet!

## SimplyShare TV



Share photos, music, videos and movies through DLNA using your smartphone, tablet or computer and enjoy them on the big screen. Sharing made simple.

## MyRemote\*

Control your TV and record on the go without a remote control using one easy app. Transform your tablet or smart phone into a universal remote with all the options of your original remote plus extra features like text entry. The SimplyShare function beams content onto your TV. Push digital broadcast TV onto your devices using the Wi-Fi smart screen. Stay up to date by recording your favorite programs on-the-go using MyRemote

recording. Simply flip through the content on the TV Program Guide to choose which shows to record and view later. A Smart TV deserves a truly smart app.

## Full HD LED TV



Picture quality matters. Regular HDTVs deliver quality, but you expect the best. Imagine breathtakingly crisp detail paired with high brightness, incredible contrast, sharp motion definition, realistic colors and a true to life picture—as well as low power consumption. Well, look no further. Full HD LED delivers more detail than standard HDTVs. And more detail in the image means a more intense viewing experience for you.

## Easy 3D



Enjoy hours of viewing comfort thanks to passive 3D technology that delivers you high quality, flicker free, low ghosting 3D. Convert any 2D content into vivid and flawless 3D. The stylish, lightweight 3D glasses are comfortable to wear and do not require batteries.

## Pixel Plus HD

Our advanced digital picture processing technology increases the number of lines and the number of pixels. The result delivers razor sharp pictures with incredible detail and depth, every time and from any source.



# Specifications

## Ambilight

- Ambilight Features: Wall colour adaptive, Lounge light mode
- Ambilight Version: 2-sided

## Picture/Display

- Aspect ratio: 16:9
- Diagonal screen size (inch): 42 inch
- Diagonal screen size (metric): 107 cm
- Display: LED Full HD
- 3D: 2 Player Full Screen Gaming\*, 3D Depth adjustment, 2D to 3D conversion, Easy 3D
- Panel resolution: 1920x1080p
- Brightness: 300 cd/m<sup>2</sup>
- Picture enhancement: Pixel Plus HD, 200Hz Perfect Motion Rate, Micro Dimming

## Supported Display Resolution

- Computer inputs: up to 1920x1080 @ 60Hz
- Video inputs: 24, 25, 30, 50, 60 Hz, up to 1920x1080p

## Tuner/Reception/Transmission

- Digital TV: DVB-T
- Video Playback: NTSC, PAL, SECAM

## Smart TV

- TV programme guide\*: 8 day Electronic Program Guide
- SmartTV apps\*: Catch-up TV, Netflix\*, Online apps, Online Video stores, Open Internet browser, YouTube
- Social TV: Facebook, Skype, Twitter

## Multimedia Applications

- Video Playback Formats: Containers: AVI, MKV, H264/MPEG-4 AVC, MPEG-1, MPEG-2, MPEG-4, WMV9/VC1
- Music Playback Formats: AAC, MP3, WMA (v2 up to v9.2)
- Picture Playback Formats: JPEG

## User Interaction

- Wireless interaction: SimplyShare, MultiRoom Client\*, Wi-fi Miracast Certified\*, PC In Monitor
- Program: Pause TV, USB Recording\*
- Ease of Installation: Auto detect Philips devices, Device connection wizard, Network installation wizard, Settings assistant wizard
- Ease of Use: One-stop Home button, Onscreen Usermanual
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB, Online firmware upgrade
- Screen Format Adjustments: 4:3, Autofill, Autozoom, Movie expand 16:9, Super Zoom,

Unscaled, Widescreen

- Signal strength indication
- Teletext: 1000 page Smart Text
- My Remote App\*: Control, MyRemote Recording, Simply Share, TV Guide

## Sound

- Output power (RMS): 20W
- Sound Enhancement: Auto Volume Leveler, Clear Sound, Incredible Surround

## Connectivity

- Number of HDMI connections: 3
- HDMI features: 3D, Audio Return Channel
- Number of component in (YPbPr): 1
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby, Plug & play add to Homescreen, Auto subtitle shift (Philips), Pixel Plus link (Philips), One touch play
- Number of USBs: 2
- Wireless connection: Integrated Wi-Fi 11n
- Other connections: Antenna IEC75, Ethernet-LAN RJ-45, Digital audio out (coaxial), Audio L/R in, Headphone out, Service connector

## Power

- Mains power: AC 220 - 240 V 50/60Hz
- Ambient temperature: 5 °C to 35 °C
- Power consumption: 101 W
- Standby power consumption: <math>0.5\text{ W}</math>
- Power Saving Features: Auto switch-off timer, Eco mode, Picture mute (for radio)

## Accessories

- Included accessories: 4x Passive 3D Glasses, Remote Control, 2 x AAA Batteries, Table top stand, Power cord, Quick start guide, Legal and safety brochure, Warranty Leaflet
- Optional accessories: Philips TV camera PTA317, 3D glasses PTA417, 3D glasses Game kit PTA436

## Dimensions

- Set Width: 957 mm
- Set Height: 573 mm
- Set Depth: 37.3 mm
- Product weight: 12.9 kg
- Set width (with stand): 957 mm
- Set height (with stand): 650 mm
- Set depth (with stand): 238 mm
- Product weight (+stand): 15.3 kg
- Box width: 1129 mm
- Box height: 680 mm
- Box depth: 134 mm
- Compatible wall mount: 400 x 400mm
- Weight incl. Packaging: 15.7 kg



Issue date 2023-10-05

Version: 2.0.1

EAN: 87 12581 71686 8

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* MyRemote app and related functionalities varies per TV model and country, as well as smart device model and OS. For more detail, please visit: [www.philips.com/TV](http://www.philips.com/TV).

\* Compatibility depends on wifi miracast certification Android 4.2 or later. For more details please refer to your device documentation.

\* For smart TV app, visit [www.philips.com/TV](http://www.philips.com/TV) to discover the services offering in your country

\* Philips TV camera (PTA317) is sold separately.

\* Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above.

Watching 3D is not recommended for children under 6 years of age as their visual system is not fully developed yet.

\* EPG and actual visibility (up to 8 days) is country and operator dependent.