



Philips Momentum  
Curved QHD LCD display  
with Ambiglow

### Momentum

32 (31.5" / 80 cm diag.)  
2560 x 1440 (QHD)



328M6FJRGB

## Get in the moment

The Momentum display with HDR and immersive Ambiglow lighting brings you a new level of immersion. AMD FreeSync™ technology and 144Hz fast refresh rate gives flawlessly smooth entertainment experience for playing games and watching movies.

#### Built for fast action

- 144Hz refresh rates for ultra-smooth, brilliant images
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming

#### Superb Picture Quality

- Crystalclear images with Quad HD 2560 x 1440 pixels
- Ultra Wide-Color wider range of colors for a vivid picture
- High Dynamic Range (HDR) for more lifelike colorful visuals

#### Design to enhance the senses

- Crafted with premium materials for a sophisticated look
- Curved display design for more immersive experience
- Ambiglow intensifies entertainment with halo of light

#### Get comfortable

- Less eye fatigue with Flicker-free technology
- LowBlue Mode for easy on-the-eyes productivity
- Height adjustment for ideal sitting position

# PHILIPS

Curved QHD LCD display with Ambiglow  
Momentum 32 (31.5" / 80 cm diag.), 2560 x 1440 (QHD)


# Highlights

## Ambiglow Technology




Ambiglow adds a new dimension to your viewing experience. The innovative Ambiglow technology enlarges the screen by creating an immersive halo of light. Its fast processor analyses the incoming image content and continuously adapts the color and brightness of the emitted light to match the image. User friendly options allow you to adjust the ambiance to your liking. Especially suited for watching movies, sports or playing games, Philips Ambiglow offers you a unique and immersive viewing experience.

## Curved display design

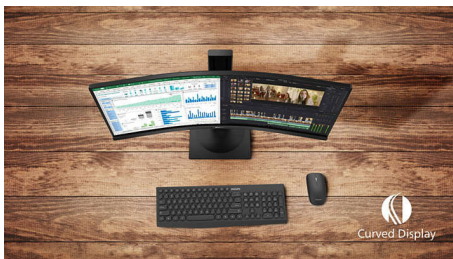

Desktop monitors offer a personal user experience, which suits a curve design very well. The curved screen provides a pleasant yet subtle immersion effect, which focuses on you at the center of your desk.

## Crystalclear images

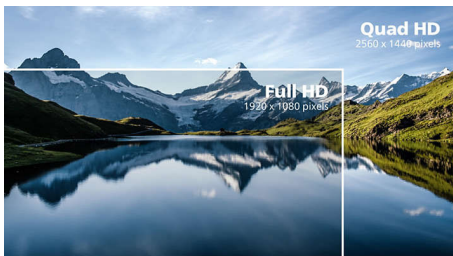

These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel


images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

## Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring, media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.


## High Dynamic Range (HDR)

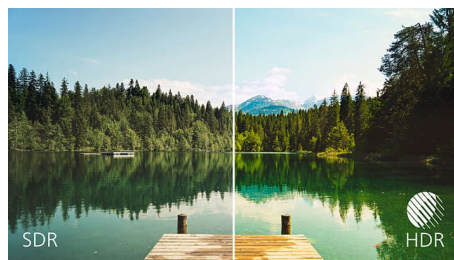

High Dynamic Range delivers a dramatically different visual experience. With astonishing brightness, incomparable contrast and captivating color, images come to life with much greater brightness while also featuring much deeper, more nuanced darks. It renders a fuller palette of rich new colors never before seen on display, giving you a visual experience that engages your senses and inspires emotions.

328M6FJRGB/01

## AMD FreeSync™ Premium

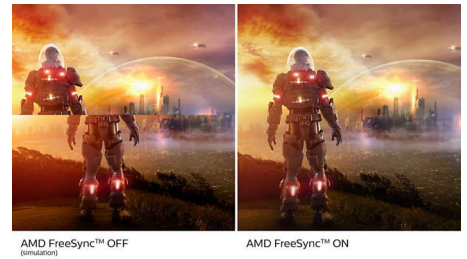

Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

## 144Hz Gaming



You play intense, competitive gaming. You demand display with lag free, ultra-smooth images. This Philips display redraws the screen image up-to 144 times per second, effectively 2.4x faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 144Hz frame rate, you get those critical missing images on the screen which shows enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

## Ergonomic design

The Smart Ergo Base is a "people friendly" base that delivers screen rotation, swivel, tilt and height adjustment for improved ergonomics and intelligent cable management for a tidy workspace.



# Specifications

## Connectivity

- Signal Input: VGA (Analog ), DisplayPort 1.4 x 2, HDMI 1.4 x 1, HDMI 2.0 x 1
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

## Picture/Display

- Panel Size: 31.5 inch / 80 cm
- Aspect ratio: 16:9
- LCD panel type: MVA
- Backlight type: W-LED system
- Pixel pitch: 0.272 x 0.272 mm
- Optimum resolution: 2560 x 1440 @ 144 Hz
- Brightness: 400 cd/m<sup>2</sup>
- Display colors: 16.7 M
- Color gamut (typical): NTSC 101%\*, sRGB 121%\*
- Color gamut (min.): BT. 709 Coverage: 98.3 %\*; DCI-P3 Coverage: 90.9%\*
- Contrast ratio (typical): 3000:1
- SmartContrast: 50,000,000:1
- Response time (typical): 4 ms (Gray to Gray)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Effective viewing area: 697.34 (H) x 392.26 (V) - at a 1800R curvature\*
- Scanning Frequency: 30 - 230 kHz (H) / 48 - 144 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 93 PPI
- LowBlue Mode
- AMD FreeSync™ technology: Premium
- HDR: DisplayHDR 400 certified

## Convenience

- Built-in Speakers: 5 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Menu/OK, Input/Up, SmartImage Game/Return, SmartSize/Down, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Ambiglow, Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl

## Stand

- Height adjustment: 130 mm
- Tilt: -5/20 degree

## Power

- Power supply: External, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 61 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 831 x 607 x 396 mm
- Product without stand (mm): 713 x 427 x 52 mm
- Product with stand(max height): 713 x 606 x 286 mm

## Weight

- Product with packaging (kg): 12.16 kg
- Product with stand (kg): 7.87 kg
- Product without stand (kg): 6.11 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: RoHS, Mercury Free, WEEE
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, CU-EAC, RCM, CCC

## Cabinet

- Color: Black
- Finish: Glossy / Textured

## What's in the box?

- Cables: Audio cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-03-24

Version: 10.0.1

EAN: 87 12581 74640 7

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* Radius of the arc of the display curvature in mm

\* Response time value equal to SmartResponse

\* NTSC Area based on CIE1976

\* sRGB Area based on CIE1931

\* This Philips display is capable of achieving upto 144Hz refresh rates thru its HDMI 2.0 and DisplayPort connector. Please ensure your graphics card is capable of 144Hz refresh rates and updated with the latest driver.

\* For any questions related to 144Hz performance please refer to your card vendor directly.

\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

\* The monitor may look different from feature images.