



Philips Brilliance
LED-backlit LCD monitor

B Line

22 (21.5"/54.6 cm diag.)
1920 x 1080 (Full HD)

221B6QPYEB

Crisp images, efficient performance

with PowerSensor saves energy

The Philips PowerSensor AH-IPS LED display, which uses 65% post-consumer recycled plastics and PVC, BFR-free housing, is ideal for eco-friendly productivity

Excellent performance

- Less eye fatigue with Flicker-Free technology
- SmartImage pre-sets for easy optimised image settings
- AH-IPS display for brilliant images with vivid colours

Designed for people

- Low bezel-to-table height for maximum reading comfort
- SmartErgoBase enables user-friendly ergonomic adjustments

Sustainable Eco-design

- Zero power consumption with 0 watt hard switch
- PowerSensor saves up to 80% energy costs

Easy to experience


- USB Hub with four ports for easy connections
- Built-in stereo speakers for multimedia
- DisplayPort connection for maximum visuals

PHILIPS

LED-backlit LCD monitor
B Line 22 (21.5"/54.6 cm diag.), 1920 x 1080 (Full HD)

Highlights

AH-IPS technology

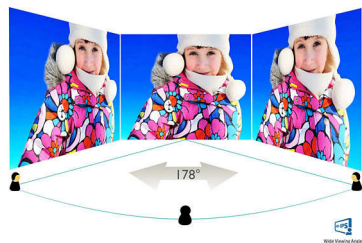

This latest Philips display uses advanced AH-IPS panels, resulting in superior colour reproduction, response time and power consumption. Unlike standard TN panels, AH-IPS panels show consistent colour even at 178-degree wide angles and in pivot mode. With remarkable performance, AH-IPS is best suited for applications demanding colour accuracy and consistent brightness at all times, such as photo retouching, graphics applications and web browsing.

Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed

on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

SmartErgoBase



The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height-adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

Low bezel-to-table height



Thanks to its advanced SmartErgoBase, the Philips monitor can be lowered down almost to desk level for a comfortable viewing angle. Low bezel-to-table height is the perfect solution if you use bifocals, trifocals or progressive lens glasses for your computing work. Additionally, it allows users of different heights to use the monitor at their preferred heights to use the monitor at their preferred angle and height settings, helping them to reduce fatigue and strain.

221B6QPYEB/00

Built-in stereo speakers



A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

Four Ports USB 2.0 HUB

USB Hub allows user to conveniently connect their plug and play multimedia devices such as USB memory devices, camera, portable HDD, Web camera, PDA, Printer and many other devices which have USB connection available. The conveniently located USB 2.0 Hub on the monitor allows USB 2.0 signals to pass through to the computer. Note that many devices like cameras and HDD may need to be powered On independently, as they have higher power requirements than the monitor USB Hub can provide.

DisplayPort connection



DisplayPort is a digital link from PC to monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15 metre cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates — making DisplayPort the best choice for not only general office or home use, but also for the more demanding gaming and films, video editing and more. It also keeps interoperability in mind via the use of various adapters.



Specifications

Connectivity

- Signal Input: DisplayPort x 1, DVI-D (digital, HDCP), VGA (Analogue)
- USB: USB 2.0 x 4
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

Picture/Display

- Panel Size: 21.5 inch/54.6 cm
- Aspect ratio: 16:9
- LCD panel type: AH-IPS LCD
- Backlight type: W-LED system
- Pixel pitch: 0.248 x 0.248 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms (Grey to Grey)*
- Viewing angle: 178° (H)/178° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Effective viewing area: 476.06 (H) x 267.79 (V)
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- sRGB

Convenience

- Built-in Speakers: 2 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 8.1 / 8 / 7
- User convenience: SmartImage, Volume, PowerSensor, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Control software: SmartControl Premium

Stand

- Height adjustment: 130 mm
- Pivot: 90 degree
- Swivel: -175/+175 degree
- Tilt: -5/20 degree

Power

- ECO mode: 13.4 W (typ.)
- Power supply: Built-in, 100–240 VAC, 50–60 Hz

- Off mode: Zero watts with AC switch
- On mode: 14.79 W (typ.) (EnergyStar 6.0 test method)
- Standby mode: < 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Packaging in mm (W x H x D): 565 x 422 x 184 mm
- Product without stand (mm): 511 x 319 x 52 mm
- Product with stand (max height): 511 x 483 x 227 mm

Weight

- Product with packaging (kg): 6.78 kg
- Product with stand (kg): 4.90 kg
- Product without stand (kg): 3.10 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 6.0, PowerSensor, EPEAT*, RoHS
- Post-consumer recycled plastic: 65%
- Recyclable packaging material: 100 %
- Specific Substances: PVC/BFR free housing, Mercury free

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, cETLus, FCC Class B, GOST, SASO, SEMKO, TUV Ergo, TUV/GS, WEEE

Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black

What's in the box?

- Cables: VGA, DVI, Audio, Power
- Monitor with stand
- User Documentation



Issue date 2024-04-24

Version: 5.1.1

EAN: 87 12581 72457 3

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "AH-IPS" word mark/trademark and related patents on technologies belong to their respective owners.

* EPEAT rating is valid only where Philips registers the product. Please visit <https://www.epeat.net/> for registration status in your country.

* Response time value equal to SmartResponse