



Philips Brilliance
LCD monitor with
SmartImage

22" (55.9 cm) S-line
WSXGA+

220S2SB

Feature packed display for increased productivity

With features like SmartImage, SmartControl and 0.1 watt soft-off mode the energy efficient Philips 220S2 increases your productivity

Sustainable Eco-friendly solution

- EPEAT Silver ensures lower impact on environment
- Energy Star for energy efficiency and low power consumption
- 0.1 watt Soft-Off mode
- SmartPower: Up to 50% power saving

Outstanding display performance

- SmartImage: Optimized user-friendly display experience
- SmartContrast: For incredible rich black details
- TrueVision: Laboratory quality display performance


Great convenience

- Dual input accepts both analog VGA and digital DVI signals
- Easy picture format control switching in wide and 4:3 format
- Screen tilts to your ideal, individualized viewing angle
- Easy display performance tuning with SmartControl Premium
- Modern Touch controls

PHILIPS

Highlights

SmartImage

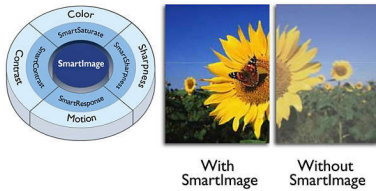

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

SmartPower

SmartPower is an artificial intelligent technology which dynamically analyzes the content of the screen image to achieve power saving. The backlight intensity can be controlled automatically and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs

TrueVision



TrueVision is industry-leading, proprietary Philips testing and algorithm technology for monitor adjustment and fine tuning, an extensive

process that ensures ultimate display performance in compliance with a standard four-times more stringent than Microsoft's Vista requirements from each and every monitor that leaves the factory - not just a few review samples. Only Philips goes to these lengths to deliver this exacting level of color accuracy and display quality in every new monitor.

Dual input



Dual input provides connectors to accommodate input of both analog VGA and digital DVI signals.

EPEAT Silver

Philips EPEAT Silver certified monitors ensure protection for human health and environment, and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. EPEAT Silver is valid only where Philips registers the product. Please visit www.epeat.net for registration status in your country.

Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt

power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from www.energystar.gov

Adjustable tilt

Adjustable tilt is backward and forward movement of a screen on its base to achieve custom positioning for an ideal viewing angle and more comfort for people who spend long hours working on the computer.

Touch controls




Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel.

SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.



Specifications

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

Picture/Display

- Panel Size: 22 inch / 55.9 cm
- Aspect ratio: 16:10
- LCD panel type: TFT-LCD
- Pixel pitch: 0.282 x 0.282 mm
- Optimum resolution: 1680 x 1050 @ 60Hz
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- SmartContrast: 500,000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Convenience

- Plug & Play Compatibility: DDC/CI, Windows 7/ Vista/XP/2000/98, Mac OS X, sRGB
- User convenience: SmartPower, SmartImage, Brightness, Menu, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100x100mm), Kensington lock

Stand

- Tilt: -5/20 degree

Power

- Power supply: Built-in, 100-240VAC, 50/60Hz
- Smart Power Mode: 12W (Min.)
- Off mode: < 0.1 W
- On mode: < 21.5W (EnergyStar 5.0 test method)
- Standby mode: < 0.1 W
- Power LED indicator: Operation - White, Standby

mode- White (blinking)

Dimensions

- Product with stand (mm): 416 x 505 x 201 mm
- Product with stand in inch: 16.38 x 19.88 x 7.91 inch
- Packaging in mm (WxHxD): 486 x 551 x 138 mm
- Product without stand (mm): 351 x 505 x 59 mm
- Packaging in inch (WxHxD): 19.13 x 21.69 x 5.43 inch
- Product without stand in inch: 13.82 x 19.88 x 2.32 inch

Weight

- Product with packaging (kg): 5.66 kg
- Product with stand (kg): 4.18 kg
- Product with packaging (lb): 12.45 lb
- Product with stand (lb): 9.20 lb
- Product without stand (kg): 3.79 kg
- Product without stand (lb): 8.34 lb

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EPEAT Silver, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO 5.0, TUV/GS, TUV Ergo, UL/cUL

Cabinet

- Color: Black/Black
- Finish: Texture



Issue date 2024-03-25

Version: 1.0.2

UPC: 6 09585 18832 7

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com