

Philips  
LCD TV

107cm (42")  
Full HD 1080p  
digital TV

42PFL9664H



## Brings movies to life

With Ambilight and breathtaking sharp pictures

Be captivated by the immersive power of Ambilight in an ultra thin and slim design. Featuring the stunning Perfect Pixel HD engine and powerful sound, movies really come to life in your living room.

### Stylish and elegant design

- Ultra slim and thin TV for perfect fit in your living room

### In-built internet TV

- Philips Net TV with Wi-Fi for online services on your TV
- Enjoy a rich selection of web videos from YouTube and others

### Ready for digital

- MPEG4 HDTV reception via DVB-T and DVB-C tuner with CI+\*

### Perfect LCD Picture

- Perfect Pixel HD Engine for unrivalled sharpness and clarity
- Perfect Natural Motion for ultra smooth Full HD movies
- Full HD LCD display, with a 1920x1080p resolution
- 200 Hz Clear LCD\*, 1 ms performance: superb motion sharpness

### Immersive viewing experience

- Ambilight Spectra 2 enhances the viewing experience

# PHILIPS

LCD TV  
107cm (42") Full HD 1080p, digital TV


# Highlights

## Ambilight Spectra 2



Add a new dimension to your viewing experience with Ambilight Spectra 2. This patented Philips technology enlarges the screen further by projecting a glow of light from the back of the screen onto the surrounding wall. Ambilight adjusts automatically the colour and brightness of the light surrounding the TV to match with the picture, creating an immersive viewing experience. With Ambilight Spectra 2 movies truly come to life!

## Perfect Pixel HD Engine

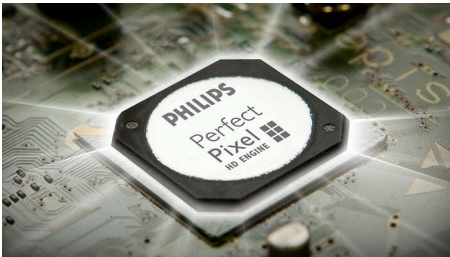

Experience unrivalled sharpness and clarity with Perfect Pixel HD Engine. Each pixel of the picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. The result is a unique combination of sharpness, natural detail, vivid colors superior contrast and smooth natural motion whatever you are watching. Clean and razor sharp images result from artifact and noise detection and reduction in all content sources - from multimedia to standard TV.

## Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

## Philips Net TV with Wi-Fi



Experience a rich selection of online services with Net TV. Enjoy movies, pictures, infotainment and other online content directly on your TV whenever you like. Simply connect your home theater directly to your home network through the ethernet connection, and navigate and select what you want to watch with the remote control. The Philips menu gives you access to popular Net TV services fitted for your TV screen. Additionally, with the DLNA certified PC network you can watch videos or access pictures stored on your computer using your remote control.

42PFL9664H/12

## Perfect Natural Motion



Enjoy the action without any judder. Perfect Natural Motion estimates motion in the picture and corrects juddering movements in both broadcast and pre-recorded movie material (including 1080p movies and 24p True Cinema on Blu-ray and DVD). The result is even smoother and quieter pictures with excellent sharpness. Enjoy motion performance that surpasses cinema quality!

## 200Hz Clear LCD\* (1ms)

Enjoy extreme motion sharpness. The Philips 200Hz Clear LCD brings the response time of LCD TV to an incredible 1ms, so even with the fastest car chase scene you will be enthralled by the action, and not following the stretched car across the screen.

## Ultra slim and thin TV



This ultra slim and thin TV makes your TV fit your living room perfectly. With a bezel of 25 mm and a depth of only 49 mm this TV combines the minimalism of design with the true cinematic viewing experience of Ambilight: Ambilight adds to the viewing experience, not to the size of your TV.

## Videos from YouTube and others

Net TV brings you a rich selection of videos from YouTube and other video websites. The videos are tailored to fit your TV screen, allowing you to sit back and enjoy online videos at an optimum quality.

# Specifications

## Ambilight

- Ambilight Features: Ambilight Spectra 2, Lounge light mode
- Ambilight light system: LED wide color
- Dimming Function: Manual and via Light Sensor

## Picture/Display

- Aspect ratio: Widescreen
- Diagonal screen size (inch): 42 inch
- Diagonal screen size (metric): 107 cm
- Color cabinet: Brushed aluminium decofront
- Panel resolution: 1920x1080p
- Brightness: 500 cd/m<sup>2</sup>
- Picture enhancement: Perfect Pixel HD Engine, Perfect Natural Motion, Perfect Contrast, Perfect Colors, 3/2 - 2/2 motion pull down, 3D Combfilter, Active Control + Light sensor, Jagged Line Suppression, Progressive scan, 1080p 24/25/30Hz processing, 1080p 50/60Hz processing, 200Hz Clear LCD\*, Scanning backlight
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Dynamic screen contrast: 80.000:1
- Response time (typical): 1(BEW equiv.) ms
- Viewing angle: 176° (H) / 176° (V)
- Screen enhancement: Anti-Reflection coated screen
- Color processing: 2250 trillion colors 17bit RGB

## Supported Display Resolution

- Computer formats: 640 x 480, 60Hz, 800 x 600, 60Hz, 1024 x 768, 60Hz, 1280 x 768, 60Hz, 1360 x 768, 60Hz, 1920 x 1080, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 24, 50, 60Hz, 1080p, 24, 25, 30Hz

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: DVB COFDM 2K/8K
- Digital TV: DVB Terrestrial\*, DVB-T MPEG4\*, DVB-C MPEG4\*, MHEG
- Video Playback: NTSC, SECAM, PAL

## Multimedia Applications

- Multimedia connections: Ethernet-UTP5, USB, Wi-Fi 802.11g (built in)
- Playback Formats: MP3, WMA v2 up to v9.2, Slideshow files (.alb), JPEG Still pictures, MPEG1,

MPEG2, MPEG4, AVI, H.264/MPEG-4 AVC, MPEG-Program-stream PAL, WMV9/VC1

## Convenience

- Child Protection: Child Lock+Parental Control
- Ease of Installation: Auto Program Naming, Automatic Channel Install(ACI), Automatic Tuning System (ATS), Autostore, Fine Tuning, PLL Digital Tuning, Plug & Play
- Ease of Use: Auto Volume Leveller (AVL), Delta Volume per preset, Graphical User Interface, On Screen Display, Program List, Settings assistant Wizard, Side Control, Connectivity assistant, Automatic setup wizard, Demo mode, Onscreen Usermanual, Touch control buttons, Favorite program selection, Iconic home scene, Mozaïc channel grid
- Connection Enhancement: Easy link
- Screen Format Adjustments: Auto Format, Movie expand 16:9, Super Zoom, Widescreen, unscaled (1080p dot by dot)
- Multimedia: Digital media reader (browser), USB autobreak-in, DLNA media Browser, Net TV services
- Electronic Program Guide: Now + Next EPG, 8day Electronic Program Guide\*
- Remote Control: DVD, DVD-R, Sat, STB (Set-Top Box), Universal, HTS (Home Theater System)
- Remote control type: RC4495
- Teletext: 1200 page Hypertext
- Firmware upgradeable: Firmware auto upgrade wizard, Firmware upgradeable via USB
- Picture in Picture: Text dual screen
- Smart mode: Game, Cinema, Personal, Power saver, Standard, Vivid

## Sound

- Output power (RMS): 2 x 15W
- Sound System: BBE
- Sound Enhancement: Auto Volume Leveler, Digital Signal Processing, Dynamic Bass Enhancement, Treble and Bass Control

## Loudspeakers

- Built-in speakers: 4
- Loudspeaker types: 2 integrated subwoofers, 2x Dome tweeter

## Connectivity

- EasyLink (HDMI-CEC): One touch play, EasyLink,

- Pixel link, Remote control pass-through, System audio control, System standby
- Front / Side connections: USB
- Ext 1 Scart: Audio L/R, CVBS in, RGB
- HDMI 1: HDMI v1.3a
- Ext 2 Scart: Audio L/R, CVBS in, RGB
- HDMI 2: HDMI v1.3a
- Other connections: A/V Audio L/R in (value), Analog audio Left/Right out, S-Video in, Composite video (CVBS) input, HDMI, Headphone out, S/PDIF out (coaxial), Common Interface Plus (CI+)
- HDMI 3: HDMI v1.3a
- PC network link: DLNA 1.0 certified
- Ext 3: YPbPr, Audio L/R in, VGA PC-in
- HDMI 4: HDMI v1.3a

## Power

- Mains power: AC 220 - 240 V +/- 10%
- Ambient temperature: 5 °C to 35 °C
- Standby power consumption: <math>\leq 0.15\text{ W}</math>
- Power consumption (typical): 202 W


## Accessories

- Included accessories: Tabletop swivel stand, RF antenna cable, Power cord, Quick start guide, Warranty certificate, Remote Control, Batteries for remote control, Legal and safety brochure, Net TV brochure
- Optional accessories: Smart level wallmount SQM6175, DVB-S module PFS0001\*

## Dimensions

- Set Width: 1000 mm
- Set Height: 628 mm
- Set Depth: 50 mm
- Product weight: 18.3 kg
- Set height (with stand): 691 mm
- Set depth (with stand): 260 mm
- Product weight (+stand): 21.1 kg
- Box width: 1215 mm
- Box height: 738 mm
- Box depth: 267 mm
- Weight incl. Packaging: 38.6 kg
- Stand width: 470 mm
- Wall mount compatible: 300 x 300 mm

## Rear connectors

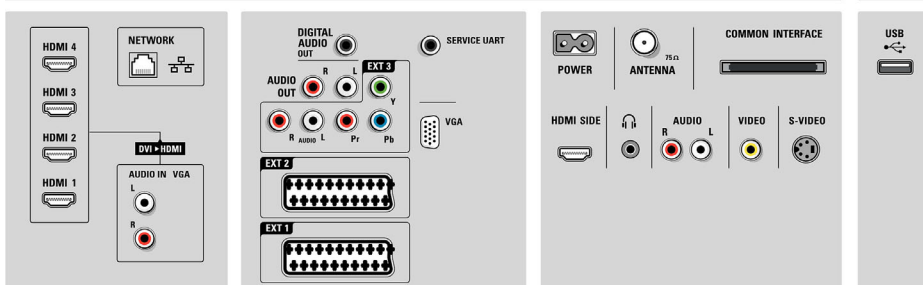

Issue date 2023-07-15

Version: 14.4.9

EAN: 87 12581 47929 9

© 2023 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* 200Hz Clear LCD displays 200 scenes per second by combining advanced 100Hz technology with scanning backlight @ 50% duty cycle.

\* 8 days EPG, service not available in all countries

\* DVB-T, supported in selected countries only

\* DVB-C in selected countries and for selected operators only. Most up to date information is available on the type plate of the TV.

\* Net TV, service offering is dependent on country and subject to terms of use.

\* Optional Philips DVB-S module required (part no. PFS0001, only available in Germany, Austria and Switzerland)