



Philips Brilliance
LED monitor with Ergo
base, USB, Audio

22" (55.9 cm) B-line
WSXGA+

220BL2CB

Eco-friendly LED display for enhanced productivity

Eco-friendly, EPEAT Gold certified Philips 220BL2 LED Business display with ZeroWatt switch, 0.1 watt Soft off, Ergo Base, Stereo Audio and a USB Hub enhances your productivity

Outstanding display performance

- LED technology ensures natural colors
- SmartImage: Optimized user-friendly display experience

Sustainable Eco-friendly solution

- EPEAT Gold ensures lowest impact on environment
- Mercury Free eco-friendly display
- ZeroWatt switch 100% power saving
- 0.1 watt Soft-Off mode
- SmartPower: Up to 50% power saving

Great convenience

- USB Hub with 2 ports for easy connections*
- Stylish SmartTouch controls
- Built in stereo audio for multimedia experience

Ergonomic design

- 70mm height adjustment for ideal sitting position

PHILIPS

LED monitor with Ergo base, USB, Audio
22" (55.9 cm) B-line WSXGA+

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.


Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.

EPEAT Gold

Philips EPEAT GOLD certified monitors ensure protection for human health and environment, and are highly energy efficient ensuring low emissions of climate changing green house gases. EPEAT program helps purchasers evaluate, compare and select Monitors based on 51 environmental criteria supported by US EPA. GOLD certification ensures that at least 30% of plastic used is Post Consumer Resin, which ensures reduction in use of toxic and hazardous materials. EPEAT Gold is valid only where Philips registers the product. Please visit www.epeat.net for registration status in your country.

SmartImage

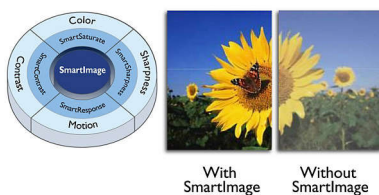

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed

on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

SmartPower

SmartPower is an artificial intelligent technology which dynamically analyzes the content of the screen image to achieve power saving. The backlight intensity can be controlled automatically and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs

Zero Switch

In line with Philips' commitment to "Sense and Simplicity" we enable you to make a responsible choice to switch OFF your monitor at any given time. At the touch of a single ON/OFF button which is conveniently located at the back of the monitor, the monitors' energy consumption is reduced to Zero. In the OFF mode, the monitor is completely cut off from AC power and thereby reducing your carbon footprint even further.

2 Ports USB 2.0 HUB

USB Hub allows user to conveniently connect their plug and play multimedia devices such as USB memory devices, camera, portable HDD, Web camera, PDA, Printer and many other devices which has USB connection available. The conveniently located USB 2.0 Hub on the monitor allows USB 2.0 signals to pass thru to the computer. Note that many devices like cameras and HDD may need to be powered On independently, as they have higher power requirements than the monitor USB Hub can provide.

220BL2CB/00

SmartTouch controls



SmartTouch controls are intelligent, touch sensitive icons that replace protruding buttons. Responding to your lightest touch, SmartTouch controls, for example, power up your monitor or brighten and sharpen your display with SmartImage Lite. When activated, SmartTouch icons glow to indicate that your commands have been implemented.

70mm height adjustment

The Compact Ergo Base is a 'people friendly' Philips monitor base that tilts, swivels and is height adjustable so each user can position the monitor for maximum viewing comfort and efficiency.

0.1 Watt Standby mode

0.1 watt Soft-Off mode

Built-in stereo audio

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.



LED



Hg Free



SmartImage™



SmartPower



Off Mode



USB Hub



SmartTouch



Standby Mode



Built-in Audio



epeat GOLD

Specifications

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- USB: USB 2.0 x 2
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): Stereo Audio

Picture/Display

- Panel Size: 22 inch / 55.9 cm
- Aspect ratio: 16:10
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.282 x 0.282 mm
- Optimum resolution: 1680 x 1050 @ 60Hz
- Brightness: 250 cd/m²
- Display colors: 16.7 M
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Convenience

- Plug & Play Compatibility: DDC/CI, Windows 7/ Vista/XP/2000/98, Mac OS X, sRGB
- Built-in Audio: 1.5Wx2
- User convenience: SmartPower, SmartImage, Volume, Menu, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese
- Other convenience: VESA mount (100x100mm), Kensington lock

Stand

- Height adjustment: 70 mm
- Swivel: -65/65 degree
- Tilt: -5/20 degree

Power

- Power supply: Built-in, 100-240VAC, 50/60Hz
- Smart Power Mode: 12W (Min.)
- Off mode: 0 W (with Zero Power Switch)
- On mode: 22.5W (EnergyStar 5.0 test method)
- Standby mode: < 0.1 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Product with stand (mm): 484 x 505 x 249 mm
- Packaging in mm (WxHxD): 468 x 565 x 175 mm
- Product without stand (mm): 351 x 505 x 59 mm

Weight

- Product with packaging (kg): 6.92 kg
- Product with stand (kg): 5.17 kg
- Product without stand (kg): 4.15 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EPEAT Gold, EnergyStar 5.0, RoHS
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, SEMKO, TCO 5.0, TUV/GS, TUV Ergo, UL/cUL

Cabinet

- Color: Black/Black
- Finish: Texture



Issue date 2024-03-24

Version: 1.0.2

EAN: 87 12581 53520 9

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com