



Philips  
LED monitor with Touch  
Control

23.6" (59.9 cm) E-line  
Full HD

246EL2SBH

## Great gaming experience on your big LED display !

This big 246EL2 Full HD display with Touch controls is ready to engage you in the gaming world

### Great picture quality

- Full HD LCD display, 1920x1080p resolution
- 16:9 display for best widescreen gaming and video
- SmartContrast 20000000:1 for incredible rich black details
- LED technology ensures natural colors

### Design that complements any interior

- Glossy finish to enhance your decor
- Small footprint to blend into any lifestyle
- Modern Touch controls

### Experience true multimedia

- HDMI-ready for top quality, multimedia experience

### Great convenience

- Easy picture format control switching in wide and 4:3 format
- Easy display performance tuning with SmartControl Lite

# PHILIPS

# Highlights

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

## Full HD 1920x1080p LCD display

Enjoy crisp and crystal clear picture quality to give your audience a truly memorable visual experience. Your viewers will be treated to unsurpassed video, with an amazing color gamut and the sharpest pictures around.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## SmartContrast ratio 2000000:1



You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## 16:9 widescreen aspect ratio

An aspect ratio is an expression of a video image's width compared to its height. The 16:9 widescreen aspect ratio is standard for universal to high-definition television and European digital television. A native 16:9 aspect ratio means outstanding game and video display without bars at top and bottom of the picture and without the quality loss than comes from scaling, altering an image to fit on a different screen size.

## Touch controls




Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets

the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel.

## SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.

## Easy picture format control

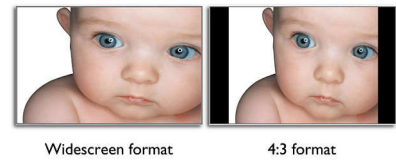

Philips easy picture format control on OSD is to switch from the 4:3 aspect ratio to the widescreen mode and back again to match the display's aspect ratio with your content for working with wide documents without scrolling or viewing widescreen media in the widescreen mode and distortion-free, native mode display of 4:3 ratio content.

## Small footprint

Small footprint to blend into any lifestyle

## Glossy finish

An attractive, elegantly finished glossy finish that fits in with and complements your decor.



# Specifications

## Picture/Display

- Panel Size: 23.6 inch/ 59.9 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.272 x 0.272 mm
- Optimum resolution: 1920 x 1080 @ 60 Hz
- Brightness: 300 cd/m<sup>2</sup>
- Display colors: 16.7 M
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 170° (V), @ C/R &gt; 5
- Picture enhancement: SmartImage Lite
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

## Connectivity

- Signal Input: VGA (Analog ), HDMI
- Sync Input: Separate Sync, Sync on Green

## Convenience

- Plug & Play Compatibility: DDC/CI, Windows 7 / Vista, Mac OS X, sRGB
- User convenience: SmartImage lite, Input, 4:3 / Wide, Menu, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: VESA mount (100x100mm), Kensington lock

## Stand

- Tilt: -5/ +15 degree

## Power

- Power supply: Built-in, 100-240VAC, 50/60Hz

- Off mode: &lt; 0.5 W
- On mode: 18.9 W (EnergyStar 5.0 test method)
- Standby mode: &lt; 0.5 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Product with stand (mm): 565 x 408 x 199 mm
- Packaging in mm (WxHxD): 619 x 417 x 128 mm
- Product without stand (mm): 565 x 349 x 57 mm

## Weight

- Product with packaging (kg): 5.35 kg
- Product with stand (kg): 4.24 kg
- Product without stand (kg): 4.06 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: RoHS, EPEAT Silver, EnergyStar 5.0
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC, Class B, SEMKO, UL/cUL

## Cabinet

- Color: Black/Black
- Finish: Glossy



Issue date 2024-03-14

Version: 2.0.1

EAN: 87 12581 55960 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)