



Philips Brilliance
LCD monitor with
SmartImage

S Line

17"/43.2 cm
1280 x 1024

17S4SB

Feature-packed display

for increased productivity

The Philips display with features like SmartImage, SmartContrast, SmartControl and True Vision increases your productivity.

Great performance

- SmartContrast gives enhanced rich black details
- TrueVision ensures lab quality images

Sustainable Eco-design

- SmartPower: Up to 50% power saving
- PVC-BFR free housing
- 100% recyclable packaging

Easy to experience

- Screen tilts to your ideal, individualised viewing angle
- SmartControl for easy performance tuning
- SmartImage pre-sets for easy optimised image settings

PHILIPS

Highlights

SmartImage



SmartImage is an exclusive leading edge Philips technology that analyses the content displayed on your screen and optimises your display performance. This user-friendly interface allows you to select various modes, like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimises the contrast, colour saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time at the touch of a single button!

SmartContrast



SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos

or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.


SmartPower

SmartPower is an artificial intelligent technology which dynamically analyses the content of the screen image to achieve power saving. The backlight intensity can be controlled automatically and pre-set by the system to reduce the power consumption by up to 50%, which saves substantially on energy costs

SmartControl for easy tuning

PC software for fine tuning display performance and settings. Philips offers users two choices for display setting adjustment. Either navigate the multi-level On-Screen Display menu through buttons on the display itself or use the Philips SmartControl software to easily adjust the various display settings in a familiar way

TrueVision

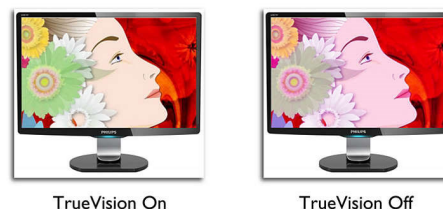

TrueVision is a proprietary Philips technology that uses an advanced algorithm for testing and aligning monitor display, which gives you the

ultimate display performance. Philips ensures that TrueVision monitors leave the factory fine-tuned with this process giving you consistent colour and picture quality.

PVC-BFR free housing

This Philips monitor housing is free from brominated flame retardant and polyvinyl chloride (PVC-BFR free)

Sustainability

Philips is committed to using sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In selected models, we utilise $\geq 65\%$ Post-Consumer Recycled plastics, ensuring reduction in waste. Strict adherence to RoHS standards ensures substantial reduction or elimination of toxic substances like Lead and Mercury. Our display housing is made up of PVC/BFR-free material. For more information, please visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.

Screen tilts

Screen tilts to your ideal, individualised viewing angle



Specifications

Connectivity

- Signal Input: DVI-D (digital, HDCP), VGA (Analogue)
- Sync Input: Separate Sync, Sync on Green

Picture/Display

- Panel Size: 17 inch/43.2 cm
- Aspect ratio: 5:4
- LCD panel type: TFT-LCD
- Pixel pitch: 0.264 x 0.264 mm
- Optimum resolution: 1280 x 1024 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H)/160° (V), @ C/R > 10
- Picture enhancement: SmartImage
- Effective viewing area: 337.92 x 270.33 mm
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB

Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 8/7/Vista
- User convenience: SmartImage, Brightness, SmartPower, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Control software: SmartControl Premium

Stand

- Tilt: -5/20 degree

Power

- ECO mode: 9.4 W (typ.)

- Power supply: Built-in, 100–240 VAC, 50–60 Hz
- Off mode: 0.2 W (typ.)
- On mode: 17.1 W (typ.)
- Standby mode: 0.2 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 367 x 393 x 194 mm
- Packaging in mm (W x H x D): 450 x 446 x 160 mm
- Product without stand (mm): 367 x 319 x 65 mm

Weight

- Product with packaging (kg): 4.94 kg
- Product with stand (kg): 3.54 kg
- Product without stand (kg): 3.14 kg

Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20%–80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: PVC/BFR free housing

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, cETLus, FCC Class B, GOST, SASO, SEMKO, TUV Ergo, TUV/GS, WEEE

Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black



Issue date 2024-03-24

Version: 3.0.1

EAN: 87 12581 68550 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com