

Philips
LCD TV

107cm (42")
Full HD 1080p

42PFL7603



Light up your experience

Immerse yourself in a captivating Ambilight experience. Featuring a full HD 1080p display and Pixel Plus 2HD, this Flat TV combines HD Natural Motion, exciting invisible sound and Ambilight - lighting up your experience for years to come.

Easy to connect and enjoy

- 4 HDMI inputs for full digital HD connection in one cable
- EasyLink: easy control of TV & connected device via HDMI CEC
- PC-input allows you to use your TV as a PC monitor

Hear exciting and powerful sound

- Integrated wOOx loudspeakers for deep and powerful bass
- 30W RMS high audio power

Elevate your viewing experience

- Ambilight enhances the viewing experience with ambient light

See pictures come alive

- Pixel Plus 2 HD for great details, depth and clarity
- Full HD LCD display, with a 1920x1080p resolution
- HD Natural Motion for ultra smooth motion in Full HD movies
- Up to 5ms response time for clear, fast moving action
- 28.9 billion colors for brilliant natural images

PHILIPS

LCD TV
107cm (42") Full HD 1080p


Highlights

Ambilight



Ambilight makes an impressive contribution to the overall viewing experience by producing ambient light to complement the colors and light intensity of the on-screen image. It adds a new dimension to the viewing experience, completely immersing you into the content you are watching. It creates ambiance, stimulates more relaxed viewing, and improves perceived picture detail, contrast and color. Ambilight automatically and independently adapts its colors according to the changing content on the screen.

Pixel Plus 2 HD

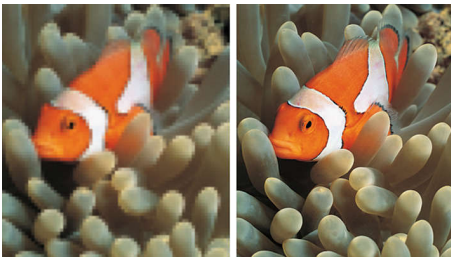

Pixel Plus 2 HD offers the unique combination of ultimate sharpness, natural detail, increased depth, vivid colors and smooth and natural motion from standard TV, High Definition signals and multimedia sources. Each pixel of the incoming picture is enhanced to better match the surrounding pixels, resulting in a more natural picture. Artifacts in compressed multimedia content are detected and reduced, ensuring that the picture is clean and razor sharp. Digital noise reduction ensures that the picture is perfectly smooth yet razor sharp.

Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

HD Natural Motion



Philips invented HD Natural Motion to minimize juddering effects that are visible with movie based picture content. The award winning algorithm estimates motion in the picture and corrects juddering movements in both broadcast and recorded movie material (such as DVD and Blu-ray Disc). The resulting smooth motion reproduction and excellent sharpness take the viewing experience to a higher level.

5ms response time

Response time measures signal reaction speed in milliseconds. Faster response time is better

42PFL7603/98

as it eliminates visible image artifacts that could dampen your experience when viewing fast moving images or objects. In this case, this LCD panel gives you 5ms response time so that you can watch your LCD TV with a clear, fast moving action.

28.9 billion colors



Vibrant and natural images from the most advanced color processing. The 3 color channels (RGB) are optimized for a total processing power of 28.9 billion colors. The advanced algorithms detect even the subtlest shades and skin tones, creating the best color possible.

Integrated wOOx loudspeakers

wOOx technology creates a superior bass sound by capturing and enhancing low frequency bass for a dramatically enhanced bass and sound experience.

30W RMS high audio power

30W RMS high audio power

4 HDMI inputs

HDMI makes an uncompressed digital RGB connection from the source to the screen for the ultimate picture quality. HDMI intelligently communicates the highest output resolution with the source device. The HDMI input is fully backward compatible with DVI sources and includes digital audio. HDMI uses HDCP copy protection. With 3 HDMI inputs on the back and 1 HDMI on the side of the TV you can connect multiple HD sources, for instance an HD settop box, a Blu-ray player, and game console or digital Camcorder. Your TV is fully prepared for the HD future.

Specifications

Ambilight

- Ambilight Features: Ambilight 2 Channel

Picture/Display

- Aspect ratio: Widescreen
- Diagonal screen size (inch): 42 inch
- Diagonal screen size (metric): 107 cm
- Panel resolution: 1920x1080p
- Brightness: 500 cd/m²
- Picture enhancement: Pixel Plus 2 HD, 3D Combfilter, Active Control + Light sensor, Contrast Plus, Digital Noise Reduction, Jagged Line Suppression, Luminance Transient Improver, Progressive scan, HD Natural Motion
- Display screen type: LCD Full HD W-UXGA Act. matrix
- Dynamic screen contrast: 30000:1
- Response time (typical): 5 ms
- Viewing angle: 178° (H) / 178° (V)
- Screen enhancement: Anti-Reflection coated screen

Supported Display Resolution

- Computer formats: 640 x 480, 60, 72, 75, 85Hz, 720 x 400, 70Hz, 800 x 600, 60, 72, 75, 85Hz, 1024 x 768, 60, 70, 75, 85Hz, 1280 x 768, 60Hz, 1280 x 1024, 60Hz, 1360 x 768, 60Hz
- Video formats: 480i, 60Hz, 480p, 60Hz, 576i, 50Hz, 576p, 50Hz, 720p, 50, 60Hz, 1080i, 50, 60Hz, 1080p, 24, 50, 60Hz, 1080p, 24, 25, 30Hz

Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- Tuner bands: Hyperband, S-Channel, UHF, VHF
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K
- Number of Preset Channels: 99
- Video Playback: NTSC, SECAM, PAL
- Tuner Display: PLL

Convenience

- Child Protection: Child Lock+Parental Control
- Ease of Installation: Autostore, Fine Tuning, Program Name, Sorting
- Ease of Use: 8 channel smart surf list, Auto Volume Leveller (AVL), Program List, Side Control
- Clock: On main display, Sleep Timer, Wake Up Timer
- Connection Enhancement: Easy link

- Screen Format Adjustments: 4:3, Movie expand 14:9, Movie expand 16:9, Subtitle Zoom, Super Zoom, Widescreen
- Remote Control: TV
- Remote control type: PF04A08B
- Signal strength indication
- Teletext: 1000 page Smart Text
- On-Screen Display languages: English, Simplified Chinese, Arabic, Thai, Vietnamese
- Smart mode: Game, Movie, Personal, Power saver, Standard, Vivid

Sound

- Equalizer: 7-bands
- Output power (RMS): 30W
- Sound System: Mono, Stereo, BBE
- Sound Enhancement: Auto Volume Leveler, Graphic Equaliser, Incredible Surround

Loudspeakers

- Built-in speakers: 2
- Loudspeaker types: wOOx loudspeakers

Connectivity

- AV 1: Audio L/R in, YPbPr
- AV 2: Audio L/R in, CVBS in
- EasyLink (HDMI-CEC): One touch play, System info (menu language), System standby
- Front / Side connections: Audio L/R in, CVBS in, Headphone Out, S-video in, HDMI v1.3
- HDMI 1: HDMI v1.3
- HDMI 2: HDMI v1.3
- Other connections: PC-in VGA + Audio L/R in
- HDMI 3: HDMI v1.3

Power


- Mains power: 100-240V, 50/60Hz
- Ambient temperature: 5 °C to 40 °C
- Power consumption: 210 W
- Standby power consumption: (typical) $\leq 0.15W$

Accessories

- Included accessories: Tabletop swivel stand, Power cord, Quick start guide, User Manual, Registration card, Warranty certificate, Remote Control, Batteries for remote control

Dimensions

- Set Width: 1046 mm

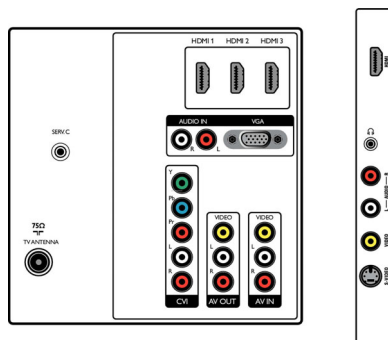

Issue date 2023-10-05

Version: 1.0.59

EAN: 87 12581 39347 2

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com