

Philips  
QHD LCD monitor

### B Line

32 (31.5" / 80 cm diag.)  
2560 x 1440 (QHD)

328B6QJEB



## Crisp images, efficient performance

for maximum productivity

Get your best work done with the Philips 32" Quad HD monitor. Crystal-clear Quad HD gives you the space and clarity to see your work. Features like height-adjustment, Flicker-free and LowBlue mode make work easy-on-the eyes.

#### Excellent performance

- Less eye fatigue with Flicker-free technology
- IPS technology for full colors and wide viewing angles
- SmartImage presets for easy optimized image settings
- Crystalclear images with Quad HD 2560 x 1440 pixels
- 1.074 billion colors for smooth color gradations and detail
- SmartUniformity for consistent images

#### Designed for the way you work

- Built-in stereo speakers for multimedia
- MultiView enables simultaneous dual connection and view
- SmartErgoBase enables people-friendly ergonomic adjustments
- USB 3.0 Hub for convenient access and fast charging

#### Easy to experience

- SmartConnect with HDMI, MHL, DisplayPort, DVI, and VGA

# PHILIPS

QHD LCD monitor  
B Line 32 (31.5" / 80 cm diag.), 2560 x 1440 (QHD)

328B6QJEB/27


# Highlights

## Crystalclear images



These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

## IPS technology

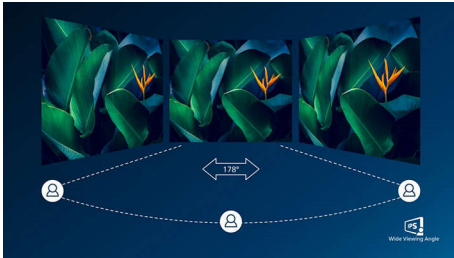

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid

colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

## Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.


## SmartImage



SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Photo, Movie, Game, Economy etc., to fit the application in use. Based on the selection,


SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

## 10-bit colors

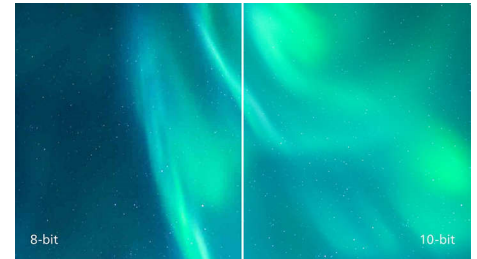

The 10-bit display delivers rich color depth with 1.074 billion colors and 12-bit internal processing for re-creating smooth, natural colors without gradations and color banding.

## SmartUniformity

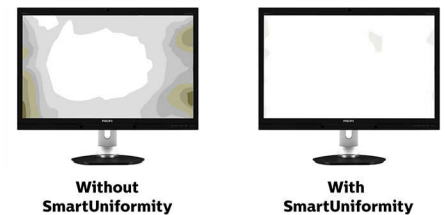

Fluctuations in brightness and color on LCD screens are a common phenomenon. Philips SmartUniformity mode delivers accurate images in terms of brightness; which is crucial for photography, design, and printing. With a color metric to assess color accuracy, this mode is calibrated to meet average luminance uniformity is greater than 95%. Selecting this mode will produce uniform and accurate images.



Quad HD



Wide Viewing Angle



Flicker-free



SmartImage™



SmartUniformity



SmartErgo Base



Built-in Speaker



Multiview



SmartConnect



Wide Viewing Angle

# Specifications

## Connectivity

- Signal Input: VGA (Analog), DVI-Dual Link (digital, HDCP), DisplayPort x 1, HDMI (2.0) - MHL x 1
- USB: USB 2.0 x 2, USB 3.0x2 (1 w/fast charging)\*
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in, Headphone out

## Picture/Display

- Panel Size: 31.5 inch / 80.1 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2727 x 0.2727 mm
- Optimum resolution: 2560 x 1440 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: Color support 1.07 billion colors
- Color gamut (typical): NTSC 110%\*, sRGB 128%\*
- Contrast ratio (typical): 1,200:1
- SmartContrast: 50,000,000 :1
- Response time (typical): 5 ms (Gray to Gray)\*
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage
- Effective viewing area: 698.11 (H) x 392.69 (V)
- Scanning Frequency: 30 - 99 kHz (H) / 56 - 76 Hz (V)
- sRGB
- Delta E: &lt;= 2
- Flicker-free
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- SmartUniformity: 93% ~ 105%

## Convenience

- Built-in Speakers: 3 W x 2
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: SmartImage, Multiview, User, Menu, Power On/Off
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Control software: SmartControl
- MultiView: PIP/PBP mode, 2x devices

## Stand

- Height adjustment: 180 mm
- Pivot: 90 degree
- Swivel: -170/+170 degree
- Tilt: -5/20 degree

## Power

- ECO mode: 34.9 W (typ.)

- Power supply: Built-in, 100-240VAC, 50-60Hz
- Off mode: Zero watts with Zero switch
- On mode: 62 W (typ.)
- Standby mode: &lt; 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

## Dimensions

- Packaging in mm (WxHxD): 970 x 526 x 224 mm
- Product without stand (mm): 742 x 438 x 63 mm
- Packaging in inch (WxHxD): 38.2 x 20.7 x 8.8 inch
- Product without stand in inch: 29.2 x 17.2 x 2.5 inch
- Product with stand(max height): 742 x 657 x 270 mm
- Product with stand(max height): 29.2 x 25.9 x 10.6 inch

## Weight

- Product with packaging (kg): 13.41 kg
- Product with stand (kg): 9.50 kg
- Product with packaging (lb): 29.50 lb
- Product with stand (lb): 20.9 lb
- Product without stand (kg): 6.90 kg
- Product without stand (lb): 15.18 lb

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

## Sustainability

- Environmental and energy: TCO Certified, WEEE, RoHS
- Post consumer recycled plastic: 85%
- Recyclable packaging material: 100 %
- Specific Substances: PVC / BFR free housing, Mercury free

## Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, SEMKO, cETLus, CU-EAC, PSB, CECP, GS, TUV Ergo, TUV/GS, TUV/ISO9241-307

## Cabinet

- Finish: Texture
- Foot: Black
- Front bezel: Black
- Rear cover: Black



Issue date 2024-03-25

Version: 7.0.1

UPC: 6 09585 25195 3

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)

\* Response time value equal to SmartResponse  
\* Fast charging complies with USB BC 1.2 standard  
\* NTSC Area based on CIE1976  
\* sRGB Area based on CIE1931  
\* The monitor may look different from feature images.