

PHILIPS

LCD monitor

E Line

24 (23.8"/60.5 cm diag.)

2560 x 1440 (QHD)

245E1S



Simply stunning

The 24" E-Line monitor features stunning visuals and elegant design for a stylish enhancement to your workspace. Experience crystal-clear Quad HD visuals and smooth action with AMD FreeSync technology.

Features designed for you

- DisplayPort connection for maximum visuals
- HDMI ensures universal digital connectivity
- Less eye fatigue with Flicker-Free technology
- LowBlue Mode for easy-on-the-eyes productivity

Greener every day

- Mercury Free eco-friendly display

Superb Picture Quality

- SmartContrast for rich black details
- IPS LED wide view technology for image and colour accuracy
- Crystal clear images with Quad HD 2560 x 1440 pixels
- Ultra Wide-Color wider range of colours for a vivid picture
- SmartImage game mode optimised for gamers
- Effortlessly smooth gameplay with AMD FreeSync™ technology


Highlights

IPS technology



IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

CrystalClear images

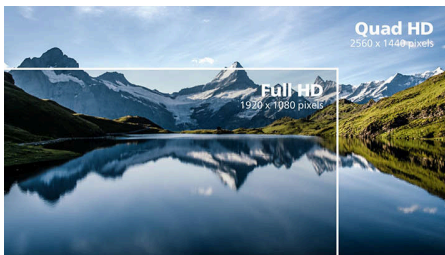


These Philips screens deliver CrystalClear, Quad HD 2560 x 1440 or 2560 x 1080 pixel images. Utilising high performance panels with a high-density pixel count enabled by high bandwidth sources, these new displays will make your images and graphics come alive. Whether you are a demanding professional requiring extremely detailed information for CAD-CAM solutions using 3D graphic applications, or a financial wizard working on huge spreadsheets, Philips displays will give you CrystalClear images.

Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colours for a more brilliant picture. The Ultra Wide-Color wider "colour gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring media entertainment, images and even productivity more alive with vivid colours from Ultra Wide-Color Technology.

Ultra-smooth gaming

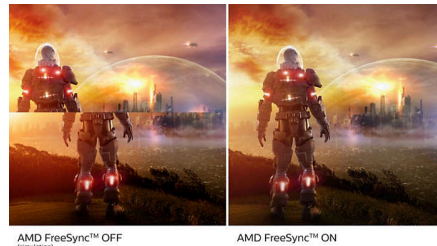

Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artefact-free performance at virtually any frame rate with AMD FreeSync™ technology, smooth, quick refresh and ultra-fast response time.

SmartImage Game mode



The new Philips gaming display has quick-access OSD fine-tuned for gamers, offering you multiple options. "FPS" mode (First person shooting)

improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts the display with the fastest response time and high colour, along with image adjustments. "RTS" mode (Real-time strategy) has a special SmartFrame mode that enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customised settings based on different games, ensuring best performance.

Flicker-Free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-Free technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave-length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, the Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.



Highlights

HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. An HDMI cable enables high-quality digital video and audio to be transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

SmartContrast



SmartContrast is a Philips technology that analyses the contents you are displaying, automatically adjusting colours and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

DisplayPort connection



DisplayPort is a digital link from PC to monitor without any conversion. With higher capabilities than DVI standard, it is fully capable to support up to 15 metre cables and 10.8 Gbps/sec data transfer. With this high performance and zero latency, you get the fastest imaging and refresh rates — making DisplayPort the best choice for not only general office or home use, but also for the more demanding gaming and films, video editing and more. It also keeps interoperability in mind via the use of various adapters.

Mercury Free

Philips monitors with LED backlighting are free from Mercury, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its lifecycle, from manufacturing to disposal.



Specifications

Picture/Display

Panel Size: 23.8 inch/60.5 cm
Aspect ratio: 16:9
LCD panel type: IPS technology
Backlight type: W-LED system
Pixel pitch: 0.206 x 0.206 mm
Brightness: 250 cd/m²
Display colours: 16.7 M
Colour gamut (typical): NTSC 100%*, sRGB 117%*
Contrast ratio (typical): 1000:1
SmartContrast: Mega Infinity DCR
Response time (typical): 4 ms (Grey to Grey)*
Viewing angle: 178° (H)/178° (V), @ C/R > 10
Picture enhancement: SmartImage game
Maximum resolution: 2560 x 1440 @ 75 Hz*
Effective viewing area: 526.9 (H) x 296.4 (V)
Scanning Frequency: 54 - 84 kHz (H) / 49 - 75 Hz (V)
sRGB
Flicker-free
Pixel Density: 123 PPI
LowBlue Mode
Display Screen Coating: Anti-Glare, 3H, Haze 25%
AMD FreeSync™ technology

Connectivity

Signal Input: VGA (Analogue), DisplayPort 1.2, HDMI 1.4
Sync Input: Separate Sync, Sync on Green
Audio (In/Out): Audio out

Convenience

Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
User convenience: Power On/Off, Menu, Brightness, Input, SmartImage Game
OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

Tilt: -5/20 degree

Power

Power supply: External, 100–240 VAC, 50–60 Hz
Off mode: < 0.3 W (typ.)
On mode: 17.94 W (typ.) (EnergyStar 7.0 test method)
Standby mode: < 0.5 W (typ.)
Power LED indicator: Operation - White, Standby mode - White (flashing)
Energy Label Class: E

Dimensions

Product with stand (mm): 540 x 414 x 195 mm
Packaging in mm (W x H x D): 586 x 462 x 127 mm
Product without stand (mm): 540 x 325 x 43 mm

Weight

Product with packaging (kg): 4.68 kg
Product with stand (kg): 3.24 kg
Product without stand (kg): 2.56 kg

Operating conditions

Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
Temperature range (operation): 0 to 40 °C
MTBF: 50,000 hrs (excluding backlight) hour(s)
Relative humidity: 20%-80 %
Temperature range (storage): -20 to 60 °C

Sustainability

Environmental and energy: EnergyStar 7.0, RoHS, Mercury Free, WEEE
Recyclable packaging material: 100 %

Compliance and standards

Regulatory Approvals: CU-EAC, EPA, CE Mark, FCC Class B, CB, UKRAINIAN

Cabinet

Colour: Black
Finish: Textured

What's in the box?

Cables: HDMI cable, Power cable
Monitor with stand
User Documentation

