

# PHILIPS

Quad HD monitor

Monitor

5000 series

27" (68.6 cm)

2560 x 1440 (QHD)

27E1N5500E



## Striking design, vibrant colors

Elevate your viewing experience for work and play with Philips. Crystal-clear QHD IPS display delivers precise color and vivid images from any angle. Ergonomic slim-frame with cable management offers a stylish enhancement to your workspace.

### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- EasyRead mode for a paper-like reading experience
- Cable management reduces cable clutter for neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- Tilt, pivot and height-adjust for an ideal viewing position

### Good for Gaming

- 1ms (MPRT) fast response for crisp image and smooth gameplay
- SmartImage game mode optimized for gamers

### Superb Picture Quality

- SmartContrast for rich black details
- IPS LED wide view technology for image and color accuracy
- Crystalclear images with Quad HD 2560 x 1440 pixels


# Monitor

Quad HD monitor

27E1N5500E/69


## Highlights

### Crystalclear images

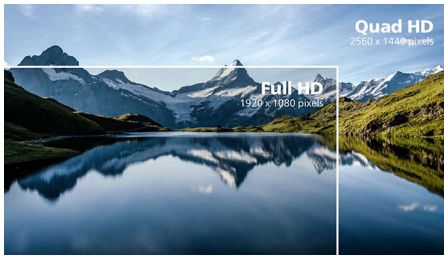

These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

### IPS technology

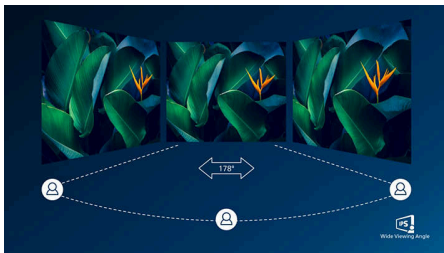

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

### 1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

### SmartImage Game mode




The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

### LowBlue Mode & Flicker-free




Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

### Compact Ergo Base

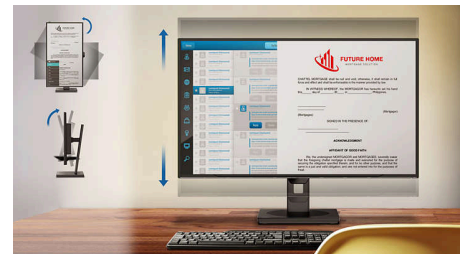

The Compact Ergo Base is a people-friendly Philips monitor base that tilts, pivot and height-adjusts so each user can position the monitor for maximum viewing comfort and efficiency.

### Cable management

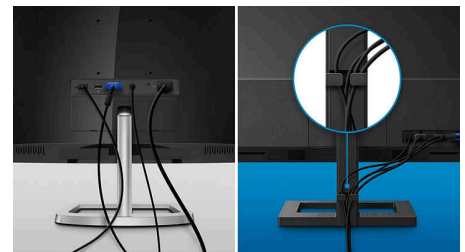

Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.



Quad HD



Wide Viewing Angle



Fast Response  
1ms MPRT



SmartImage™  
Game



LowBlue Mode



Compact Ergo  
Base



EasySelect



EasyRead

# Monitor

Quad HD monitor

27E1N5500E/69


## Highlights

### EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

### EasyRead mode

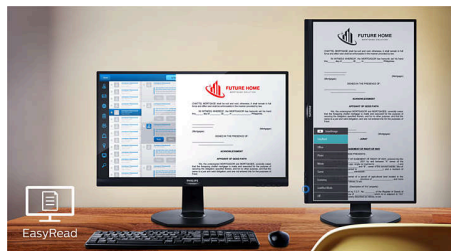

EasyRead mode for a paper-like reading experience

### SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.



Quad HD



Wide Viewing Angle



Fast Response 1ms MPRT



SmartImage Game



LowBlue Mode



CompactErgo Base

# Monitor

Quad HD monitor

27E1N5500E/69

## Specifications

### Picture/Display

**Panel Size:** 27 inch / 68.6 cm  
**Aspect ratio:** 16:9  
**LCD panel type:** IPS technology  
**Backlight type:** W-LED system  
**Pixel pitch:** 0.2331 x 0.2331 mm  
**Brightness:** 300 cd/m<sup>2</sup>  
**Display colors:** 16.7 M  
**Color gamut (typical):** NTSC 102.02%\*, sRGB 114.18%\*  
**Contrast ratio (typical):** 1000:1  
**SmartContrast:** Mega Infinity DCR  
**Response time (typical):** 4 ms (Gray to Gray)\*  
**Viewing angle:** 178° (H) / 178° (V), @ C/R > 10  
**Picture enhancement:** SmartImage game  
**Maximum resolution:** 2560 x 1440 @ 75 Hz\*  
**Effective viewing area:** 596.736 (H) x 335.664 (V)  
**Scanning Frequency:** 30 - 114 kHz (H) / 48 - 75 Hz (V)  
**sRGB**  
**Flicker-free**  
**Pixel Density:** 108.79 PPI  
**LowBlue Mode**  
**Display Screen Coating:** Anti-Glare, 3H, Haze 25%  
**MPRT:** 1 ms  
**EasyRead**  
**Adaptive sync**

### Connectivity

**Signal Input:** HDMI 1.4 x 2, DisplayPort 1.2 x 1  
**Sync Input:** Separate Sync  
**Audio (In/Out):** Audio out

### Convenience

**Plug & Play Compatibility:** DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7  
**User convenience:** Power On/Off, Menu, Brightness, Input, SmartImage Game  
**OSD Languages:** Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian  
**Other convenience:** Kensington lock, VESA mount (100x100mm)

### Stand

**Height adjustment:** 130 mm  
**Pivot:** -/+ 90 degree  
**Tilt:** -5/20 degree

### Power

**Power supply:** Internal, 100-240VAC, 50-60Hz  
**Off mode:** 0.3 W (typ.)  
**On mode:** 26 W (typ.)  
**Standby mode:** 0.5 W (typ.)  
**Power LED indicator:** Operation - White, Standby mode- White (blinking)

### Dimensions

**Packaging in mm (WxHxD):** 780 x 525 x 186 mm  
**Product without stand (mm):** 614 x 365 x 52 mm  
**Product with stand(max height):** 614 x 510 x 212 mm

### Weight

**Product with packaging (kg):** 10.00 kg  
**Product with stand (kg):** 5.92 kg  
**Product without stand (kg):** 4.06 kg

### Operating conditions

**Altitude:** Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)  
**Temperature range (operation):** 0 to 40 °C  
**MTBF:** 50,000 hrs (excluding backlight) hour(s)  
**Relative humidity:** 20%-80 %  
**Temperature range (storage):** -20 to 60 °C

### Sustainability

**Environmental and energy:** RoHS  
**Recyclable packaging material:** 100 %  
**Specific Substances:** Mercury free, PVC / BFR free housing

### Compliance and standards

**Regulatory Approvals:** CB, CE Mark, FCC Class B, ICES-003, PSB

### Cabinet

**Color:** Black  
**Finish:** Textured



\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

\* The maximum resolution works for either HDMI input or DP input.

\* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.

\* Response time value equal to SmartResponse

\* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.

\* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.

\* NTSC Area based on CIE1976

\* sRGB Area based on CIE1931

\* The monitor may look different from feature images.