

Philips Monitor  
LCD monitor with  
Windows Hello Webcam

### 5000 series

24 (23.8"/60.5 cm diag.)  
1920 x 1080 (Full HD)

24E1N5300HE



## Collaboration simplified

with built-in webcam

This Philips monitor is designed for the remote work environment. The integrated 5 MP webcam delivers sharp images, and the noise-cancelling mic helps people hear you loud and clear. The Windows Hello Webcam allows for quick access and strong security.

#### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- Cable management reduces cable clutter for a neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- Tilt, pivot and adjust the height for an ideal viewing position
- Webcam with noise-cancelling microphone for collaboration
- Connect your notebook with one USB-C cable

#### Superb Picture Quality

- 16:9 Full HD display for crisp, detailed images
- IPS LED wide view technology for image and colour accuracy
- Effortlessly smooth gameplay with AMD FreeSync™ technology

# PHILIPS

LCD monitor with Windows Hello Webcam  
5000 series 24 (23.8"/60.5 cm diag.), 1920 x 1080 (Full HD)

24E1N5300HE/00

# Highlights

## USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high-resolution video and transfer data at super speed, while powering up and recharging your compatible device at the same time.

## IPS technology



IPS displays use an advanced technology that gives you extra-wide viewing angles of 178/178 degrees, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays give you remarkably crisp images with vivid colours, making them ideal not only for Photos, movies and web browsing, but also for professional applications that demand colour accuracy and consistent brightness at all times.

## Ultra-smooth gaming



Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artefact-free performance at virtually any frame rate with AMD FreeSync™ technology, smooth, quick refresh and ultra-fast response time.

## Webcam and noise-cancelling mic



This Philips monitor comes with a built-in 5 MP webcam, a noise-cancelling microphone, and speakers, making it perfect for working from home and collaborating remotely. The webcam is certified for Windows Hello and is equipped with advanced sensors for Windows Hello™ facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds. The physical camera switch offers extra privacy when not in use. The noise-cancelling microphone and dual 5 watt integrated speakers deliver clear communications.

## Built-in stereo speakers




A pair of high-quality stereo speakers built into a display device. They may be visible front firing, or invisible down firing, top firing, rear firing etc. depending on model and design.

## LowBlue Mode and Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

## Compact Ergo Base

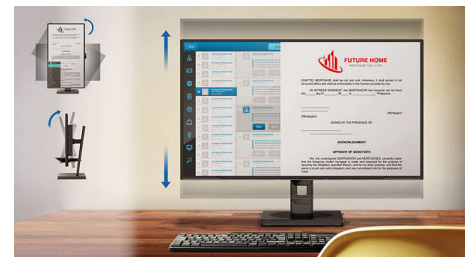

The Compact Ergo Base is a people-friendly Philips monitor base that tilts, pivot and height-adjusts so each user can position the monitor for maximum viewing comfort and efficiency.



# Specifications

## Connectivity

- Signal Input: HDMI 1.4 x 1, DisplayPort 1.2 x 1, USB-C 3.2 Gen 1 x 1 (upstream, Power Delivery up to 65 W)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- USB:: USB 3.2 x 4 (downstream with 1 fast charge B.C 1.2)

## Picture/Display

- Panel Size: 23.8 inch/60.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.2745 x 0.2745 mm
- Brightness: 300 cd/m<sup>2</sup>
- Display colours: 16.7 M
- Colour gamut (typical): NTSC 104.8%\*, sRGB 120.9%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Grey to Grey)\*
- Viewing angle: 178° (H)/178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: 1920 x 1080 @ 75 Hz\*
- Effective viewing area: 527.04 (H) x 296.46 (V)
- Scanning Frequency: 30–85 kHz (H) / 48–75 Hz (V)
- sRGB
- Flicker-free
- Pixel Density: 92.56 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- MPRT: 1 ms
- EasyRead
- AMD FreeSync™ technology

## USB

- Power delivery: USB PD version 3.0
- Super speed: Data and Video transfer
- DP: Built-in Display Port Alt mode
- USB-C max. power delivery: Up to 65 W (5V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)
- USB-C: Reversible plug connector

## Convenience

- Built-in Speakers: 5 W x 2
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- Built-in webcam: 5.0 megapixel camera with

- microphone and LED indicator (for Windows Hello)
- Noise cancellation

## Stand

- Height adjustment: 130 mm
- Pivot: -/+ 90 degree
- Tilt: -5/20 degree

## Power

- Power supply: External, 100–240 VAC, 50–60 Hz
- Off mode: 0.3 W (typ.)
- On mode: 24.2 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: E

## Dimensions

- Packaging in mm (W x H x D): 600 x 526 x 143 mm
- Product without stand (mm): 540 x 336 x 43 mm
- Product with stand (max height): 540 x 494 x 198 mm

## Weight

- Product with packaging (kg): 7.65 kg
- Product with stand (kg): 4.37 kg
- Product without stand (kg): 2.71 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0 to 40 °C
- MTBF: 50,000 hrs (excluding backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20 to 60 °C

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC/BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, TUV/ISO9241-307, TUV-BAUART

## Cabinet

- Colour: Black
- Finish: Textured

## What's in the box?

- Cables: HDMI cable, USB-C to USB-A/C Y cable, Power cable
- Monitor with stand
- User Documentation



Issue date 2024-04-09

Version: 3.1.1

EAN: 87 12581 78334 1

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

- \* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- \* The maximum resolution works for either HDMI input or DP input.
- \* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- \* Response time value equal to SmartResponse
- \* MPRT adjusts the brightness for blur reduction, so the brightness cannot be adjusted while MPRT is turned on. To reduce motion blur, the LED backlight will strobe in time with the screen refresh rate, which may cause a noticeable change in brightness.
- \* MPRT is a gaming-optimised mode. Turning on MPRT may cause noticeable screen flickering. It is recommended to turn this mode off when you are not using the gaming function.
- \* NTSC Area based on CIE 1976
- \* sRGB Area based on CIE1931
- \* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
- \* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- \* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- \* The monitor may look different from feature images.