



Philips Brilliance  
LED Monitor

## Blade

21.5" (54.6 cm)  
C-line

224CL2SB

# Ultra slim LED display. Simply stunning.

With an ultra slim design and technologies that delivery sharp vivid colors, the Philips Blade LED display is a new level cool sophistication

### **Stunningly beautiful**

- Cool SmartTouch controls
- Sophisticated glossy finish
- Stylish design that complements any interior
- Ultra Slim, sleek and modern

### **Stunningly Clever**

- SmartResponse 2ms refresh for fast gaming
- HDMI-ready for Full HD entertainment
- LED technology for natural vivid colors
- SmartContrast 20000000:1 for incredible rich black details
- SmartImage optimized for ease of use
- 16:9 display for best widescreen gaming and video

### **Environmentally friendly green design**

- Energy Star for energy efficiency and low power consumption
- Eco-friendly materials that meets international standards

# PHILIPS

# Highlights

## Ultra Slim, sleek and modern

New range of Philips monitors use the latest new generation Slim CCFL or LED, thereby allowing designs to be much more slimmer than previous generation. Slim looks not only allow the monitors to look asthetically pleasing, but also saves space on the desk!!

## LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.


## 2ms Turbo mode



2ms GtG response time > 2ms GtG response time

Turbo modes turns on over drive circuit for best response time, reduce jaggy edges for fast moving objects on screen, enhance contrast ratio for bright and dark scheme, this profile delivers the best gaming and movie experience.

## SmartContrast ratio 2000000:1

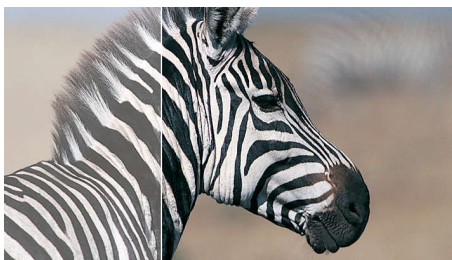

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight

boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors.

## HDMI Ready



An HDMI-ready device has all the required hardware to accept High-Definition Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## Eco-friendly materials


"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely. Visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.

## Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency program also adopted by many other countries. Energy Star certification ensures that you are buying a product which meets the latest power efficiency standards which operates with maximum power efficiency at all operational levels. New Philips monitors are

certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1watt power consumption, whereas Philips monitors consume less than 0.5watts. Further details can be obtained from [www.energystar.gov](http://www.energystar.gov)

## SmartImage

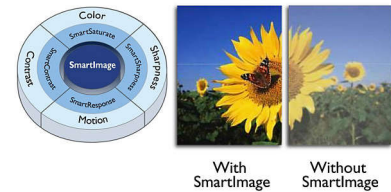

SmartImage is an exclusive leading edge Philips technology that analyzes the content displayed on your screen and gives you optimized display performance. This user friendly interface allows you to select various modes like Office, Image, Entertainment, Economy etc., to fit the application in use. Based on the selection, SmartImage dynamically optimizes the contrast, color saturation and sharpness of images and videos for ultimate display performance. The Economy mode option offers you major power savings. All in real time with the press of a single button!

## SmartTouch controls

SmartTouch controls are intelligent, touch sensitive icons that replace protruding buttons. Responding to your lightest touch, SmartTouch controls, for example, power up your monitor or brighten and sharpen your display with SmartImage Lite. When activated, SmartTouch icons glow to indicate that your commands have been implemented.

## Sophisticated glossy finish

An attractive, elegantly finished glossy finish that fits in with and complements your decor.

## Stylish design

Stylish design that complements any interior



# Specifications

## Connectivity

- Audio output: HDMI audio out (3.5 mm jack)x1
- Signal Input: VGA (Analog ), HDMI
- Sync Input: Separate Sync, Sync on Green

## Picture/Display

- Panel Size: 21.5 inch/54.6 cm
- Aspect ratio: 16:9
- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Pixel pitch: 0.248 x 0.248 mm
- Optimum resolution: 1920 x 1080 @ 60Hz
- Brightness: 250 cd/m<sup>2</sup>
- Display colors: 16.7 M
- SmartContrast: 20,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H) / 160° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage
- SmartResponse: 2 ms (Gray to Gray)
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- sRGB

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, Windows 7 / Vista, sRGB
- User convenience: SmartImage, Volume, Turbo, Menu, Power On/Off
- OSD Languages: English, French, German, Italian, Russian, Simplified Chinese, Spanish, Portuguese, Turkish

## Stand

- Tilt: -3/14 degree

## Power

- Power supply: External, 100-240VAC, 50/60Hz
- Off mode: 0.3 W
- On mode: 20.38 W (EnergyStar 5.0 test method)
- Standby mode: 0.3 W
- Power LED indicator: Operation - White, Standby/sleep-white (blinking)

## Dimensions

- Product with stand (mm): 514 x 389 x 175 mm
- Packaging in mm (WxHxD): 558 x 533 x 110 mm

## Weight

- Product with packaging (kg): 4.19 kg
- Product with stand (kg): 2.57 kg

## Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 30,000 hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: EPEAT Silver, RoHS, EnergyStar 5.0
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC, Class B, GOST, UL/cUL

## Cabinet

- Color: Black/Black
- Finish: Glossy

