



Philips  
LCD Monitor with Digital  
TV tuner

58 cm (23") w T-line  
1920x1080 Full HD

231T1SB



## Digital Full HD TV monitor in a stylish package

Experience brilliant multimedia performance with this stylish, glossy and stunning Full HD 1080p display with Digital TV tuner! Combined with HDMI and AV inputs along with powerful sound the 231T1 takes entertainment to a new height!

### Best picture quality

- Full HD LCD display, with a 1920x1080p resolution
- SmartContrast 50000:1 for incredible rich black details
- Smart mode selects a perfect mode for what you are watching
- Up to 5ms response time for clear, fast moving action

### Great convenience

- Built-in TV tuner for viewing TV programs on your PC monitor
- Remote control for TV functions

### Experience true multimedia

- SmartSound selects a perfect mode for audio performance
- HDMI-ready for top quality, multimedia experience
- Incredible Surround for enhanced audio enjoyment

### Ready for digital

- MPEG4 HDTV reception via DVBT tuner

# PHILIPS

LCD Monitor with Digital TV tuner  
58 cm (23") w T-line 1920x1080 Full HD

231T1SB/00

# Highlights

## MPEG4 HDTV

HDTV allows you to watch High Definition TV in the best picture and sound quality without additional set-top box. With the built in DVBT tuner that can handle state-of-the-art MPEG-4 formats, you can now receive and watch High Definition TV programs and other rich multimedia contents in Digital Quality

## Full HD LCD display 1920x1080p



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources, including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

## HDMI Ready



HDMI-ready

An HDMI-ready device has all the required hardware to accept High-Definition

Multimedia Interface (HDMI) input. A HDMI cable enables high-quality digital video and audio all transmitted over a single cable from a PC or any number of AV sources (including set-top boxes, DVD players, A/V receivers and video cameras).

## Smart mode

The optimum picture and sound depends on various aspects like the video source, content type, surroundings of the room, type of display device etc. Smart Mode has predefined picture and sound settings conveniently preset by the way you use your TV. The 'Personal' setting, allows you to define the picture settings according to your preference, store it and gain easy access for future selection. All these conveniently built into your TV for optimal settings.

## SmartContrast ratio 50000:1



With SmartContrast



Without SmartContrast

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent blacklevel and accurate rendition of dark shades and colors. It gives a bright, lifelike picture with high contrast and vibrant colors

## Incredible Surround



Incredible Surround is an audio technology from Philips that dramatically magnifies the sound field to immerse you in the audio. Using state-of-the-art electronic phase shifting, Incredible Surround mixes sounds from left and right in such a way that it expands the virtual distance between the two speakers. This wider spread greatly enhances the stereo effect and creates a more natural sound dimension. Incredible Surround allows you to experience total surround with greater depth and width of sound, without the use of additional speakers.

## 5ms response time

Response time measures signal reaction speed in milliseconds. Faster response time is better as it eliminates visible image artifacts that could dampen your experience when viewing fast moving images or objects. In this case, this LCD panel gives you 5ms response time so that you can watch your LCD TV with a clear, fast moving action.



# Specifications

## Picture/Display

- Aspect ratio: Widescreen, 16:9
- Brightness: 300 cd/m<sup>2</sup>
- SmartContrast: 50000:1
- Contrast ratio (typical): 1000:1
- Diagonal screen size: 23 inch / 58.42 cm
- Panel resolution: 1920 x 1080
- Picture enhancement: Progressive scan, TrueVision
- Response time (typical): 5 ms
- Screen enhancement: Anti-Reflection coated screen
- Viewing angle: 170° (H) / 160° (V)

## Supported Display Resolution

### Computer formats

Resolution	Refresh rate
1920 x 1080	60Hz

### Video formats

Resolution	Refresh rate
480i	60Hz
480p	60Hz
576i	50Hz
576p	50Hz
720p	50, 60Hz
1080i	50, 60Hz
1080p	50, 60Hz

## Sound

- Output power (RMS): 2 x 5W
- Sound Enhancement: Incredible Surround, Smart Sound
- Sound System: Mono, Stereo

## Convenience

- Ease of Installation: Automatic Tuning System (ATS), Plug & Play
- Ease of Use: Program List, Side Control
- Remote control: 231T1 Remote control
- On-Screen Display languages: Bulgarian, Croatian, Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Norwegian, Polish, Portuguese, Russian, Serbian, Simplified Chinese, Slovakian, Slovenian, Spanish, Swedish, Turkish

- Other convenience: VESA mount (100x100mm)
- Screen Format Adjustments: Widescreen, Normal, Zoom 1, Zoom 2
- Smart mode: Movie, Personal, Vivid, Standard, Eco
- SmartSound: Music, Speech, Personal
- Teletext: 1000 page Smart Text

## Tuner/Reception/Transmission

- Aerial Input: 75 ohm coaxial (IEC75)
- TV system: PAL I, PAL B/G, PAL D/K, SECAM B/G, SECAM D/K, SECAM L/L'
- Video Playback: NTSC, SECAM, PAL
- Tuner Display: PLL
- Digital TV: DVB Terrestrial \*
- Tuner bands: Hyperband, S-Channel, UHF, VHF

## Connectivity

- Signal Input: VGA (Analog), HDMI, PC Audio in
- Ext 1: SCART in
- Ext 2: YPbPr in, Audio L/R in
- Ext 3: CVBS out, Audio L/R out
- Other connections: Common Interface, CVBS in, Audio L/R in, USB Service port, S/PDIF out (coaxial)

## Power

- On mode: 45W (Typ.@monitor mode)
- Off mode: <0.3W
- Ambient temperature: 0 °C to 40 °C
- Mains power: 100-240V, 50/60Hz

## Dimensions


- Product with stand (mm): 399 x 560 x 176 mm
- Product without stand (mm): 364 x 560 x 65 mm
- Packaging in mm (WxHxD): 477 x 653 x 160 mm

## Weight

- Product with stand (kg): 5.53 kg
- Product without stand (kg): 5.35 kg
- Product with packaging (kg): 7.59 kg

## Accessories

- Included accessories: Table top stand, Power cord, Quick start guide, User Manual, Remote Control, Batteries for remote control

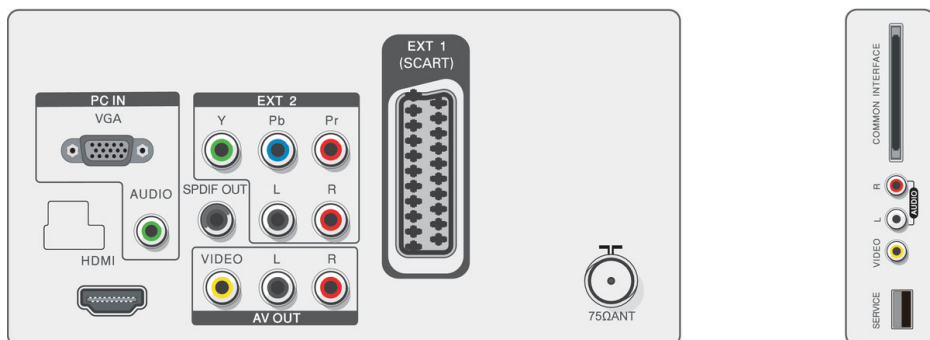

Issue date 2022-05-10

Version: 3.2.3

12 NC: 8670 000 56362  
EAN: 87 12581 50497 7

© 2022 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

[www.philips.com](http://www.philips.com)