



Philips Signage Solutions
Q-Line Display

86"

Direct LED Backlight
Ultra HD



86BDL3550Q

Stand out

Easy-setup 18/7 display.

Inform and enthrall with a Philips Q-Line Professional Ultra HD Display. This reliable solution can be up and running as quickly as you need-with no additional hardware.

Cost-effective system solution

- Integrated media player. Easily schedule USB content
- FailOver ensures content is always playing
- Easy control. Remotely manage networked displays

Effortless setup. Total control.

- Operate, monitor and maintain with CMND & Control
- CMND & Create. Develop and launch your own content
- OPS slot allows for PC embedding without cabling

Smart and powerful

- Android SoC processor. Native and web apps
- Connect and control your content via the cloud


Superb picture. Ultra-high brightness.

- Ultra-HD. Rich images. Stunning contrast

PHILIPS

Highlights

CMND & Control



Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

Integrated media player

Easily schedule content to play from USB. Your Philips Professional Display will wake from standby to play the content you want, and then return to standby once playback is done.

FailOver




From waiting room to meeting room, never show a blank screen. FailOver lets your Philips Professional Display switch automatically between primary and secondary inputs ensuring content keeps playing even if the primary source goes down. Simply set a list of

alternate inputs to be sure your business is always on.

Easy control

Easy control. Remotely manage networked displays

OPS slot



Integrate a full-power PC or Android-powered CRD50 module directly into your Philips Professional Display. The OPS slot contains all the connections you need to run your slot-in solution, including a power supply.

Ultra-HD Resolution

Ultra-HD. Rich images. Stunning contrast

CMND & Create



Take control of your content with CMND & Create. A drag-and-drop interface makes it simple to publish your own content-whether

it's a daily specials board or branded corporate information. Preloaded templates and integrated widgets ensure your stills, text, and video will be up and running in no time.

Powered by Android 8

Control your display via an Internet connection. Android-powered Philips Professional Displays are optimized for native Android apps, and you can install web apps directly to the display too. A new Android 8 ensures the software is kept secure and remain to the latest specification for longer.

SmartBrowser

Connect and control your content via the cloud with the integrated HTML5 browser. Using the Chromium based browser, design your content online and connect a single display, or your complete network. Show content in both landscape and portrait mode, with fullHD resolution. Simply connect the display to the internet using WiFi or with an RJ45 cable, and enjoy your own created playlists.

Specifications

Connectivity

- Audio output: 3.5mm jack
- Video input: DVI-D (x1), HDMI 2.0 (x3), USB 2.0 (x2), VGA (Analog D-Sub) (x1)
- Audio input: 3.5 mm jack
- Other connections: OPS
- External control: RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack, RJ45

Picture/Display

- Diagonal screen size (metric): 217.4 cm
- Diagonal screen size (inch): 85.6 inch
- Aspect ratio: 16:9
- Panel resolution: 3840 x 2160
- Pixel pitch: 0.4935 x 0.4935 mm
- Optimum resolution: 3840 x 2160 @ 60 Hz
- Brightness: 400 cd/m²
- Display colors: 1.07 Billion
- Contrast ratio (typical): 1200:1
- Dynamic contrast ratio: 500,000:1
- Response time (typical): 8 ms
- Viewing angle (horizontal): 178 degree
- Viewing angle (vertical): 178 degree
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, Motion compens. deinterlacing, Progressive scan, 3D MA deinterlacing, Dynamic contrast enhancement
- Panel technology: IPS
- Operating system: Android 8.0
- Clinical image: D-Image preset (dicom part 14 compatible)

Convenience

- Placement: Landscape (18/7), Portrait (18/7)
- Tiled Matrix: Up to 15 x 15
- Keyboard control: Hidden, Lockable
- Remote control signal: Lockable
- Signal loop through: RS232, IR Loophthrough
- Ease of installation: Smart Insert
- Energy saving functions: Smart Power
- Network controllable: RS232, RJ45
- Start-up: Switch on delay, Switch on status, Boot on source
- Start-up window: enable / disable Philips logo

Sound

- Built-in speakers: 2 x 10W RMS

Power

- Mains power: 100 - 240V~, 50/60Hz
- Consumption (Typical): 320 W
- Consumption (Max): 480 W
- Standby power consumption: $\leq 0.5W$
- Power Saving Features: Smart Power
- Energy Label Class: G

Supported Display Resolution

- Computer formats: 1920 x 1080, 60Hz, 1680 x 1050, 60Hz, 1600 x 1200, 60Hz, 1440 x 900, 60Hz, 1280 x 1024, 60Hz, 1280 x 800, 60Hz, 1280 x 720, 60Hz, 1152 x 870, 75Hz, 1024 x 768, 60, 70, 75Hz, 800 x 600, 56, 60, 72, 75Hz, 720 x 400, 70Hz, 640 x 480, 60, 67, 72, 75Hz, 1152 x 864, 75Hz, 832 x 624, 75Hz, 3840 x 2160, 30, 60Hz
- Video formats: 3840 x 2160, 60Hz, 3840 x 2160, 30Hz, 576p, 50Hz, 576i, 50Hz, 480p, 60Hz, 480i, 60Hz, 1080p, 50, 60Hz, 1080i, 50, 60Hz, 720p, 50, 60 Hz

Dimensions

- Set Width: 1929.0 mm
- Product weight: 49.5 kg
- Set Height: 1100.0 mm
- Set Depth: 69.5mm(D@wall mount) / 91.8mm(D@handle) mm
- Set Width (inch): 75.94 inch
- Set Height (inch): 43.31 inch
- Wall Mount: 600 x 400 mm, M8
- Set Depth (inch): 2.74(@ wall mount)/ 3.61(@ handle) inch
- Bezel width: 15.5 mm (Even bezel)
- Product weight (lb): 109.13 lb

Operating conditions

- Altitude: 0 ~ 3000 m
- Temperature range (operation): 0 ~ 40 °C
- MTBF: 30,000 hour(s)
- Temperature range (storage): -20 ~ 60 °C
- Humidity range (operation)[RH]: 20 ~ 80% RH (No condensation)
- Humidity range (storage) [RH]: 5 ~ 95% RH (No condensation)

Multimedia Applications

- USB Playback Video: MPEG, H.264, H.263, H.265
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Audio: AAC, HEAAC, MPEG

Internal Player

- CPU: Dual core cortex A53 1.1G Hz, Dual core cortex A73 1.15G Hz
- GPU: ARM Mali G51
- Memory: 2GB DDR3, 8GB


Accessories

- Included accessories: AC Power Cord, RS232 cable, Remote Control, Batteries for remote control, Quick start guide
- Included Accessories: IR sensor cable (1.8 m) (x1), RS232 daisy-chain cable, M3 screw (X1), M4 Screw (x1), Philips logo (x1), USB Cover (x1)

Miscellaneous

- On-Screen Display Languages: Simplified Chinese, Traditional Chinese, English, French, German, Italian, Polish, Russian, Spanish, Turkish, Japanese, Arabic
- Warranty: 3 year warranty
- Regulatory approvals: CE, CB, BSMI, CU, ETL, FCC, Class A, PSB, VCCI

Philips 86BDL3550Q
Version: 4.0
Release Date: 20240318

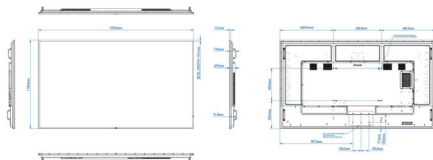

Issue date 2024-03-23

Version: 4.0.1

EAN: 87 12581 76551 4

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com