

Philips
QHD LCD monitor

B Line

27" (68.6 cm)
2560 x 1440 (QHD)

272B8QJEB



Crystal-clear image

efficient performance for maximum productivity

Get your best work done with the Philips 27" Quad HD monitor. Crystal-clear Quad HD gives you the space and clarity to see your work. Features like Flicker-free and LowBlue mode make work easy-on-the eyes.

Brilliant performance

- Crystalclear images with Quad HD 2560 x 1440 pixels
- 1.074 billion colors for smooth color gradations and detail
- IPS technology for full colors and wide viewing angles

Designed for comfortable productivity

- LowBlue Mode for easy on-the-eyes productivity
- Less eye fatigue with Flicker-free technology
- SmartErgoBase enables people-friendly ergonomic adjustments
- EasyRead mode for a paper-like reading experience

Features for the way you work

- Built-in stereo speakers for multimedia
- USB 3.0 enables fast data transfers and smart phone charging
- SmartConnect with DisplayPort, HDMI and VGA connections

Sustainable Eco-design


- Designed to meet environmental standards

PHILIPS

QHD LCD monitor
B Line 27" (68.6 cm), 2560 x 1440 (QHD)


Highlights

Crystalclear images

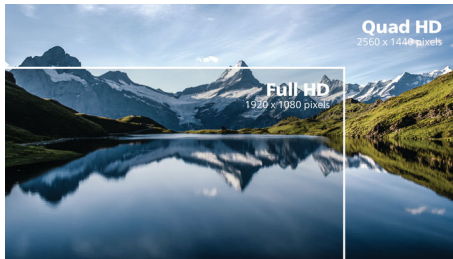


These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources like USB-C, Displayport, HDMI, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

10-bit colors

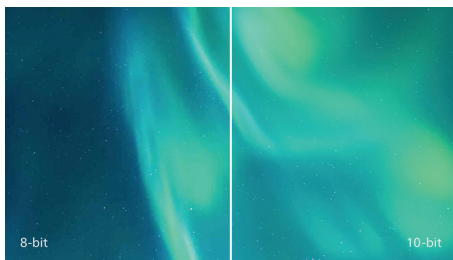

The 10-bit display delivers rich color depth with 1.074 billion colors and 12-bit internal processing for re-creating smooth, natural colors without gradations and color banding.

IPS technology

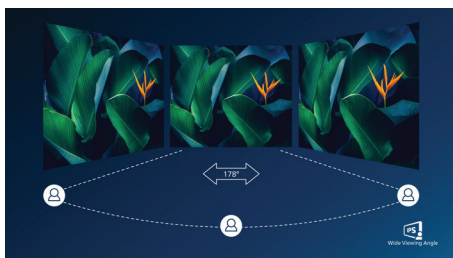

IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178

degree, making it possible to view the display from almost any angle - even in 90 degree Pivot mode! Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

LowBlue Mode



Studies have shown that just as ultra-violet rays can cause eye damage, shortwave length blue light rays from LED displays can cause eye damage and affect vision over time. Developed for wellbeing, Philips LowBlue Mode setting uses a smart software technology to reduce harmful shortwave blue light.


Flicker-free technology



Due to the way brightness is controlled on LED-backlit screens, some users experience flicker on their screen which causes eye fatigue. Philips Flicker-free Technology applies a new solution to regulate brightness and reduce flicker for more comfortable viewing.


272B8QJEB/00

SmartErgoBase

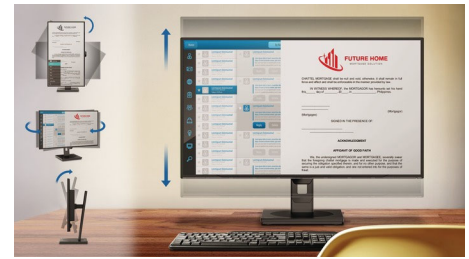


The SmartErgoBase is a monitor base that delivers ergonomic display comfort and provides cable management. The base can swivel, tilt and rotate to various angles to ensure maximum comfort. The height adjustable stand guarantees the optimal viewing level, reducing the physical strains of a long workday, while cable management reduces cable clutter and keeps the workspace neat and professional.

EasyRead mode

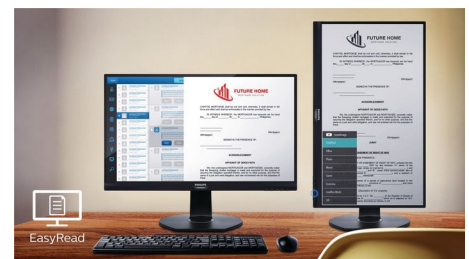

EasyRead mode for a paper-like reading experience

Built-in stereo speakers

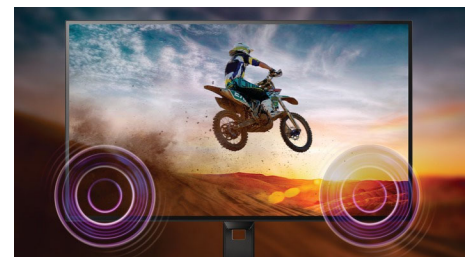

A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.



Quad HD



IPS
Wide Viewing Angle



LowBlue Mode



Flicker-free



SmartErgo Base



EasyRead



Built-in Speaker



SmartConnect



TCO Certified

Specifications

Picture/Display

- LCD panel type: IPS technology
- Adaptive sync
- Backlight type: W-LED system
- Panel Size: 27 inch / 68.5 cm
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Effective viewing area: 596.7 (H) x 335.7 (V)
- Aspect ratio: 16:9
- Optimum resolution: 2560 x 1440 @ 60Hz
- Pixel Density: 109 PPI
- Response time (typical): 5 ms (Gray to Gray)*
- Brightness: 250 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: 50,000,000:1
- Pixel pitch: 0.233 x 0.233 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Flicker-free
- Picture enhancement: SmartImage
- Color gamut (typical): NTSC 72% (CIE1931)*
- Display colors: Color support 1.07 billion colors
- Scanning Frequency: 30 - 83 kHz (H) / 56 - 76 Hz (V)
- sRGB
- EasyRead
- LowBlue Mode

Connectivity

- Signal Input: VGA (Analog), DVI-Dual Link (digital, HDCP), DisplayPort 1.2, HDMI 1.4
- USB: USB 3.0x2 (1 w/fast charging)*, USB 2.0 x 2
- Audio (In/Out): PC audio-in, Headphone out
- Sync Input: Separate Sync, Sync on Green

Convenience

- Built-in Speakers: 2 W x 2
- User convenience: SmartImage, Input, Brightness, Menu, Power On/Off
- Control software: SmartControl
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

Stand

- Height adjustment: 130 mm
- Pivot: +/- 90 degree
- Swivel: -175/175 degree
- Tilt: -5/30 degree

Power

- ECO mode: 16.4 W (typ.)
- On mode: 34.2 W (typ.)
- Standby mode: <0.5 W (typ.)
- Off mode: Zero watts with Zero switch
- Energy Label Class: F
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: Built-in, 100-240VAC, 50-60Hz

Dimensions

- Product with stand(max height): 625 x 530 x 224 mm
- Product without stand (mm): 625 x 370 x 51 mm
- Packaging in mm (WxHxD): 699 x 454 x 242 mm

Weight

- Product with stand (kg): 6.90 kg
- Product without stand (kg): 4.59 kg
- Product with packaging (kg): 9.96 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF (demonstrated): 70,000 hrs (excluded backlight)

Sustainability

- Environmental and energy: TCO Certified Edge, RoHS, WEEE
- Recyclable packaging material: 100 %
- Post consumer recycled plastic: 85%
- Specific Substances: PVC / BFR free housing, Mercury free

Compliance and standards

- Regulatory Approvals: CE Mark, FCC Class B, SEMKO, cETLus, CU-EAC, TUV Ergo, TUV/GS, ICES-003, UKRAINIAN, CCC, MEPS, PSE, RCM, VCCI

Cabinet

- Front bezel: Black
- Rear cover: Black
- Foot: Black
- Finish: Texture

What's in the box?

- Monitor with stand
- Cables: D-Sub cable, HDMI cable, DP cable, Audio cable, Power cable
- User Documentation



Issue date 2023-09-13

Version: 8.0.1

12 NC: 8670 001 51265
EAN: 87 12581 74974 3

© 2023 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

* Fast charging complies with USB BC 1.2 standard

* Response time value equal to SmartResponse

* The monitor may look different from feature images.