

Philips Monitor
USB-C monitor

5000 series

24 (23.8" / 60.5 cm diag.)
1920 x 1080 (Full HD)

24E1N5300AE



Simplify your connections with USB-C

This Philips USB-C multipurpose monitor offers clutter-free setup. With a single cable you can view smooth high-resolution video, transfer data, and charge your laptop. A true hub for mobile professionals.

Single cable USB-C connection

- Connect your notebook with one USB-C cable

Superb Picture Quality

- IPS LED wide view technology for image and color accuracy
- 1ms (MPRT) fast response for crisp image and smooth gameplay
- SmartImage game mode optimized for gamers
- SmartContrast for rich black details

Features designed for you

- LowBlue mode and Flicker-free easy-on-the eyes viewing
- Built-in stereo speakers for multimedia
- Tilt, pivot and height-adjust for an ideal viewing position
- EasyRead mode for a paper-like reading experience
- Cable management reduces cable clutter for neat workspace
- EasySelect menu toggle key for quick on-screen menu access

PHILIPS

USB-C monitor
5000 series 24 (23.8" / 60.5 cm diag.), 1920 x 1080 (Full HD)

24E1N5300AE/89


Highlights

USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high resolution video and transfer data at a super-speed, while powering up and re-charging your compatible device at the same time.

1ms MPRT fast response

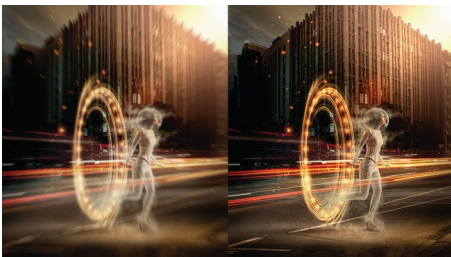

MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers shaper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

SmartImage Game mode



The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

LowBlue Mode & Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.


Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or


invisible down firing, top firing, rear firing, etc depending on model and design.

Compact Ergo Base

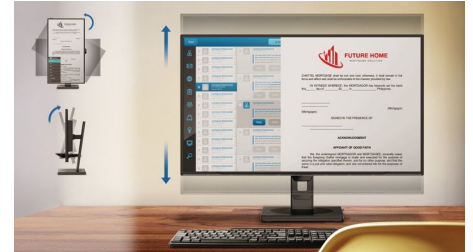


The Compact Ergo Base is a people-friendly Philips monitor base that tilts, pivot and height-adjusts so each user can position the monitor for maximum viewing comfort and efficiency.

Cable management

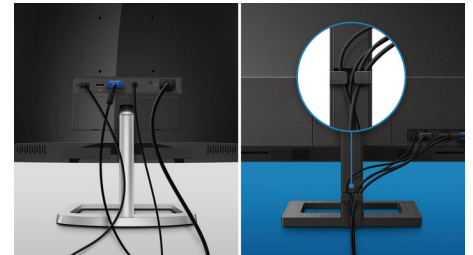

Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

EasyRead mode

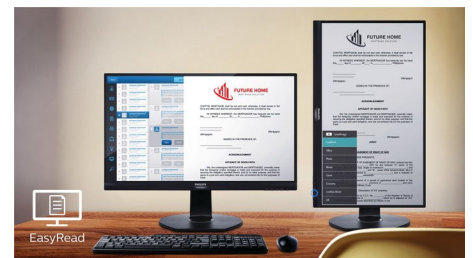

EasyRead mode for a paper-like reading experience



USB-C



Wide Viewing Angle



Fast Response 1ms MPRT



SmartImage[™] Game



LowBlue Mode



Flicker-free



Built-in Speaker



EasyRead



Compact Ergo Base



EasySelect

Specifications

Picture/Display

- LCD panel type: IPS technology
- Backlight type: W-LED system
- Panel Size: 23.8 inch / 60.5 cm
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- Effective viewing area: 527.04 (H) x 296.46 (V)
- Aspect ratio: 16:9
- Maximum resolution: 1920 x 1080 @ 75 Hz*
- Pixel Density: 92.56 PPI
- Response time (typical): 4 ms (Gray to Gray)*
- MPRT: 1 ms
- Brightness: 300 cd/m²
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Pixel pitch: 0.2745 x 0.2745 mm
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Flicker-free
- Picture enhancement: SmartImage game
- Color gamut (typical): NTSC 104.8%*, sRGB 120.9%*
- Display colors: 16.7 M
- Scanning Frequency: 30 - 85 kHz (H) / 48 - 75 Hz (V)
- LowBlue Mode
- EasyRead
- sRGB
- Adaptive sync

Connectivity

- Signal Input: HDMI 1.4 x 1, DisplayPort 1.2 x 1, USB-C 3.2 Gen 1 x 1 (upstream, Power Delivery up to 65W)
- USB: USB 3.2 x 4 (downstream with 1 fast charge B.C 1.2)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out

USB

- USB-C: Reversible plug connector
- Super speed: Data and Video transfer
- DP: Built-in Display Port Alt mode
- Power delivery: USB PD version 3.0
- USB-C max. power delivery: Up to 65W (5V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)

Convenience

- Built-in Speakers: 3 W x 2
- User convenience: Power On/Off, Menu, Volume, Input, SmartImage Game
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish,

- Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7

Stand

- Height adjustment: 130 mm
- Pivot: +/- 90 degree
- Tilt: -5/20 degree

Power

- On mode: 21.2 W (typ.)
- Standby mode: 0.5 W (typ.)
- Off mode: 0.3 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: External, 100-240VAC, 50-60Hz

Dimensions

- Product with stand(max height): 540 x 479 x 198 mm
- Product without stand (mm): 540 x 321 x 43 mm
- Packaging in mm (WxHxD): 600 x 526 x 143 mm

Weight

- Product with stand (kg): 4.36 kg
- Product without stand (kg): 2.70 kg
- Product with packaging (kg): 7.64 kg

Operating conditions

- Temperature range (operation): 0 to 40 °C
- Temperature range (storage): -20 to 60 °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 50,000 hrs (excluding backlight) hour(s)

Sustainability

- Environmental and energy: RoHS, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, TUV/ISO9241-307, TUV-BAUART

Cabinet

- Color: Black
- Finish: Textured



Issue date 2022-11-30

Version: 1.0.1

12 NC: 8670 001 88768
EAN: 87 12581 80102 1

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com

- * "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
- * The maximum resolution works for either HDMI input or DP input.
- * For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- * Response time value equal to SmartResponse
- * MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
- * MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
- * NTSC Area based on CIE1976
- * sRGB Area based on CIE1931
- * For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- * For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- * The monitor may look different from feature images.