

Philips G600 Series
Wired mechanical gaming
keyboard

High-speed mechanical keys

White LED backlit keys
5 extra dedicated macro keys
Black alloy surface

SPK8401B



Lightning fast, ultra responsive, super durable

The new G600 series gaming keyboard features high-speed mechanical keys for the dialled-in performance and 5 macro keys for custom control. White LED backlit keys for a cool match to your system. Metal alloy surface offers rugged durability.

Designed for heavy use

- 50 million keystroke lifespan
- Water-resistant design for cleaning and occasional spills
- Alloy surface for super durability

Cool looks to match your mod

- White LED backlit keys

Customise and dial-in for performance

- Five additional dedicated macro keys for customisation

Performance to dominate

- Full-key rollover anti-ghosting for complex fast inputs
- Dialled-in mechanical cyan switches for fast reaction


PHILIPS

Wired mechanical gaming keyboard
High-speed mechanical keys White LED backlit keys, 5 extra dedicated macro keys, Black alloy surface

SPK8401B/01

Highlights

Full n-key rollover

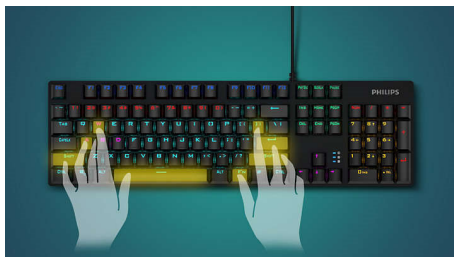


Fast complex gaming key strokes demand advanced performance. With full N-key rollover, every key is registered independently without confusion so that each keystroke is correctly registered regardless of how many other keys are being pressed or held down at the time.

Water-resistant keys



Life can be messy. With this water-resistant keyboard, the occasional spill or spray is no problem. These keyboards are built to last.

50 million keystroke lifespan

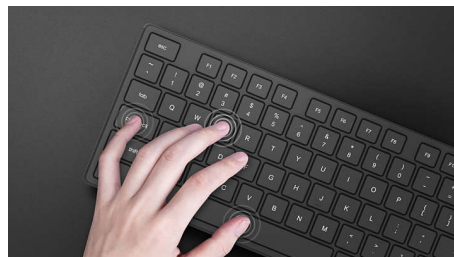

How long does it take to get to 50 million keystrokes? A long time. Familiar and reliable, this keyboard is built to last for many years of fast action.

Alloy surface design




Everything about this keyboard is built to last for rugged high-performance use, even down to the keyboard surface. The Alloy surface is designed for high durability, superior rigidity and looks great too.

Fast mechanical switches



The most popular mechanical switches for gaming keyboards, cyan mechanical switches offer gamers a light, tactile clicky key for rapid activation and performance.

5 additional macro keys

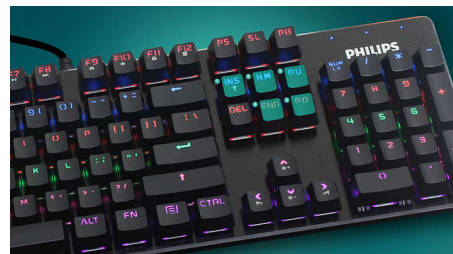

Your keyboard is your control. You dial it in and customise for fast action. An additional five macro keys gives you the customisation you need to gain an edge.

White LED backlit keys

White LED backlit keys

Wired mechanical gaming keyboard
High-speed mechanical keys White LED backlit keys, 5 extra dedicated macro keys, Black alloy surface

SPK8401B/01

Specifications

OS/System Requirements

- System Requirements: Microsoft Windows 2000, ME, XP, Vista and above, Linux, IOS

Physical Dimensions

- Dimensions (L x W x H): 438 x 132 x 38.5 (mm)
- Weight: 896 (g)

Technical specifications

- Front Panel Colour: Black
- Connectivity: USB 2.0 wired
- Design Type: Ergonomic design
- Lighting Effect Type: White LED backlit
- Product Type: High-performance mechanical gaming keyboard
- Front Panel Material: Alloy front panel
- Key Lifespan: 50 million keystroke lifespan
- Key Rollover Type: N-key rollover
- Keys: 104 Keys
- Macro Key Type: Five additional dedicated macro keys (Y,U,I,O,P)
- Travel Distance Type Of Key: Medium key travel
- Water Resistant



Issue date 2024-04-26

Version: 1.0.1

EAN: 87 12581 77370 0

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com