

# PHILIPS

USB-C monitor

Monitor

3000 series

32 (31.5" / 80 cm diag.)

2560 x 1440 (QHD)

32E1N3600LA



## Simplify your connections with USB-C

This Philips USB-C multipurpose monitor offers clutter-free setup. With a single cable you can view smooth high-resolution video, transfer data, and charge your laptop. A true hub for mobile professionals.

### Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- EasyRead mode for a paper-like reading experience
- Cable management reduces cable clutter for neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing

### Single cable USB-C connection

- Connect your notebook with one USB-C cable

### Superb Picture Quality

- SmartContrast for rich black details
- Crystalclear images with Quad HD 2560 x 1440 pixels
- SmartImage game mode optimized for gamers
- Effortlessly smooth gameplay with AMD FreeSync™ technology
- 1ms (MPRT) fast response for crisp image and smooth gameplay

# Monitor

USB-C monitor

32E1N3600LA/75


## Highlights

### USB-C connection




This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high resolution video and transfer data at a super-speed, while powering up and re-charging your compatible device at the same time.

### Crystalclear images

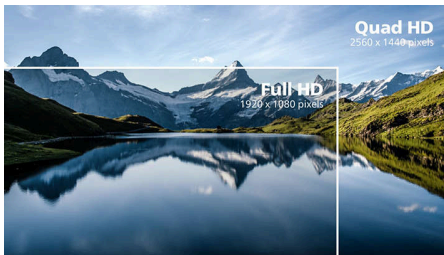

These Philips screens deliver Crystalclear, Quad HD 2560x1440 or 2560x1080 pixel images. Utilizing high performance panels with high density pixel count, enabled by high bandwidth sources, these new displays will make your images and graphics come alive. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, using 3D graphic applications or a financial wizard working on huge spreadsheets, Philips displays will give you Crystalclear images.

### Ultra-smooth gaming

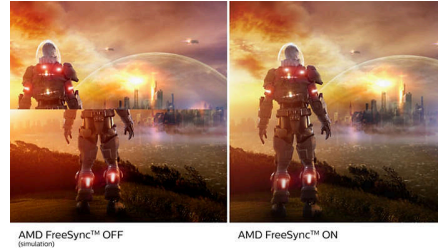


Gaming shouldn't be a choice between choppy gameplay or broken frames. With the new Philips monitor it doesn't have to be. Get fluid, artifact-free performance at virtually any framerate with AMD FreeSync™ technology, smooth quick refresh and ultra-fast response time.

### 1ms MPRT fast response



MPRT (motion picture response time) is more intuitive way to describe the response time, which directly refers the duration from seeing blurry noise to clean and crisp images. Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Best choice for playing thrilling and twitch-sensitive games.

### SmartImage Game mode

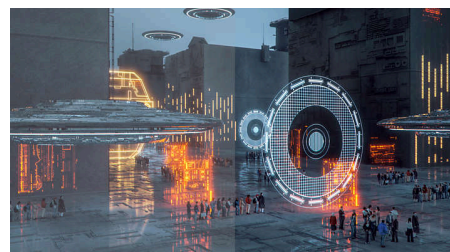

The new Philips gaming display has quick access OSD fine tuned for gamers, offering you multiple options. "FPS" mode (First person shooting) improves dark themes in games, allowing you to see hidden objects in dark areas. "Racing" mode

adapts display with fastest response time, high color, along with image adjustments. "RTS" mode (Real time strategy) has a special SmartFrame mode which enables highlighting of specific area and allows for size and image adjustments. Gamer 1 and Gamer 2 enable you to save personal customized settings based on different games, ensuring best performance.

### LowBlue Mode & Flicker-free




Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.

### Built-in stereo speakers



A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

### EasyRead mode

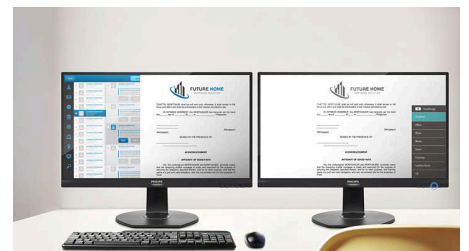

EasyRead mode for a paper-like reading experience



# Monitor

USB-C monitor

32E1N3600LA/75

## Highlights

### EasySelect Menu Toggle Key



The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

### Cable management



Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

### SmartContrast



SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.



AMD  
FreeSync



Built-in Speaker

# Specifications

## Picture/Display

**Panel Size:** 31.5 inch / 80 cm  
**Aspect ratio:** 16:9  
**LCD panel type:** VA LCD  
**Backlight type:** W-LED system  
**Pixel pitch:** 0.2724 x 0.2724 mm  
**Brightness:** 300 cd/m<sup>2</sup>  
**Display colors:** 16.7 M  
**Color gamut (typical):** NTSC 97.4%\*, sRGB 122%\*  
**Contrast ratio (typical):** 3000:1  
**SmartContrast:** Mega Infinity DCR  
**Response time (typical):** 4 ms (Gray to Gray)\*  
**Viewing angle:** 178° (H) / 178° (V), @ C/R > 10  
**Picture enhancement:** SmartImage game  
**Maximum resolution:** 2560 x 1440 @ 75 Hz\*  
**Effective viewing area:** 697.344 (H) x 392.256 (V)  
**Scanning Frequency:** 30 - 114 kHz (H) / 48 - 75 Hz (V)  
**sRGB**  
**Flicker-free**  
**Pixel Density:** 93.24 PPI  
**LowBlue Mode**  
**Display Screen Coating:** Anti-Glare, 3H, Haze 25%  
**MPRT:** 1 ms  
**EasyRead**  
**AMD FreeSync™ technology**

## Connectivity

**Signal Input:** HDMI 1.4 x 2, DisplayPort 1.2 x 1, USB-C 3.2 Gen 1 x 1 (upstream, Power Delivery up to 65W)  
**Sync Input:** Separate Sync  
**Audio (In/Out):** Audio out  
**USB::** USB 3.2 x 4 (with 1 fast charge B.C 1.2)  
**HDCP:** HDCP 1.4 (HDMI / DisplayPort / USB-C)

## USB

**Power delivery:** USB PD version 3.0  
**Super speed:** Data and Video transfer  
**DP:** Built-in Display Port Alt mode  
**USB-C max. power delivery:** Up to 65W (5V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)  
**USB-C:** Reversible plug connector

## Convenience

**Built-in Speakers:** 5 W x 2  
**Plug & Play Compatibility:** DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7  
**User convenience:** Power On/Off, Menu, Volume, Input, SmartImage Game

**OSD Languages:** Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian  
**Other convenience:** Kensington lock, VESA mount (100x100mm)

## Stand

**Tilt:** -5/20 degree

## Power

**Power supply:** Internal, 100-240VAC, 50-60Hz  
**Off mode:** 0.3 W (typ.)  
**On mode:** 46.3 W (typ.)  
**Standby mode:** 0.5 W (typ.)  
**Power LED indicator:** Operation - White, Standby mode - White (blinking)

## Dimensions

**Packaging in mm (WxHxD):** 930 x 517 x 162 mm  
**Product without stand (mm):** 715 x 420 x 62 mm  
**Product with stand(max height):** 715 x 514 x 248 mm

## Weight

**Product with packaging (kg):** 11.57 kg  
**Product with stand (kg):** 8.89 kg  
**Product without stand (kg):** 7.21 kg

## Operating conditions

**Altitude:** Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)  
**Temperature range (operation):** 0 to 40 °C  
**MTBF:** 50,000 hrs (excluding backlight) hour(s)  
**Relative humidity:** 20%-80 %  
**Temperature range (storage):** -20 to 60 °C

## Sustainability

**Environmental and energy:** RoHS  
**Recyclable packaging material:** 100 %  
**Specific Substances:** Mercury free, PVC / BFR free housing

## Compliance and standards

**Regulatory Approvals:** CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, TUV/ISO9241-307, TUV-BAUART, MEPS, RCM

## Cabinet

**Color:** Black  
**Finish:** Textured



- \* The maximum resolution works for either USB-C, DP or HDMI input.
- \* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- \* Response time value equal to SmartResponse
- \* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
- \* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
- \* NTSC Area based on CIE1976
- \* sRGB Area based on CIE1931
- \* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
- \* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- \* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- \* The monitor may look different from feature images.