



Philips
LCD monitor, LED
backlight with SmartImage
Lite

E Line
21.5" (54.6 cm)
Full HD display

227E4LSB

Elegant display enhances your viewing experience

Experience awesome LED pictures with natural colors on this elegant and slim design display.

Superb Picture Quality

- LED technology for natural colors
- 16:9 Full HD display for best viewing experience
- TrueVision ensures lab quality images
- SmartImage Lite for an enhanced LCD viewing experience
- Easy display performance tuning with SmartControl Lite
- SmartContrast for rich black details

Elegant Design

- Elegant, slim design complements your home decor
- Superb high quality glossy finish
- Modern Touch controls

Greener everyday

- Low power consumption saves energy bills
- Mercury Free eco-friendly display
- Eco-friendly materials that meets international standards

PHILIPS

LCD monitor, LED backlight
E Line 21.5" (54.6 cm), Full HD display

227E4LSB/94

Highlights

LED technology

White LED's are solid state devices which light up to full, consistent brightness faster saving startup time. LED's are free from mercury content which allows for eco-friendly recycling and disposal process. LED's allow for better dimming control of LCD backlight, resulting in super high contrast ratio. It also gives superior color reproduction thanks to consistent brightness across the screen.

SmartImage Lite

SmartImage Lite is an exclusive, leading edge Philips technology that analyzes the content displayed on your screen. Based on a scenario you select, SmartImage Lite dynamically enhances the contrast, color saturation and sharpness of images and videos for ultimate display performance - all in real time with the press on a single button.

SmartControl Lite

SmartControl Lite is the next generation 3D icon based GUI monitor control software. This allows user to fine-tune most parameters of the monitor like Color, Brightness, screen calibration, Multi-media, ID management, etc with the mouse.


16:9 Full HD



The Full HD screen has the widescreen resolution of 1920 x 1080p. This is the highest resolution of HD sources for the best possible picture quality. It is fully future proof as it supports 1080p signals from all sources,

including the most recent like Blu-ray and advanced HD game consoles. The signal processing is extensively upgraded to support this much higher signal quality and resolution. It produces brilliant flicker-free progressive scan pictures with superb brightness and colors.

SmartContrast

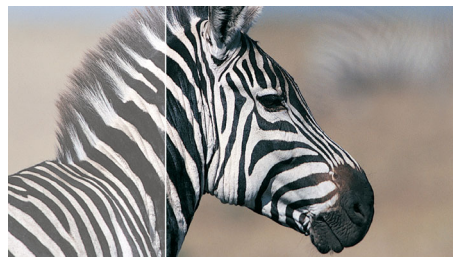

SmartContrast is a Philips technology that analyzes the contents you are displaying, automatically adjusting colors and controlling backlight intensity to dynamically enhance contrast for the best digital images and videos or when playing games where dark hues are displayed. When Economy mode is selected, contrast is adjusted and backlighting fine-tuned for just-right display of everyday office applications and lower power consumption.

TrueVision



TrueVision is a proprietary Philips technology that uses advanced algorithm for testing and aligning monitor display which gives you the ultimate display performance. Philips ensures TrueVision monitors leave the factory fine-

tuned with this process giving you consistent color and picture quality.

Touch controls



Touch controls are intelligent, touch sensitive icons that replace protruding buttons that lets the user adjust the monitor to their requirement. Responding to your lightest touch, Touch control gives the monitor a modern feel.

Mercury Free

Philips monitors with LED backlighting are free of Mercury content, one of the most toxic natural substances, which affects humans and animals. This reduces the environmental impact of the display throughout its life-cycle, from manufacturing to disposal.

Eco-friendly materials

"Philips is committed to use sustainable, eco-friendly materials across its monitor range. All body plastic parts, metal chassis parts and packing materials use 100% recyclable materials. In some selected models we utilize upto 65% post consumer recycled plastics. Strict adherence to RoHS standards ensure substantial reduction or elimination of toxic substances like Lead, for example. Mercury content in monitors with CCFL backlight has been reduced significantly, while eliminated in monitors with LED backlight completely. Visit Philips @ <http://www.asimpleswitch.com/global/> to learn more.



Specifications

Picture/Display

- LCD panel type: TFT-LCD
- Backlight type: W-LED system
- Panel Size: 21.5 inch / 54.6 cm
- Effective viewing area: 476.6 (H) x 268.1 (V)
- Aspect ratio: 16:9
- Optimum resolution: 1920 x 1080 @ 60Hz
- Response time (typical): 5 ms
- Contrast ratio (typical): 1000:1
- SmartContrast: 20,000,000:1
- Brightness: 250 cd/m²
- Pixel pitch: 0.248 x 0.248 mm
- Viewing angle: 176° (H) / 170° (V), @ C/R > 5
- Picture enhancement: SmartImage Lite
- Display colors: 16.7 M
- Scanning Frequency: 30 -83 kHz (H) / 56 -75 Hz (V)
- sRGB

Connectivity

- Signal Input: VGA (Analog), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green

Convenience

- User convenience: SmartImage lite, Input, 4:3 / Wide, Menu, Power On/Off
- OSD Languages: English, French, German, Italian, Russian, Simplified Chinese, Spanish, Portuguese, Turkish
- Other convenience: Kensington lock
- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7/Vista/XP

Stand

- Tilt: -5/20 degree

Power

- On mode: 17.2 W (EnergyStar 5.0 test method)

- Standby mode: 0.5 W
- Off mode: 0.3 W
- Power LED indicator: Operation - White, Standby mode- White (blinking)
- Power supply: External, 100-240VAC, 50-60Hz

Dimensions

- Product with stand (mm): 510 x 398 x 179 mm
- Product without stand (mm): 510 x 314 x 37 mm
- Packaging in mm (WxHxD): 565 x 482 x 102 mm

Weight

- Product with stand (kg): 2.20 kg
- Product without stand (kg): 1.83 kg
- Product with packaging (kg): 3.81 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- Temperature range (storage): -20°C to 60°C °C
- Relative humidity: 20%-80 %
- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- MTBF: 30,000 hour(s)

Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS, Lead-free, Mercury Free
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TCO 5.2, TUV/ISO9241-307, UL/cUL, WEEE

Cabinet

- Color: Black
- Finish: Glossy



Issue date 2017-07-28

Version: 1.0.1

12 NC: 8670 000 90896
EAN: 87 12581 64745 2

© 2017 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com