



Philips
LCD monitor

V Line
19" (48.3 cm)

190V3AB5

Enjoy great pictures in vivid colours

with stereo audio

Enjoy vivid LCD pictures with this attractive, glossy design display. Equipped with stereo speaker, it's a great choice!

Great picture quality

- SmartContrast 10,000,000:1 for incredibly rich black details

Design that complements any interior

- Attractive slim, glossy design
- Small footprint to blend into any lifestyle

Greener every day

- Energy Star for energy efficiency and low power consumption

Experience true multimedia

- Built-in speakers for audio without desktop clutter

Great convenience

- Easy display performance tuning with SmartControl Lite


PHILIPS

Highlights

Built-in speakers

A pair of stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing etc, depending on model and design.

SmartContrast ratio 10,000,000:1

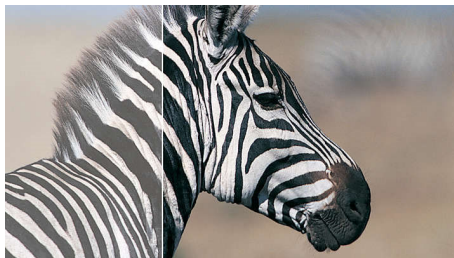

You want the LCD flat display with the highest contrast and most vibrant images. Philips advanced video processing combined with unique extreme dimming and backlight-

boosting technology results in vibrant images. SmartContrast will increase the contrast with excellent black level and accurate rendition of dark shades and colours. It gives a bright, lifelike picture with high contrast and vibrant colours.

SmartControl Lite

SmartControl Lite is the next generation 3D icon-based GUI monitor control software. This allows the user to fine-tune most parameters of the monitor like Colour, Brightness, screen calibration, Multimedia, ID management etc. with the mouse.

Energy Star 5.0

Energy Star is a US EPA sponsored energy efficiency programme also adopted by many other countries. Energy Star certification

ensures that you are buying a product which meets the latest power efficiency standards and which operates with maximum power efficiency at all operational levels. New Philips monitors are certified for Energy Star 5.0 specifications and meet or exceed the standard. For example, in sleep mode Energy Star 5.0 requires less than 1 Watt power consumption, whereas Philips monitors consume less than 0.5 Watts. Further details can be obtained from www.energystar.gov

Attractive slim, glossy design

Attractive slim, glossy design

Small footprint

Small footprint to blend into any lifestyle




Built-in Speaker



SmartContrast



SmartControl lite



4:3 wide



Slim design

Specifications

Connectivity

- Signal Input: VGA (Analogue), DVI-D (digital, HDCP)
- Sync Input: Separate Sync, Sync on Green
- Audio (In/Out): PC audio-in

Picture/Display

- Panel Size: 19 inch/48.3 cm
- Aspect ratio: 16:10
- LCD panel type: TFT-LCD
- Backlight type: CCFL system
- Pixel pitch: 0.2835 x 0.2835 mm
- Optimum resolution: 1440 x 900 @ 60 Hz
- Brightness: 250 cd/m²
- Display colours: 16.7 M
- Contrast ratio (typical): 1000:1
- SmartContrast: 10,000,000:1
- Response time (typical): 5 ms
- Viewing angle: 170° (H)/160° (V), @ C/R > 10
- Effective viewing area: 408.24 (H) x 255.15 (V)
- Scanning Frequency: 30–83 kHz (H)/56–75 Hz (V)
- sRGB

Convenience

- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 7
- Built-in Audio: 1.5 W x 2
- User convenience: Volume/Up, Brightness/Back, Menu/OK, Auto/Down, Power On/Off
- OSD Languages: English, French, German, Spanish, Italian, Russian, Simplified Chinese, Portuguese, Turkish
- Other convenience: Kensington lock, VESA mount (100 x 100 mm)

Stand

- Tilt: -5/+20 degree

Power

- Power supply: Built-in, 100-240 VAC, 50/60 Hz
- Off mode: 0.5 W
- On mode: 18.18 W (EnergyStar 5.0 test method)
- Standby mode: 0.5 W
- Power LED indicator: Operation - White, Standby mode - White (flashing)

Dimensions

- Product with stand (mm): 462 x 382 x 204 mm
- Packaging in mm (W x H x D): 503 x 396 x 125 mm
- Product without stand (mm): 462 x 319 x 54 mm

Weight

- Product with packaging (kg): 4.68 kg
- Product with stand (kg): 3.57 kg
- Product without stand (kg): 3.28 kg

Operating conditions

- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 hour(s)
- Relative humidity: 20%–80% %
- Temperature range (storage): -20°C to 60°C °C

Sustainability

- Environmental and energy: EnergyStar 5.0, EPEAT Silver, RoHS
- Recyclable packaging material: 100 %

Compliance and standards

- Regulatory Approvals: BSMI, CE Mark, FCC Class B, GOST, PSB, SASO, SEMKO, TUV Ergo, TUV/ GS, UL/cUL, WEEE

Cabinet

- Colour: Black
- Finish: Glossy (front bezel)/Textured (rear cover)



Issue date 2024-03-24

Version: 1.0.1

EAN: 87 12581 63399 8

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com