



Philips Evnia Gaming
Monitor
Full HD gaming monitor

Evnia 5000

27" (68.5 cm)
1920 x 1080 (Full HD)

27M1N5200P

Feel your game

This Philips gaming monitor is designed for the highest intensity gameplay. Sync technology, Ultra-fast 240Hz refresh rate and 0.5ms response time create tear-free and low latency gameplay. SmartImage HDR gives a vibrant, lifelike display.

Features designed for you

- EasySelect menu toggle key for quick on-screen menu access
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- SmartErgoBase enables people-friendly ergonomic adjustments

Immersive visuals

- 16:9 Full HD display for crisp detailed images
- IPS LED wide view technology for image and color accuracy
- SmartImage HDR gives optimal viewing from your HDR content

The gaming advantage is yours

- Ultra-fast 240 Hz refresh rate for virtually lag-free gaming
- 0.5 ms ultra-fast speed for crisp image and smooth gameplay
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- Low input lag reduces time delay between devices to monitor
- Certified NVIDIA® G-SYNC® compatible for smooth fast gaming

EVNIA

PHILIPS

Full HD gaming monitor
Evnia 5000 27" (68.5 cm), 1920 x 1080 (Full HD)

27M1N5200P/71

Highlights

AMD FreeSync™ Premium



Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

NVIDIA® G-SYNC® compatible



When playing intense games with high refresh rates, screen tearing may appear without optimal graphics synchronization. This Philips display is certified as NVIDIA® G-SYNC® compatible, reducing screen tearing and syncing your monitor's refresh rate with your graphic card's output for a smoother gaming experience. Scenes appear instantly, objects look sharper, and gameplay is smooth, giving you a stunning visual experience and a serious competitive edge.


Ultra-fast 240 Hz refresh rate



While playing the most intense engaging action-oriented games, ultra-fast 240 Hz


refresh rate enhances an ultra-smooth, lag-free gaming experience. This Philips display redraws the screen image up-to 240 times per second, effectively faster than a standard display. Especially for fast-paced games like FPS and racing games, 240 Hz gives a superior motion and clarity visuals. With Philips 240 Hz display, action sequences in gameplay look judder-free and ghost-free. You will experience deeper immersion and feeling alive in game.

0.5 ms MPRT fast response

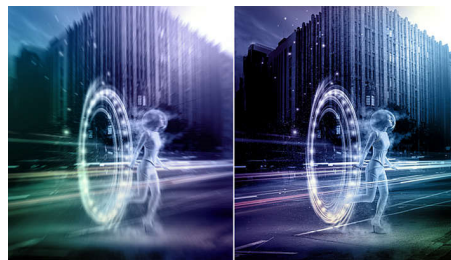

Philips Momentum display with 0.5 ms MPRT effectively eliminates smearing and motion blur, delivers sharper and precise visuals to enhance gaming experience. Fast-moving action and dramatic transitions will be rendered smoothly. Best choice for playing thrilling and twitch-sensitive games.

Low Input Lag

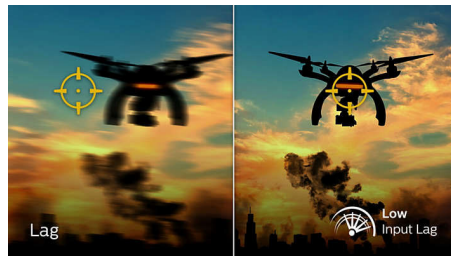

Input lag is the amount of time that elapses between performing an action with connected devices and seeing the result on screen. Low input lag reduces the time delay between entering a command from your devices to monitor, greatly improve on playing twitch-sensitive video games, particularly important to whom plays fast-paced, competitive games.

IPS technology



IPS displays use an advanced technology which gives you extra wide viewing angles of 178/178 degree, making it possible to view the display from almost any angle. Unlike standard TN panels, IPS displays gives you remarkably crisp images with vivid colors, making it ideal not only for Photos, movies and web browsing, but also for professional applications which demand color accuracy and consistent brightness at all times.

SmartImage HDR



Select one of SmartImage HDR modes to best suit your needs. HDR Game: Optimize for playing video games. With brighter white and darker black, the gaming scene is vivid and revealing more details, easily spot enemies hiding in the dark corner and shadows. HDR Movie: Ideal for watching HDR movie. Deliver better contrast and brightness for more realistic and immerse viewing experience. HDR Photo: Enhance red, green, and blue for lively visuals. DisplayHDR: VESA DisplayHDR certified*. Personal: Customize settings in picture menu. *Please refer to specification for HDR grade.

AMD FreeSync Premium

NVIDIA G-SYNC

240Hz

0.5ms Fast Response 0.5ms

Low Input Lag

Flicker-free

HDR

IPS Wide Viewing Angle

LowBlue Mode

Specifications

Connectivity

- Signal Input: HDMI x 2, DisplayPort x1
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- USB: USB-B x 1 (upstream), USB 3.2 x 4 (downstream with 2 fast charge B.C 1.2)
- HDCP: HDCP 2.2 (HDMI / DisplayPort)

Picture/Display

- Panel Size: 27 inch / 68.5 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.3108 x 0.3108 mm
- Brightness: 400 cd/m²
- Display colors: 16.7 M
- Color gamut (typical): NTSC 74.1%*, sRGB 100%*, Adobe RGB 87.1%*
- Color gamut (min.): DCI-P3 86.8%*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 1 ms (Gray to Gray)*
- Viewing angle: 178° (H) / 178° (V), @ C/R > 10
- Picture enhancement: SmartImage game
- Maximum resolution: 1920 x 1080 @ 240 Hz*
- Effective viewing area: 596.736 (H) x 335.664 (V)
- Scanning Frequency: 30 - 255 kHz (H) / 48 - 240 Hz (V)
- sRGB
- Delta E: < 2 (sRGB)
- Flicker-free
- Pixel Density: 81.59 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- SmartUniformity: 97 ~ 102%
- MPRT: 0.5 ms
- Low Input Lag
- EasyRead
- AMD FreeSync™ technology: Premium
- G-SYNC: Compatible*
- HDR: HDR Ready

Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Input/Up, Game Settings/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish,

- Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount (100x100mm)

Stand

- Height adjustment: 130 mm
- Pivot: +/- 90 degree
- Swivel: +/- 45 degree
- Tilt: -5/20 degree

Power

- Power supply: External, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 27.6 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode- White (blinking)

Dimensions

- Packaging in mm (WxHxD): 780 x 521 x 224 mm
- Product without stand (mm): 614 x 363 x 43 mm
- Product with stand(max height): 614 x 549 x 212 mm

Weight

- Product with packaging (kg): 9.65 kg
- Product with stand (kg): 4.80 kg
- Product without stand (kg): 3.40 kg

Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40 °C
- MTBF: 50,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60 °C

Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC / BFR free housing

Compliance and standards

- Regulatory Approvals: CB, CE Mark, FCC Class B, ICES-003, PSB

Cabinet

- Color: Black
- Finish: Textured

Issue date 2024-03-24

© 2024 Koninklijke Philips N.V.
All Rights reserved.

Version: 7.0.1

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

EAN: 87 12581 78556 7

www.philips.com

* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.
* The maximum resolution works for either HDMI input or DP input.
* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
* Response time value equal to SmartResponse
* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
* DCI-P3 Coverage based on CIE1976
* NTSC / sRGB Coverage based on CIE1931
* Adobe RGB Coverage based on CIE1976
* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.
* NVIDIA® G-SYNC® support interface: DisplayPort
* Make sure to update NVIDIA® G-SYNC® driver to the latest version, see more information on NVIDIA website: <https://www.nvidia.com/>
* Make sure your graphic card supports NVIDIA® G-SYNC®
* The monitor may look different from feature images.