

# PHILIPS

## LCD monitor

## Monitor

5000 series

34" (86.36 cm)

3440 x 1440 (WQHD)

34E1C5600HE



## Collaboration simplified

with built-in webcam

This Philips monitor is designed for the remote work environment. The integrated 5MP webcam delivers sharp images, and noise cancelling mic helps people hear you loud and clear.

### Features designed for you

- Secure sign-in with pop-up webcam
- EasySelect menu toggle key for quick on-screen menu access
- Built-in stereo speakers for multimedia
- MultiView enables simultaneous dual connection and view
- Cable management reduces cable clutter for neat workspace
- LowBlue mode and Flicker-free easy-on-the eyes viewing
- Collaboration-ready webcam with noise-cancelling mic.
- Connect your notebook with one USB-C cable

### Superb Picture Quality

- VA display delivers awesome images with wide viewing angles
- CrystalClear images with UltraWide QHD 3440 x 1440 pixels
- Ultra Wide-Color wider range of colors for a vivid picture


# Monitor

LCD monitor

34E1C5600HE/27

## Highlights

### UltraWide CrystalClear images

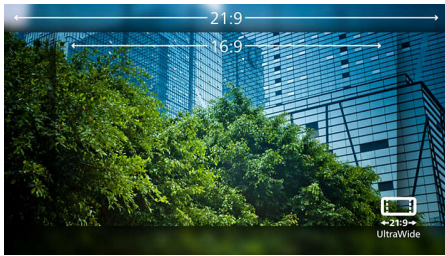

These Philips screens deliver CrystalClear, UltraWide Quad HD 3440 x 1440 pixel images. Utilizing high performance panels with high-density pixel count, 178/178 wide viewing angles, these new displays will make your images and graphics come alive. The UltraWide 21:9 format enables more productivity with more room for side-by-side comparisons and more viewable spreadsheet columns. Whether you are demanding professional requiring extremely detailed information for CAD-CAM solutions, or a financial wizard working on huge spreadsheets, Philips displays delivers CrystalClear images.

### Ultra Wide-Color Technology



Ultra Wide-Color Technology delivers a wider spectrum of colors for a more brilliant picture. Ultra Wide-Color wider "color gamut" produces more natural-looking greens, vivid reds and deeper blues. Bring, media entertainment, images, and even productivity more alive and vivid colors from Ultra Wide-Color Technology.

### USB-C connection



This Philips display features a USB type-C connector with power delivery. With intelligent and flexible power management, you can power

charge your compatible device directly. Its slim, reversible USB-C allows for easy, one-cable connection. You can watch high resolution video and transfer data at a super-speed, while powering up and re-charging your compatible device at the same time.

### Webcam & noise cancelling mic




This Philips monitor comes with a built-in 5MP webcam, noise-cancelling microphone, and speakers, making it perfect for working from home and collaborating remotely. It is equipped with advanced sensors that work seamlessly with Windows Hello facial recognition, allowing you to log into your Windows devices in less than 2 seconds. For added privacy, a physical camera switch lets you disable the webcam when not in use. The noise-cancelling microphone and dual 5-watt integrated speakers ensure clear communication.

### Built-in stereo speakers




A pair of high quality stereo speakers built into a display device. It can be visible front firing, or invisible down firing, top firing, rear firing, etc depending on model and design.

### MultiView technology

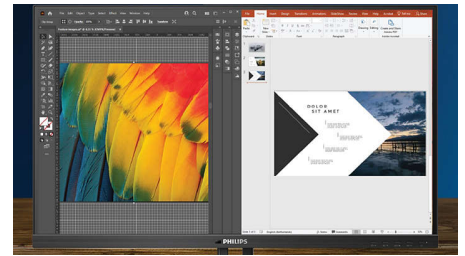

With the ultra-high resolution Philips MultiView display you can now experience a world of connectivity. MultiView enables active dual connect and view so that you can work with multiple devices like a PC and notebook simultaneously, for complex multi-tasking.

### Pop-up webcam

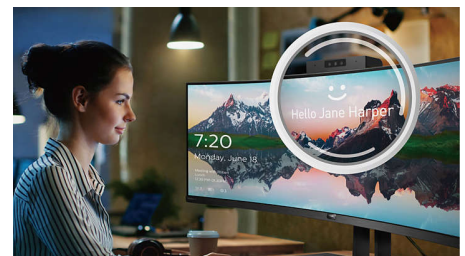

Philips' innovative and secure webcam pops up when you need it and securely tucks back into the monitor when you are not using it. The webcam is also equipped with advanced sensors for Windows Hello facial recognition, which conveniently logs you into your Windows devices in less than 2 seconds, 3 times faster than a password.

### LowBlue Mode & Flicker-free



Our LowBlue Mode and Flicker-free technology have been developed to reduce eye strain and fatigue often caused by long hours in front of a monitor.



WQHD



Ultra Wide Color



Noise cancellation



Built-in Speaker



Multiview



LowBlue Mode



EasySelect



Wide Viewing Angle

# Monitor

LCD monitor

34E1C5600HE/27

## Highlights

### EasySelect Menu Toggle Key




The discreetly placed EasySelect Menu Toggle Key allows you to make quick and easy adjustments to monitor settings in the On-Screen Display menu.

### Cable management



Cable management is an intimate design that maintains tidy workspace by organizing cables and wires required for the operation of a display device.

### VA display

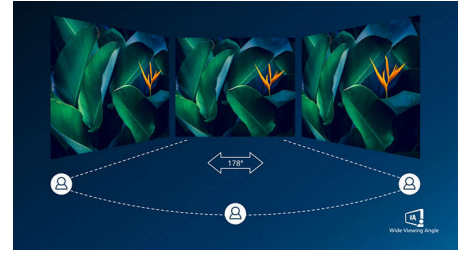

Philips VA LED display uses an advanced multi-domain vertical alignment technology which gives you super-high static contrast ratios for extra vivid and bright images. While standard office applications are handled with ease, it is especially suitable for photos, web-browsing, movies, gaming, and demanding graphical applications. It's optimized pixel management technology gives you 178/178 degree extra wide viewing angle, resulting in crisp images.



Flicker-free

# Specifications

## Picture/Display

**Panel Size:** 34 inch / 86.36 cm  
**Aspect ratio:** 21:9  
**LCD panel type:** VA LCD  
**Backlight type:** W-LED system  
**Pixel pitch:** 0.23175 x 0.23175 mm  
**Brightness:** 300 cd/m<sup>2</sup>  
**Display colors:** 16.7 M  
**Color gamut (typical):** NTSC 99.25%\*, sRGB 123.24%\*  
**Contrast ratio (typical):** 3000:1  
**SmartContrast:** Mega Infinity DCR  
**Response time (typical):** 4 ms (Gray to Gray)\*  
**Viewing angle:** 178° (H) / 178° (V), @ C/R > 10  
**Picture enhancement:** SmartImage game  
**Maximum resolution:** 3440 x 1440 @ 100 Hz\*  
**Effective viewing area:** 797.22 (H) x 333.72 (V) - at a 1500R curvature\*  
**Scanning Frequency:** 30 - 160 kHz (H) / 48 - 100 Hz (V)  
**sRGB**  
**Flicker-free**  
**Pixel Density:** 109.68 PPI  
**LowBlue Mode**  
**Display Screen Coating:** Anti-Glare, 3H, Haze 25%  
**MPRT:** 1 ms  
**EasyRead**  
**Adaptive sync**

## Connectivity

**Signal Input:** HDMI 2.0 x 1, DisplayPort 1.2 x 1, USB-C x 1 (DisplayPort Alt mode, data and Power Delivery)  
**Sync Input:** Separate Sync  
**Audio (In/Out):** Audio out  
**HDCP:** HDCP 1.4 (HDMI / DisplayPort / USB-C), HDCP 2.2 (HDMI / DisplayPort / USB-C)  
**USB Hub:** USB 3.2 Gen 1, USB-A downstream x 4 (with 1 fast charge B.C 1.2)

## Power Delivery

**Max power delivery:** USB-C: Up to 65W (5V/3A, 7V/3A, 9V/3A, 10V/3A, 12V/3A, 15V/3A, 20V/3.25A)  
**Version:** USB PD version 3.0

## Convenience

**Built-in Speakers:** 5 W x 2  
**Plug & Play Compatibility:** DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7  
**User convenience:** Power On/Off, Menu, Volume, Input, SmartImage Game  
**OSD Languages:** Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Simplified Chinese, Spanish, Swedish, Traditional Chinese, Turkish, Ukrainian  
**Other convenience:** Kensington lock, VESA mount (100x100mm)  
**MultiView:** PIP/PBP mode, 2x devices  
**Built-in webcam:** 5.0 megapixel camera with microphone and LED indicator  
**Noise cancellation**

## Stand

**Height adjustment:** 130 mm  
**Tilt:** -5/20 degree

## Power

**Power supply:** Internal, 100-240VAC, 50-60Hz  
**Off mode:** 0.3 W (typ.)  
**On mode:** 57.0 W (typ.)  
**Standby mode:** 0.5 W (typ.)  
**Power LED indicator:** Operation - White, Standby mode - White (blinking)

## Dimensions

**Product with stand (mm):** 808 x 557 x 281 mm  
**Product with stand in inch:** 31.8 x 21.9 x 11.1 inch  
**Packaging in mm (WxHxD):** 980 x 519 x 226 mm  
**Product without stand (mm):** 808 x 381 x 111 mm  
**Packaging in inch (WxHxD):** 38.6 x 20.4 x 8.9 inch  
**Product without stand in inch:** 31.8 x 15 x 4.4 inch

## Weight

**Product with packaging (kg):** 12.43 kg  
**Product with stand (kg):** 9.29 kg  
**Product with packaging (lb):** 27.35 lb  
**Product with stand (lb):** 20.44 lb  
**Product without stand (kg):** 7.16 kg  
**Product without stand (lb):** 15.75 lb

## Operating conditions

**Altitude:** Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)  
**Temperature range (operation):** 0 to 40 °C  
**MTBF:** 50,000 (excluding backlight) hour(s)  
**Relative humidity:** 20%-80 %  
**Temperature range (storage):** -20 to 60 °C

## Sustainability

**Environmental and energy:** RoHS  
**Recyclable packaging material:** 100 %  
**Specific Substances:** Mercury free, PVC / BFR free housing

## Compliance and standards

**Regulatory Approvals:** CB, CE Mark, CU-EAC, EAEU RoHS, FCC Class B, ICES-003, TUV/ISO9241-307, TUV-BAUART

## Cabinet

**Color:** Black  
**Finish:** Textured

## What's in the box?

**Cables:** HDMI cable, DisplayPort cable, USB-C to USB-C cable, Power cable  
**Monitor with stand**  
**User Documentation**



- \* Radius of the arc of the display curvature in mm
- \* The maximum resolution works for either HDMI input or DP input.
- \* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.
- \* Response time value equal to SmartResponse
- \* MPRT is to adjust brightness for blur reduction, so cannot adjust brightness while MPRT is turned on. To reduce motion blur, LED backlight will strobe synchronously with screen refresh, which may cause noticeable brightness change.
- \* MPRT is gaming-optimized mode. Turn on MPRT may cause noticeable screen flickering. It is recommended to turn off when you are not using the gaming function.
- \* NTSC Area based on CIE1976
- \* sRGB Area based on CIE1931
- \* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode
- \* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.
- \* The monitor may look different from feature images.