



Philips Signage Solutions
D-Line Display

65"

UHD (3840 x 2160)
500cd/m²

SignageSolutions



65BDL4510D

Say more

Smart, fast 24/7 display.

Make it stand out with a fast D-Line professional 4K UHD display. Philips' superb picture quality ensures true colours and intense contrast. You can effortlessly display content from multiple sources on a single screen.

Effortless setup. Total control.

- Operate, monitor and maintain with CMND & Control
- Schedule what you want, when you want with SmartPlayer

Cost-effective system solution

- FailOver ensures content is always playing
- Energy-saving automatic backlight control

Brilliant picture. Blazing processor speed.

- 4K UHD. Rich, deep images. Stunning contrast
- ADS wide-view panel display
- Place in landscape or portrait orientation

Operational flexibility

- SmartPower for energy saving

PHILIPS

D-Line Display
65" UHD (3840 x 2160), 500cd/m²


Highlights

CMND & Control



Run your display network over a local (LAN) connection. CMND & Control allows you to perform vital functions like controlling inputs and monitoring display status. Whether you're in charge of one screen or 100.

FailOver

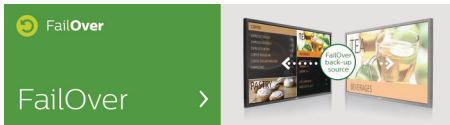


From waiting room to meeting room, never show a blank screen. FailOver lets your Philips Professional Display switch automatically between primary and secondary inputs ensuring content keeps playing even if the

primary source goes down. Simply set a list of alternate inputs to be sure your business is always on.

ADS wide-view panel display

Be seen from any angle with ADS wide-view technology. Advanced Super Dimension Switch delivers faster on-display picture processing for smoother content transitions, remarkable image accuracy, and superior colour reproduction with 180 degree viewing.

SmartPower

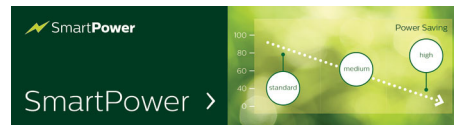

The backlight intensity can be controlled and pre-set by the system to reduce the power

65BDL4510D/96

consumption by up to 50%, which saves substantially on energy costs.

SmartPlayer



Turn your USB into a true cost effective digital signage device. Simply save your content (video, audio, pictures) on your USB and plug into your display. Create your playlist and schedule your content via the on screen menu, and enjoy your own created playlists anytime, anywhere.

Specifications

Picture/Display

- Diagonal screen size: 64.5 inch / 163.8 cm
- Panel resolution: 3840 x 2160
- Optimum resolution: 3840 x 2160 @60Hz
- Brightness: 500 cd/m²
- Contrast ratio (typical): 1200:1
- Aspect ratio: 16:9
- Response time (typical): 8 ms
- Pixel pitch: 0.372 x 0.372 mm
- Display colors: 1.07 Billion
- Viewing angle (H / V): 178 / 178 degree
- Dynamic contrast ratio: 500,000:1
- Panel technology: ADS
- Picture enhancement: 3/2 - 2/2 motion pull down, 3D Combfilter, 3D MA deinterlacing, Dynamic contrast enhancement, Motion compens. deinterlacing, Progressive scan

Connectivity

- Video input: HDMI 2.0 (x3), Display Port 1.2 (x1), DVI-I (x 1), USB 2.0 (x2)
- Video output: DisplayPort 1.2 (x1), HDMI 2.0 (x1)
- Audio input: 3.5 mm jack
- Audio output: 3.5mm jack
- Other connections: OPS
- External control: RJ45, RS232C (in/out) 2.5 mm jack, IR (in/out) 3.5 mm jack

Supported Display Resolution

Computer formats

Resolution	Refresh rate
1920 x 1080	60Hz
1680 x 1050	60Hz
1600 x 900	60Hz
1024 x 768	60Hz
1280 x 1024	60Hz
1280 x 720	60Hz
1440 x 900	60 Hz
3840 x 2160	30, 60Hz
640 x 480	60Hz
800 x 600	60Hz

Video formats

Resolution	Refresh rate
1080i	50, 60Hz
576p	50Hz
576i	50Hz
480p	60Hz
480i	60Hz
1080p	50, 60Hz

2160p	24, 30, 60Hz
720p	50,60 Hz

Dimensions

- Set dimensions (W x H x D): 1462.3 x 837.3 x 68.9 (@Wall mount)/ 89.9 (@Handle) mm
- Set dimensions in inch (W x H x D): 57.57 x 32.96 x 2.71 inch(wall mount)/3.54 (@Handle) inch
- Bezel width: 14.9 mm (Even bezel)
- Product weight (lb): 61.29 lb
- Product weight: 27.8 kg
- Wall Mount: 400 (H) x 400(V) mm, M6

Convenience

- Placement: Landscape (24/7), Portrait (24/7)
- Keyboard control: Hidden, Lockable
- Signal loop through: IR Loopthrough, DisplayPort, HDMI, RS232
- Network controllable: RJ45, RS232
- Screen saving functions: Pixel Shift, Low Bright
- Energy saving functions: Smart Power

Power

- Standby power consumption: <0.5 W
- Mains power: 100 ~ 240 VAC, 50 ~ 60 Hz
- Consumption (Typical): 135 W
- Consumption (Max): 290 W
- Energy Label Class: G

Operating conditions

- Temperature range (operation): 0 ~ 40 °C
- Temperature range (storage): -20 ~ 60 °C
- Altitude: 0 ~ 3000 m
- MTBF: 50,000 hour(s)
- Humidity range (operation)[RH]: 20 ~ 80% (without condensation)
- Humidity range (storage) [RH]: 5 ~ 95% (without condensation)

Sound

- Built-in speakers: 2 x 10W RMS

Accessories

- Included accessories: AC Power Cord, RS232 cable, Quick start guide, IR sensor cable (1.8M), Remote Control & AAA Batteries
- Included Accessories: Philips logo (x1), AC Switch

Cover, RS232 daisy-chain cable, Screws, USB Cover (x1)


Multimedia Applications

- USB Playback Audio: AAC, HEAAC, MPEG
- USB Playback Picture: BMP, JPEG, PNG
- USB Playback Video: MPEG, H.263, H.264, H.265, VP8

Miscellaneous

- On-Screen Display Languages: English, French, German, Spanish, Polish, Turkish, Russian, Italian, Simplified Chinese, Traditional Chinese, Arabic, Japanese, Danish, Dutch, Finnish, Norwegian, Portuguese, Swedish
- Regulatory approvals: CB, CE, BSMI, CCC, CU, EMF, FCC, Class A, PSB, RoHS, VCCI, EnergyStar 8.0, ETL
- Warranty: 3 year warranty

PHILIPS 65BDL4550D
Version 1.1
Revision Date: 2022/08/25

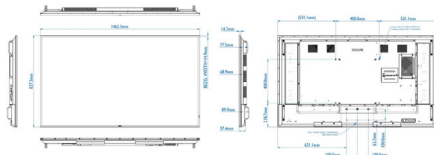

Issue date 2022-07-14

Version: 1.0.1

12 NC: 8670 001 68873
EAN: 87 12581 76900 0

© 2022 Koninklijke Philips N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips N.V.
or their respective owners.

www.philips.com