



Philips Evnia Gaming  
Monitor  
4K HDR display with  
Ambiglow

### Designed for Xbox

Evnia 7000  
32 (31.5"/80 cm diag.)  
3840 x 2160 (4K UHD)



329M1RV

## Optimised performance for next-gen console gaming

For true console gaming enthusiasts, the Designed for Xbox display delivers a new era of gaming. UltraClear 4K UHD with DisplayHDR 400 offers ultra-crisp and vibrant image quality to immerse you in the moment.

### Design to enhance the senses

- Ambiglow adds a new dimension to your viewing experience
- Enhanced audio with DTS Sound™
- 144 Hz refresh rates for ultra-smooth, brilliant images
- 120 Hz refresh rates for ultra-smooth, brilliant images

### Designed for Xbox

- Designed for Xbox for the optimal gaming experience
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming
- SmartImage HDR gives optimal viewing from your HDR content

### Features for gamers needs

- LowBlue mode and Flicker-free easy-on-the eyes viewing
- MultiView enables simultaneous dual connection and view
- USB-C one cable does it all
- 1 ms (MPRT) fast response for crisp images and smooth gameplay
- Access and display multiple sources on two devices

EVNIA

PHILIPS

4K HDR display with Ambiglow  
Designed for Xbox Evnia 7000, 32 (31.5"/80 cm diag.), 3840 x 2160 (4K UHD)

329M1RV/00

# Highlights

## Designed for Xbox



Unleash your console gaming. We partnered with the Xbox team to develop this Designed for Xbox display that is validated to deliver the optimal Xbox Series X visual performance the moment that you plug it in.

## AMD FreeSync™ Premium



Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation and low latency.

## 144 Hz Gaming



You play intense, competitive games. You demand a display with lag-free, ultra-smooth images. This Philips display redraws the screen


image up to 144 times per second, effectively 2.4x faster than a standard display. A lower frame rate can make enemies appear to jump from spot to spot on the screen, making them difficult targets to hit. With 144 Hz frame rate, you get those critical missing images on the screen, showing enemy movement in ultra-smooth motion so you can easily target them. With ultra-low input lag and no screen tearing, this Philips display is your perfect gaming partner

## MultiView and built-in KVM



Control and switch between two devices through a single keyboard and mouse with the built-in KVM. MultiView lets you survey both sources simultaneously on one screen. With these features, you can reduce cable clutter and save valuable time. Perfect for streamers with two PCs, content creators or when prepping devices for a LAN event.


## DTS Sound™

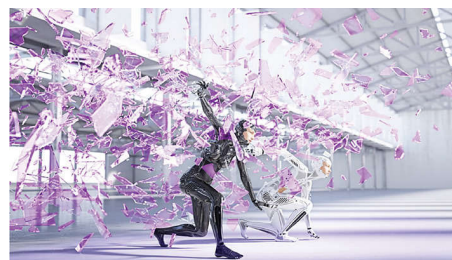

DTS Sound is an audio-processing solution designed to optimise the playback of music, movies, streaming and games on the PC regardless of form factors. DTS Sound enables an immersive virtual surround sound experience, complete with rich bass and

dialogue enhancement and maximised volume levels free of any clipping or distortion.

## Ambiglow

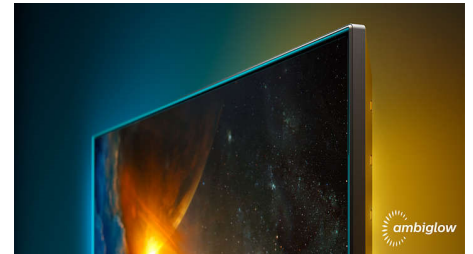

The innovative Ambiglow technology enhances the content on the screen by creating a halo of light from the monitor. Its fast processor analyses the incoming image content, continuously adapts the colour and brightness of the emitted light to match the image. Especially suited for watching movies, sports or playing games, Philips Ambiglow offers you a unique and immersive viewing experience.

## 1 ms MPRT fast response



MPRT (motion picture response time) is a more intuitive way to describe response time, which directly refers to the duration between seeing blurry noise and clean, crisp images. The Philips gaming monitor with 1 ms MPRT effectively eliminates smearing and motion blur and delivers sharper and more precise visuals to enhance your gaming experience. The best choice for playing thrilling and twitch-sensitive games.



# Specifications

## Connectivity

- Signal Input: HDMI 2.1 x 3, DisplayPort 1.4 x 1, USB-C x 1 (DP Alt mode, PD 65W)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- USB: USB-B x 1 (upstream), USB 3.2 x 4 (downstream with 2 fast charge B.C 1.2)

## Picture/Display

- Panel Size: 31.5 inch/80 cm
- Aspect ratio: 16:9
- LCD panel type: IPS technology
- Backlight type: W-LED system
- Pixel pitch: 0.181 x 0.181 mm
- Brightness: 500 cd/m<sup>2</sup>
- Display colours: Colour support 1.07 billion colours
- Colour gamut (typical): NTSC 113%\*, sRGB 124%\*, Adobe RGB 111%\*
- Contrast ratio (typical): 1000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 1 ms (Grey to Grey)\*
- Viewing angle: 178° (H)/178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: HDMI/DP: 3840 x 2160 @ 144 Hz\*; USB-C: 3840 x 2160 @ 120 Hz
- Effective viewing area: 697.344 (H) x 392.2344 (V) mm
- Scanning Frequency: HDMI: 30–135 kHz (H) / 48–144 Hz (V); DP: 30–254 kHz (H) / 48–144 Hz (V); USB-C: 30–254 kHz (H) / 48–120 Hz (V)
- sRGB
- Delta E: <math>\Delta E\_{2000}</math> (sRGB)
- Flicker-free
- Pixel Density: 139.87 PPI
- LowBlue Mode
- Display Screen Coating: Anti-Glare, 3H, Haze 25%
- SmartUniformity: 93 ~ 105%
- MPRT: 1 ms
- Low Input Lag
- AMD FreeSync™ technology: Premium
- HDR: DisplayHDR 400 certified
- Ambiglow: 4 sided
- HDMI 2.1 Feature: VRR, FRL

## Convenience

- Built-in Speakers: 5 W x 2, DTS Sound
- Plug and Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Input/Up, Game Settings/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian

- Other convenience: Kensington lock, VESA mount (100 x 100 mm)
- MultiView: PBP (2 x devices)
- KVM: USB-C, USB-B

## Stand

- Height adjustment: 130 mm
- Swivel: -/+ 20 degree
- Tilt: -5/15 degree

## Power

- Power supply: Internal, 100–240 VAC, 50–60 Hz
- Off mode: 0.3 W (typ.)
- On mode: 58.9 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - White, Standby mode - White (flashing)
- Energy Label Class: G

## Dimensions

- Packaging in mm (W x H x D): 800 x 526 x 224 mm
- Product without stand (mm): 715 x 428 x 78 mm
- Product with stand (max height): 715 x 596 x 297 mm

## Weight

- Product with packaging (kg): 16.67 kg
- Product with stand (kg): 11.63 kg
- Product without stand (kg): 7.80 kg

## Operating conditions

- Altitude: Operation: +12,000 ft (3658 m), Non-operation: +40,000 ft (12,192 m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50 000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: RoHS
- Recyclable packaging material: 100 %
- Specific Substances: Mercury free, PVC/BFR free housing

## Compliance and standards

- Regulatory Approvals: CB, TUV/ISO9241-307, TUV-BAUART, CU-EAC, EAEU RoHS, CE Mark

## Cabinet

- Colour: Black
- Finish: Textured/Glossy

## What's in the box?

- Cables: DP cable, HDMI cable, USB-C to C cable, Power cable
- Monitor with stand
- User Documentation

Issue date 2024-04-24

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Version: 9.0.2

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V.  
or their respective owners.

EAN: 87 12581 77248 2

[www.philips.com](http://www.philips.com)

\* "IPS" word mark / trademark and related patents on technologies belong to their respective owners.

\* The maximum resolution works for either HDMI input or DP input.

\* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.

\* Response time value equal to SmartResponse

\* MPRT adjusts the brightness for blur reduction, so the brightness cannot be adjusted while MPRT is turned on. To reduce motion blur, the LED backlight will strobe in time with the screen refresh rate, which may cause a noticeable change in brightness.

\* MPRT is a gaming-optimised mode. Turning on MPRT may cause noticeable screen flickering. It is recommended to turn this mode off when you are not using the gaming function.

\* NTSC Area based on CIE 1976

\* sRGB Area based on CIE1931

\* Adobe RGB Coverage based on CIE 1976

\* 2020 Advanced Micro Devices, Inc. All rights reserved. AMD, the AMD Arrow logo, AMD FreeSync™ and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.

\* The monitor may look different from feature images.