



Philips Monitor  
4K HDR display with  
Ambiglow

**Designed for Xbox**  
Momentum  
55" (139.7 cm)  
3840 x 2160 (4K UHD)



**559M1RYV**

## Optimized performance for next-gen console gaming

For true console gaming enthusiasts, the Designed for Xbox Momentum display delivers a new era of gaming. Level-up with sound by audio experts Bowers & Wilkins and new Ambiglow lighting for deeper immersion and overall gaming awesomeness.

### Designed for Xbox

- Smooth console gaming at 4K / 120Hz
- 4K / 144Hz PC gaming on the big screen
- Designed for Xbox for the optimal gaming experience
- Purpose-built for low latency gaming
- DisplayHDR 1000 for truly vivid details and realism
- AMD FreeSync™ Premium; tear free, stutter free, fluid gaming

### Features for gamers needs

- LowBlue mode and Flicker-free easy-on-the eyes viewing
- MultiView enables simultaneous dual connection and view
- USB-C one cable does it all

### Design for immersive entertainment

- Ambiglow adds a new dimension to your viewing experience
- Integrated Bowers & Wilkins speakers for immersive sound

# PHILIPS

4K HDR display with Ambiglow  
Designed for Xbox Momentum, 55" (139.7 cm), 3840 x 2160 (4K UHD)

# Highlights

## Designed for Xbox



Unleash your console gaming. We partnered with the Xbox team to develop this Designed for Xbox display that is validated to deliver the optimal Xbox Series X visual performance the moment you plug it in.

## 4K / 120Hz Console gaming



Game with ultra-clear 4K resolution at a smooth 120Hz refresh rate when you connect your Xbox Series X & other next-gen consoles via one of multiple HDMI 2.1 connections. A faster refresh rate ensures less skipped frames, showing enemy movement in ultra-clear, smooth motion to easily target them.

## 4K / 144Hz PC gaming



PC gamers who demand a true 4K gaming experience with the fastest refresh rate of

144Hz can now enjoy even smoother performance with the included connections.

## Low Latency Gaming



Unlike standard TVs, Philips Momentum gaming displays are purpose-built with low lag and lighting fast pixel response as a priority and supports fast-paced, reaction time-sensitive games. The display also provides variable refresh rate (VRR) support for Xbox Series X to achieve seamlessly smooth motion.

## VESA DisplayHDR 1000



VESA-certified DisplayHDR 1000 delivers a dramatically different visual experience vs. other 'HDR compatible' screens. Extreme deep blacks and bright whites contrast with brilliant colors, to bring out details that you've never experienced before. Gamers can spot enemies hiding the dark corners and shadows easily, and movie viewers can enjoy a more compelling and lifelike show. This Philips Momentum comes with several HDR modes, each optimized for your usage scenarios: HDR Game, HDR Movie, and HDR Photo.


559M1RYV/75

## AMD FreeSync™ Premium



Gaming shouldn't be a choice between choppy gameplay or broken frames. AMD FreeSync™ Premium equips serious gamers with a fluid, tear-free gameplay experience at peak performance. There are no compromises, game confidently with a high refresh rate, low framerate compensation, and low latency.

## Bowers & Wilkins speakers

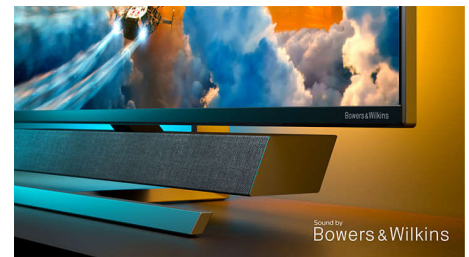

A new standard for gaming audio: covered by an acoustically transparent wool-blend Kvadrat material, the integrated speaker system by legendary speaker experts Bowers & Wilkins delivers an epic sound experience. With an integrated woofer, high-quality midrange drivers and tweeters, you can feel the action around you. This Philips Momentum display also offers True Sound audio modes specially tuned by Bowers & Wilkins: simply select an audio mode to optimize your gaming, viewing or listening experience.



# Specifications

## Connectivity

- Signal Input: HDMI 2.1 x 3, DP 1.4 x 1, USB-C x 1 (DP Alt mode, PD 65W)
- Sync Input: Separate Sync
- Audio (In/Out): Audio out
- EasyLink (HDMI-CEC): Remote control pass-through, System audio control, System standby
- USB:: USB-B x 1 (upstream), USB 3.2 x 4 (downstream with 2 fast charge B.C 1.2)

## Picture/Display

- Panel Size: 55 inch / 139.7 cm
- Aspect ratio: 16:9
- LCD panel type: VA LCD
- Backlight type: W-LED system
- Pixel pitch: 0.315 x 0.315 mm
- Brightness: Normal Mode: 750 cd/m<sup>2</sup>; HDR Mode: 1200 cd/m<sup>2</sup>
- Display colors: Color support 1.07 billion colors
- Color gamut (typical): NTSC 104%\*, sRGB 125%\*
- Color gamut (min.): DCI-P3 Coverage: 95%\*
- Contrast ratio (typical): 4000:1
- SmartContrast: Mega Infinity DCR
- Response time (typical): 4 ms (Gray to Gray)
- Viewing angle: 178° (H) / 178° (V), @ C/R &gt; 10
- Picture enhancement: SmartImage game
- Maximum resolution: HDMI / DP: 3840 x 2160 @ 144 Hz\*; USB-C: 3840 x 2160 @ 120 Hz
- Effective viewing area: 1209.6 (H) x 680.4 (V) mm
- Scanning Frequency: HDMI: 30 - 135 kHz (H) / 48 - 144 Hz (V); DP: 30 - 254 kHz (H) / 48 - 144 Hz (V); USB C: 30 - 254 kHz (H) / 48 - 120 Hz (V)
- sRGB
- Delta E: < 2 (sRGB)
- Flicker-free
- Pixel Density: 80 PPI
- LowBlue Mode
- SmartUniformity: 93 ~ 105%
- Low Input Lag
- Adaptive sync
- AMD FreeSync™ technology: Premium
- HDR: DisplayHDR 1000 certified
- Ambiglow: 3-sided
- HDMI 2.1 Feature: VRR

## Convenience

- Plug & Play Compatibility: DDC/CI, Mac OS X, sRGB, Windows 10 / 8.1 / 8 / 7
- User convenience: Power On/Off, Menu/OK, Input/Up, Sound Mode/Down, SmartImage game/Back
- OSD Languages: Brazil Portuguese, Czech, Dutch, English, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Simplified Chinese, Swedish, Turkish, Traditional Chinese, Ukrainian
- Other convenience: Kensington lock, VESA mount

- (200x200mm)
- MultiView: PBP (2x devices)

## Sound

- Output Power: 40 W (RMS), 2.1 Channel, Sound by Bowers & Wilkins
- Sound Enhancement: DTS Sound
- Speaker Configuration: 2 x tweeters, 10 W x 2 mid-high speakers, 20 W x 1 woofer

## Stand

- Tilt: -5/10 degree

## Power

- Power supply: Internal, 100-240VAC, 50-60Hz
- Off mode: 0.3 W (typ.)
- On mode: 95.3 W (typ.)
- Standby mode: 0.5 W (typ.)
- Power LED indicator: Operation - N.A., Off - Red, Standby - Red (breathing)

## Dimensions

- Packaging in mm (WxHxD): 1390 x 990 x 376 mm
- Product without stand (mm): 1232 x 715 x 102 mm
- Product with stand(max height): 1232 x 834 x 308 mm

## Weight

- Product with packaging (kg): 38.18 kg
- Product with stand (kg): 29.50 kg
- Product without stand (kg): 25.70 kg

## Operating conditions

- Altitude: Operation: +12,000ft (3,658m), Non-operation: +40,000ft (12,192m)
- Temperature range (operation): 0°C to 40°C °C
- MTBF: 50,000 (Excluded backlight) hour(s)
- Relative humidity: 20%-80 %
- Temperature range (storage): -20°C to 60°C °C

## Sustainability

- Environmental and energy: RoHS, Mercury Free
- Recyclable packaging material: 100 %

## Compliance and standards

- Regulatory Approvals: CB, CE Mark, TUV/ISO9241-307, TUV-BAUART, CU-EAC, EAEU RoHS, MEPS, RCM

## Cabinet

- Color: Black
- Finish: Textured / Glossy

## What's in the box?

- Accessory: Remote control



Issue date 2024-03-23

Version: 6.0.2

EAN: 87 12581 77700 5

© 2024 Koninklijke Philips N.V.  
All Rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

[www.philips.com](http://www.philips.com)

\* BT, 709 / DCI-P3 Coverage based on CIE1976

\* NTSC Area based on CIE1976

\* sRGB Area based on CIE1931

\* The maximum resolution works for either HDMI input or DP input.  
\* For best output performance, please always ensure that your graphic card is capable of achieving the maximum resolution and refresh rate of this Philips display.

\* Response time value equal to SmartResponse

\* For USB-C power and charging function, your Notebook/device must support USB-C standard Power Delivery specifications. Please check with your Notebook user manual or manufacturer for more details.

\* For Video transmission via USB-C, your Notebook/device must support USB-C DP Alt mode

\* The monitor may look different from feature images.